

## Neoteric Lighting Design



## 20137/20138WV


## **CAUTION - RISK OF FIRE**

for Model's

Installation of this fixture should be done by a licensed electrician or by a person familiar with local electrical codes and the construction and operation of this fixture.

**Warning** please make sure the electrical breaker is shut off before commencing with this installation Read and familiarize yourself with these instructions before commencing

This fixture is certified for wall mounting only and is suitable for Damp locations

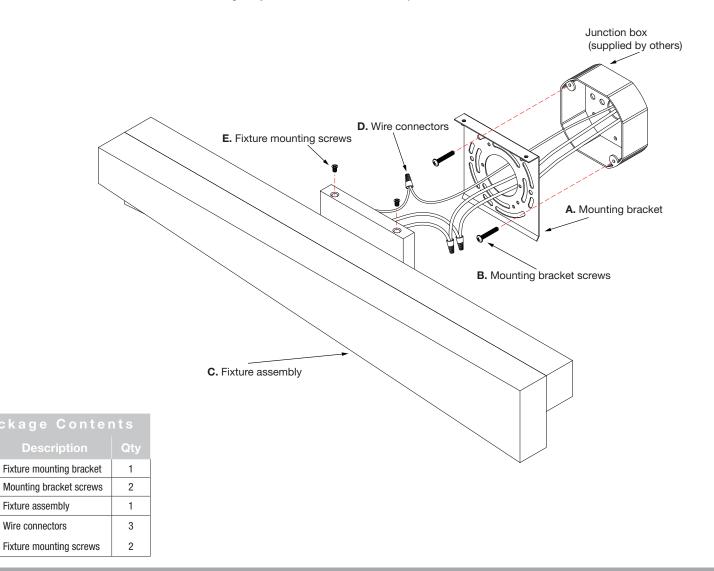

## Installing the fixture please ensure the electrical breaker is switched off before commencing

- 1 Attach and the Mounting bracket (A) to the Junction-Box with the two supplied Mounting bracket screws (B).
- Connect the supply wires to the fixture wires using the supplied electrical wire connectors (**D**). White supply wire to the White fixture wire, Black supply wire to Black fixture wire and the ground Bare Copper or Green wire to the Green fixture wire. Once the electrical wire connectors are securely fastened it is recommended to tape these connectors with electrical tape.
- Attach the fixture assembly (C) to the mounting bracket (A) by clipping the Fixture assembly (C) to the bottom of the Mounting bracket (A) and secure with supplied Fixture mounting screws (E)
- 4 Switch on the electrical breaker and your new fixture is ready for many years of trouble free use

Α

В

C

D

