


anony



186 St Helens Ave
Toronto, Ontario
M6H 4A1
+1 905 301 0306
sales@anony.ca



1. Disconnect power

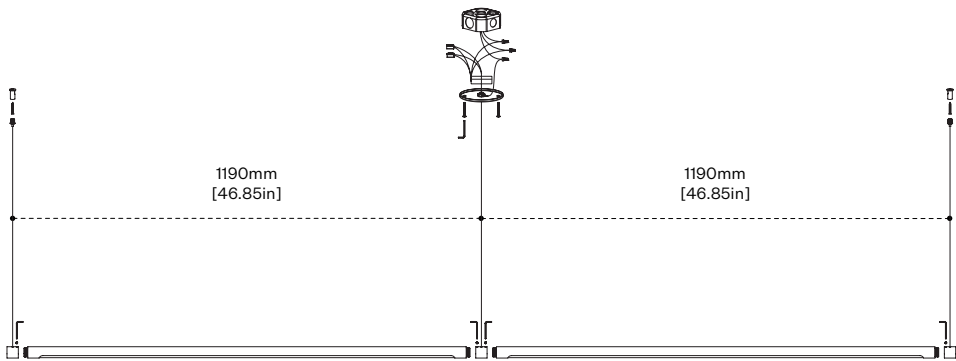

- 2. Layout points onto ceiling
- 3. Attach gripper bodies to ceiling
- 4. Connect wires to junction box
- 5. Screw canopy plate to junction box

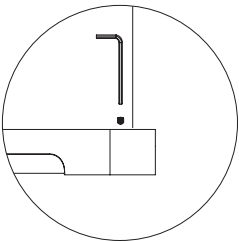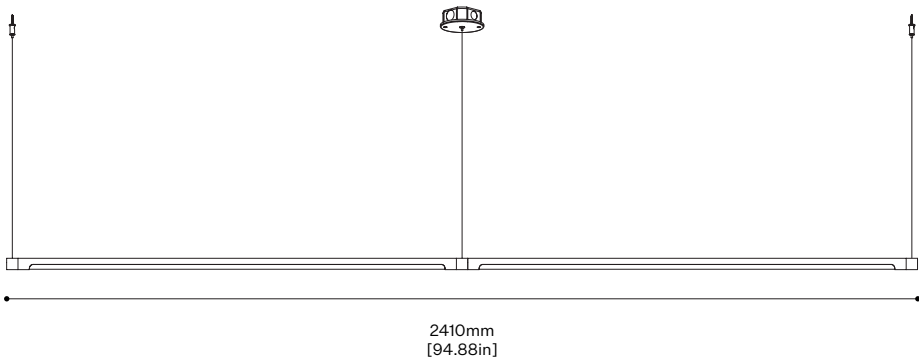

6. Connect & secure with set screws


*Dimming, use Electronic Low Voltage (ELV)

anony


186 St Helens Ave
Toronto, Ontario
M6H 4A1
+1 905 301 0306
sales@anony.ca



1. Disconnect power

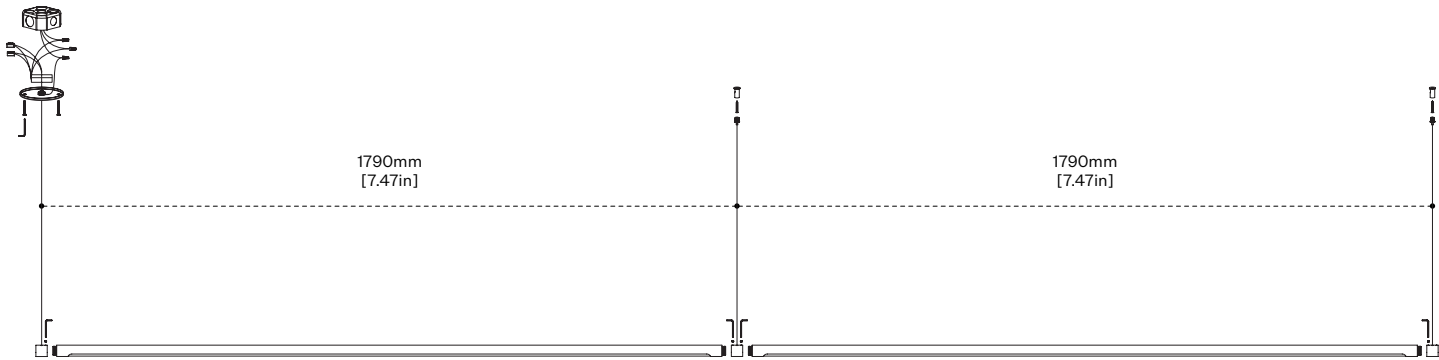

- 2. Layout points onto ceiling
- 3. Attach gripper bodies to ceiling
- 4. Connect wires to junction box
- 5. Screw canopy plate to junction box

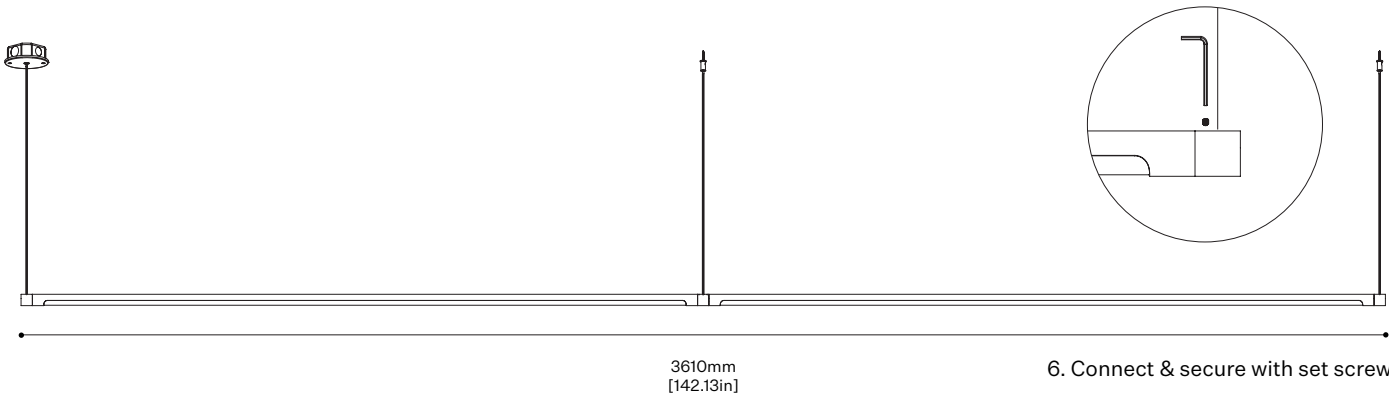

6. Connect & secure with set screws

*Dimming, use Electronic Low Voltage (ELV)