


# BLACK DIAMOND MODERN PATH LIGHT

## DESCRIPTION


The Black Diamond Modern Path Light is available without a lamp or with a G4 Wafer lamp (3W 2700K 120° beam spread 300 Lumens) to be installed. Simply install the lamp and screw on the glass lens. This modern fixture is a downward facing path light perfect for path, area, and garden accent lighting. This fixture comes in a black or bronze (BZ) baked enamel finish.

## BLACK DIAMOND MODERN PATH LIGHT


Use	<b>Path, Area, and Garden Accent Lighting</b>	
Finish	<b>Black or Bronze</b>	
Includes	<b>ABS Mounting Stake</b>	
Warranty	<b>10 Year Warranty on Black Diamond Fixtures</b>	
Order With Lamp	<b>G4 Wafer, 3W, 2700K</b>	BD-MPL-G4-WAFER BD-MPL-G4-WAFER-BZ
Order Without Lamp	<b>Fits G4 Bi-Pin</b>	BD-MPL-G4-WAFER-NL BD-MPL-G4-WAFER-BZ-NL

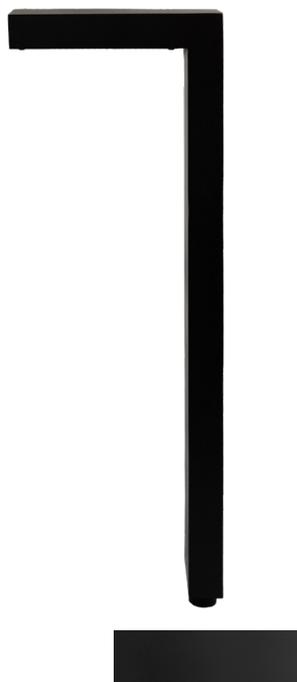

Black Brass  
Baked Enamel

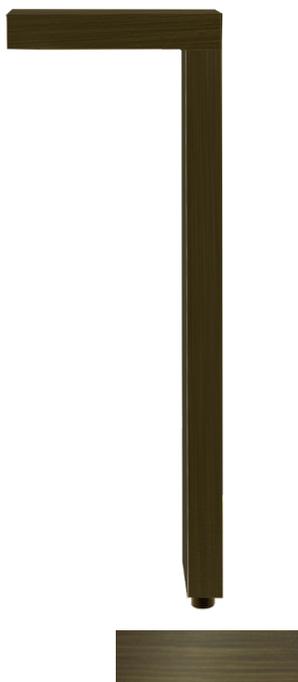

Bronze Baked  
Enamel (BZ)

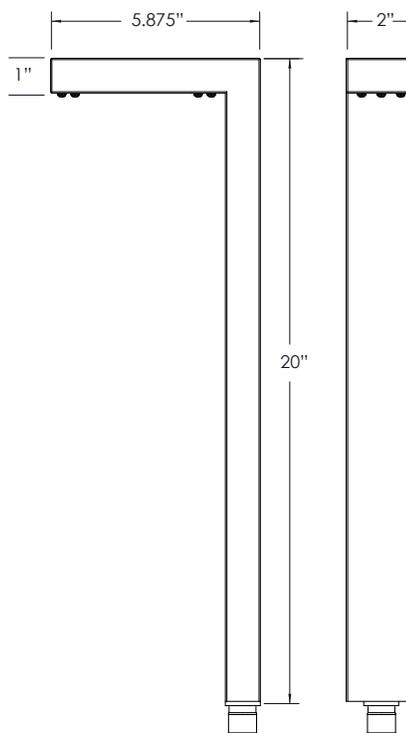



**BD-MPL-G4-WAFER**

**SOFT SOIL APPLICATIONS: INSTALLING THE GROUND STAKE & FIXTURE**

1. Connect the power cable from the fixture body to the landscape cable.
2. Lay the power cable into the slotted relief on the stake.
3. Press the fixture and stake into the ground.
4. Use a level to ensure the top of the stake is level with the ground.

**HARD SOIL APPLICATIONS: INSTALLING THE GROUND STAKE & FIXTURE**

1. Unscrew the fixture body from the stake.
2. Dig a hole approximately 4" wide by 10" deep and gently tap the stake into the ground with a rubber mallet.
3. Use a level to ensure the top of the stake is level with the ground.
4. Reinstall the fixture body onto the stake and lay the power cable into the slotted relief on the stake.
5. Connect the power cable from the fixture body to the landscape cable.

**INSTALLING THE LAMP**

1. Loosen the screw for the lens cover.
2. Install the G4 Wafer into the socket.
3. Place the lens cover back on the fixture body.
4. Tighten the screw for the lens cover.