


FURNITURE KNOB

1. Drill holes
2. Attach knob to door with screw.

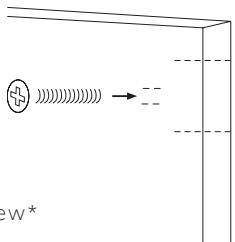


Contents

2x #8-32 x 1" screw*

*Fits doors & draws of max 0.6".

FURNITURE KNOB / PLATE

1. Pre-drill holes to prevent cracks. Drill template available to download from busterandpunch.com.
2. Attach handle to door with countersunk screws.
3. Attach coin caps to countersunk screws. Use coinscrew tool to tighten screws.

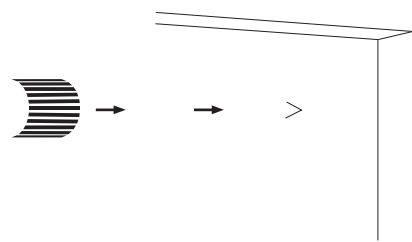

Contents

- 4x Countersunk screw* (+ 2 spare)
- 4x Coin cap
- 1x Coin cap installation tool**

* Fits doors & draws of 0.6" and thicker.

** Coinscrew tool **must be used by hand only**.



[BUSTERANDPUNCH.COM](http://busterandpunch.com)

BUSTER + PUNCH

HARDWARE
FURNITURE KNOB

US INSTRUCTIONS

CARE INSTRUCTIONS

Use mild detergent and soft damp cloth

