C31001 / C31002 / C31003

INSTALLATION INSTRUCTIONS SHEET

START FROM HERE

- Make sure power is completely off at the fuse box.
- Have your fixture installed by a qualified licensed electrician
- Prepare everything in clear area.
- Wear gloves at all times during this installation.
- Read instructions carefully before you start assembly.
- Keep this instruction sheet for future reference.


Technical Support:1-844-628-8368


Please Note:


- All Matteo Lighting fixtures come with pre-wired module(s).
- Unless instructed to do so, please do not touch any part of the module(s) as any unnecessary contact with the module could cause permanent damage.

THIS LUMINAIRE MUST BE MOUNTED OR SUPPORTED IN A JUNCTION BOX

CE LUMINAIRE DOIT ÊTRE MONTÉ OU SUPPORTÉ DANS UNE BOÎTE DE JONCTION

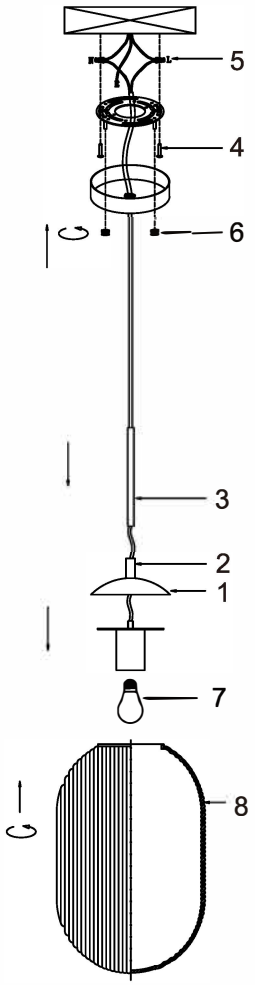

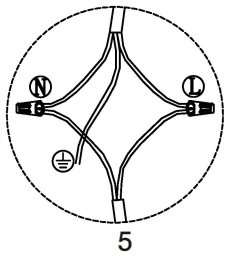

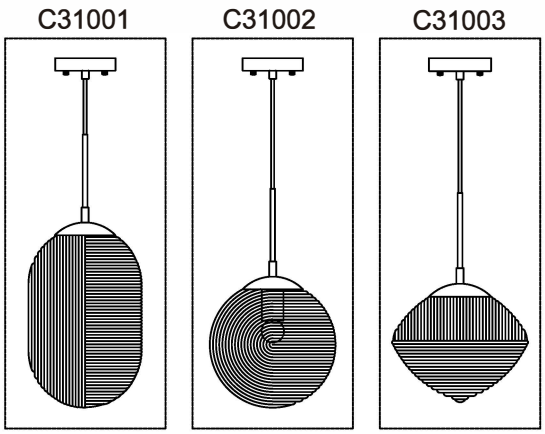

- Ensure main supply is switched off
- Install the disk, cap and rod together (1-3)
- Use M4 screws to fix the mounting bracket onto junction box (4)
- Connect wires according to colour (White to White, Black to Black), connect all earth lug together onto the crossbar with green screw to tight (5)
- Fix the canopy onto mounting bracket (6)
- Install the lamp (7)
- Put the glass onto the socket (8)
- Reconnect power
- Lamping: E26 60W Max*1pc (bulb not included)

WARNING:

- This fitting must be earthed.
- Disconnect power and allow fitting to cool down before cleaning or changing the lamp.

www.matteolighting.com
Toll Free. 1.844.628.8368 E. info@matteolighting.com

MATTEO