

C31907

INSTALLATION INSTRUCTIONS SHEET

START FROM HERE


- Make sure power is completely off at the fuse box.
- Have your fixture installed by a qualified licensed electrician
- Prepare everything in clear area.
- Wear gloves at all times during this installation.
- Read instructions carefully before you start assembly.
- Keep this instruction sheet for future reference.

Technical Support: 1-844-628-8368

Please Note:

- All Matteo Lighting fixtures come with pre-wired module(s).
- Unless instructed to do so, please do not touch any part of the module(s) as unnecessary contact with the module could cause permanent damage.

THIS LUMINAIRE MUST BE MOUNTED OR SUPPORTED IN A JUNCTION BOX
*CE LUMINAIRE DOIT ÊTRE MONTÉ OU SUPPORTÉ DANS UNE BOÎTE
DE JONCTION*

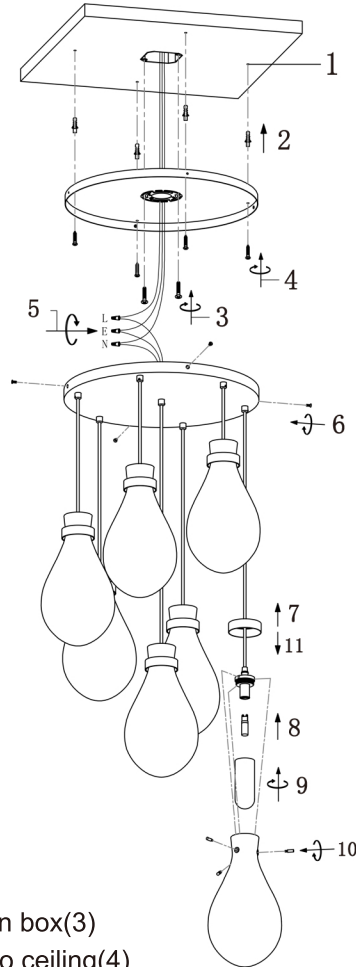

- Ensure main supply is switched off
- Drill the holes on the ceiling(1)
- Install the anchor expansions into the holes(2)
- Use M4 screws to fix the mounting bracket onto junction box(3)
- Use self-tapping screws to fix the mounting bracket onto ceiling(4)
- Connect wires according to colour (White to White, Black to Black). Connect all earth lug together onto the crossbar with green screw to tight(5)
- Use M4 screws to fix the canopy onto mounting bracket (6)
- Thread the glass holder through and keep it on the top of the socket(7)
- Install the lamps(8)
- Install the glass tubes(9)
- Use the pins to fix the glass shades onto light body(10)
- Put the glass holder down on the top of the glass(11)
- Reconnect power
- Lamping: G9 LED 10W Max (bulbs not included)

WARNING:

- This fitting must be earthed.
- Disconnect power and allow fitting to cool down before cleaning or changing the lamp.