



# CRYSTORAMA


LIGHTING THE WAY FOR SIXTY YEARS

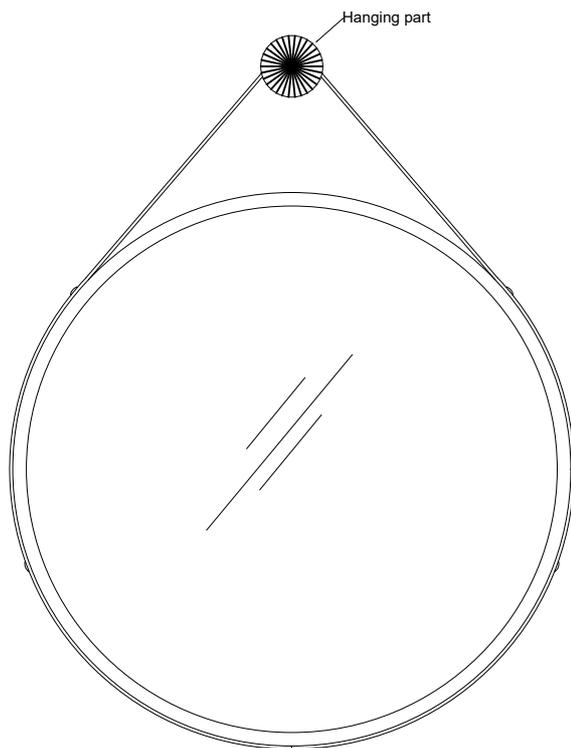

## ASSEMBLY INSTRUCTION MODEL #CAL-M224-LG

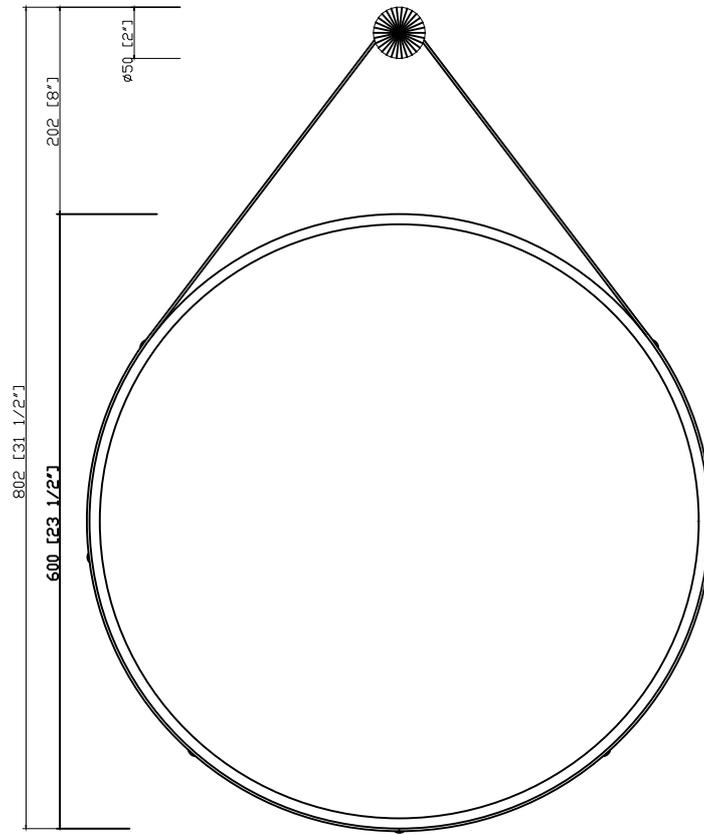

FRONT VIEW

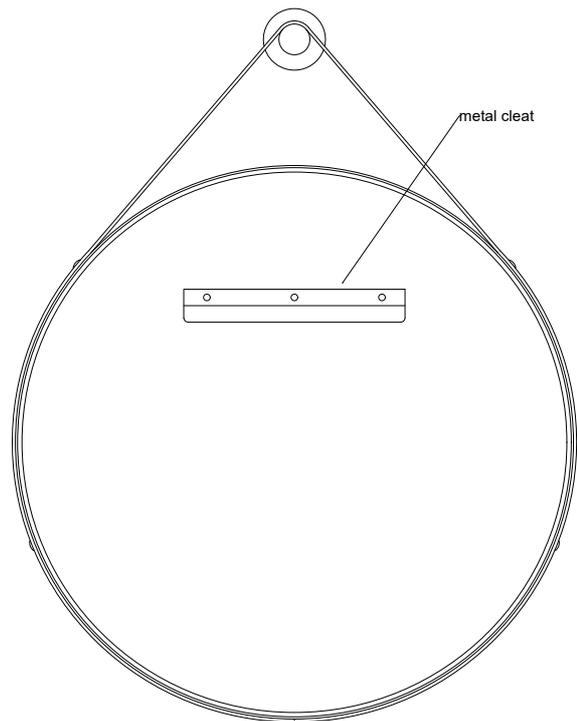

BACK VIEW



WARNING: This product can expose you to Lead, which is known to the State of California to cause cancer and/or birth defects or reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)

# CRYSTORAMA

LIGHTING THE WAY FOR SIXTY YEARS



ASSEMBLY INSTRUCTION MODEL #CAL-M224-LG

## INSTALLATION INSTRUCTIONS

### ITEMS INCLUDED


Anchor(A):   $\varnothing 7.5[\text{mm}] \times 36[\text{mm}] \times 4$

Wall cleat:  x1

Screws(B):   $\varnothing 4[\text{mm}] \times 40[\text{mm}] \times 4$


Hanging kit:  x1

### NECESSARY TOOLS (NOT INCLUDED)

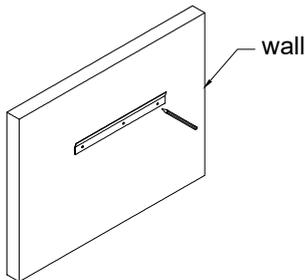


#### Step 1

Place the metal cleat at the desired wall location and mark three points at the center of the hole on the metal cleat using the pencil.

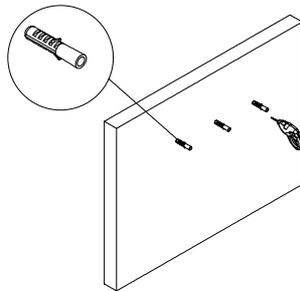

#### Step 2

Drill the holes at the marked points and insert the anchors into the hole.

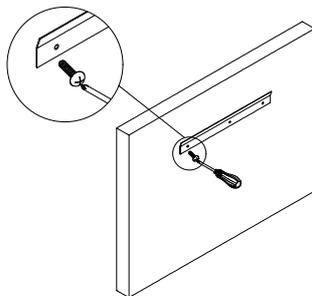


#### Step 3

Mount the metal cleat onto the wall surface using the screws supplied. Make sure that the metal cleat is straight using a level.

#### Step 4

Carefully lift from the mirror frame sides and hang onto the metal cleat

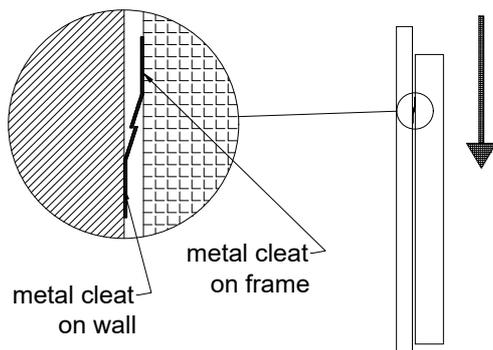

#### Step 5

- 1) Remove the cap from the stud of the hanging kit and hang the belt over the stud and pull it up taut. Insert the pencil through the stud while push it against the wall. Mark a point on the wall surface .
- 2) Take the mirror and stud off the wall and drill the hole at the marked point. Insert the wall anchor into the hole. Put the stud back onto the wall and secure with the anchor screw.
- 3) Hang the belt of the mirror over the stud and the mirror frame onto the metal cleat. Screw the cap back onto the stud.

