


LIGHTING THE WAY FOR SIXTY YEARS


ASSEMBLY INSTRUCTION MODEL#CAR-9201-BK


Drawing (1)

For hanging

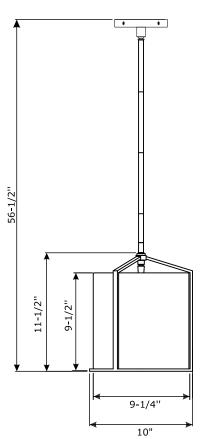

For ceiling

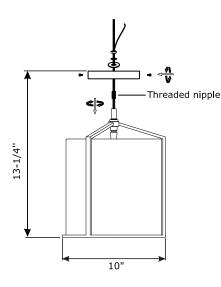

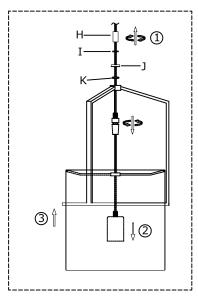

Drawing (3)

Shade replacement:

- Remove the Spacer, knurled nut, check ring and hex nut, in that order, from the top of frame.
- 2. Take the shade and light cluster out of the metal frame.
- Put the new shade in the frame and pass the threaded nipple on top of the light cluster through the hole on the top of frame. Secure with hex nut.
- Place the check ring over the hex nut and secure it with the knurled nut and Spacer.

WARNING:





Electrical Danger

Turn Power off

All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.





You will need 1- Medium Base Bulb

60 Watts Recommended 100 Watts Max. USE LED BULBS FOR EXTENDED USE

THIS FIXTURE IS DRY RATED


How to install for hanging:

- 1. Determine the desired hanging height and choose the correct length of rod.
- Feed fixture wires through the rod and canopy. Connect the rods together and then screw the canopy onto the top of rods.
- 3. The canopy of the fixture can now be mounted to the ceiling by following instruction **Drawing 2.**
- 4. Install the Bulb into the Socket.


How to install for Ceiling

- 1. Remove the swivel from the canopy.
- 2. Screw the threaded nipple from one of rods to the top of frame.
- 3. Place the canopy over the top of the threaded nipple. Secure it with the hex nut.
- The canopy of the fixture can now be mounted to the ceiling by following instruction **Drawing 2**.

Drawing (2)

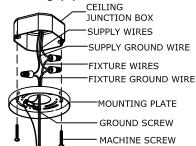


WARNING: This product can expose you to Lead which is known to the state of California to cause cancer and/or birth defects or reproductive harm. For more information go to www.P65Warnings.ca.gov



LIGHTING THE WAY FOR SIXTY YEARS

ASSEMBLY INSTRUCTION MODEL#CAR-9201-BK

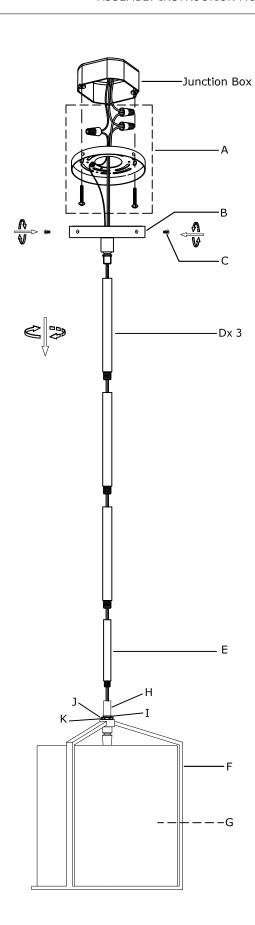

Part Number

Part Numbers

- A. (1)-Mounting hardware
- B. (1)-Canopy W5"x H3/4"(XFW9201BKCAN5IN)
- C. (3)- Canopy Screw
- D. (3)-Long Rod W1/2"x H12" (XFW9201BKROD12IN)
- E. (1)-Short Rod W1/2"x H6" (XFW9201BKROD6IN)
- F. (1)-Metal Frame
- G. (1)-Shade W9-1/4"x H9-1/2"(XFW9201BKSHA9.25IN)
- H. (1)-Spacer
- I. (1)-Knurled nut
- J. (1)-Check ring
- K. (1)-Hex nut