

Installation Instructions for Crystal Spirit Suspension


IMPORTANT INFORMATION

- This product is suitable for indoor locations.
- This product can mount to either a 4" square electrical box with round plaster ring or an octagon electrical box.
- This product is dimmable with a standard incandescent dimmer.

SAVE THESE INSTRUCTIONS!





Install the fixture

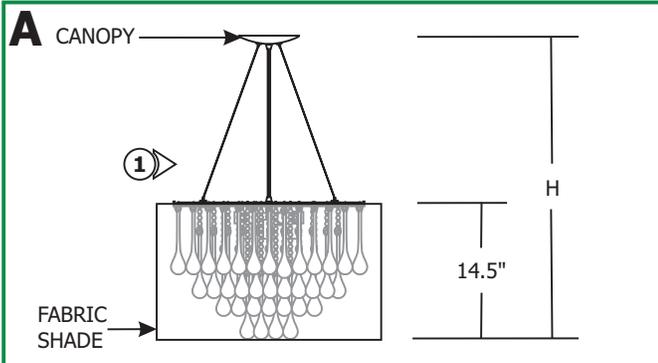


- 1:** Determine the desired fixture height (H), from the bottom of the fabric shade to the top of the canopy.

- 2:** Slide the canopy up and down by pushing the tab on each aircraft cable grip until desired height is achieved. Release the tab to lock the aircraft cable in place.
- 3:** Loosen the M3 set screws on each strain relief with a 1.5mm Allen wrench.
- 4:** Slide the strain relief down the aircraft cable behind the cable grip.

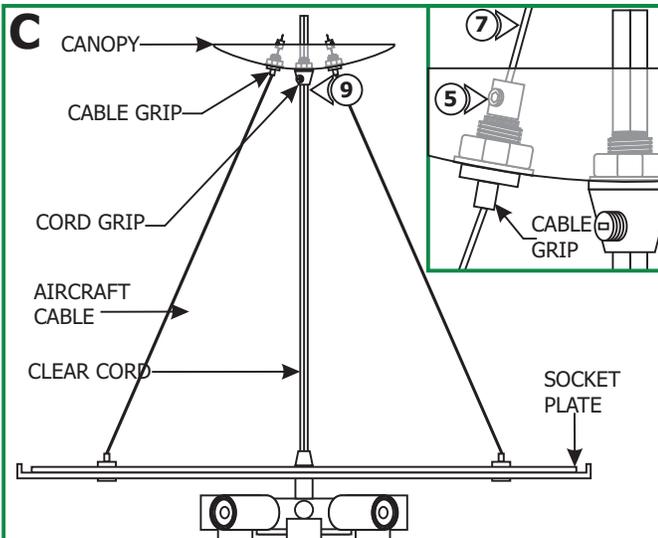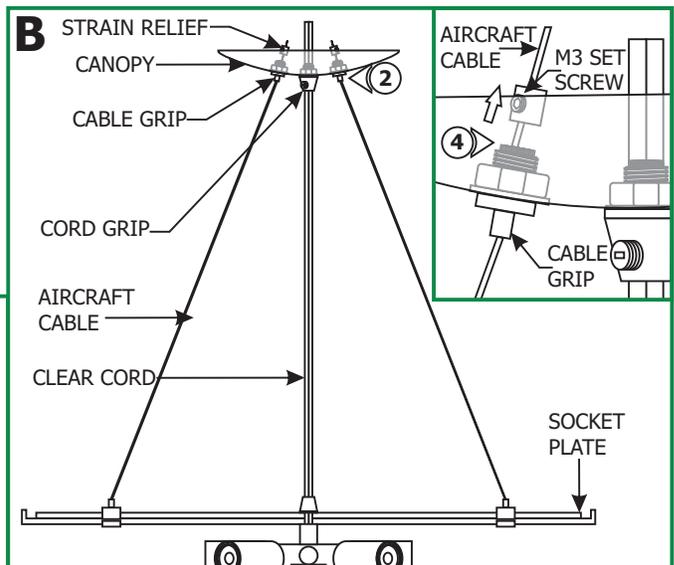



- 5:** Tighten the set screws on each strain relief.
- 6:** Repeat steps 4 and 5 for remaining strain reliefs.
- 7:** Trim off excess aircraft cable behind the strain reliefs with a sharp cutter.
- 8:** Loosen the slotted set screw on the cord grip and push the excess clear cord into the canopy.
- 9:** Tighten the slotted set screw on the cord grip to lock the clear cord in place.

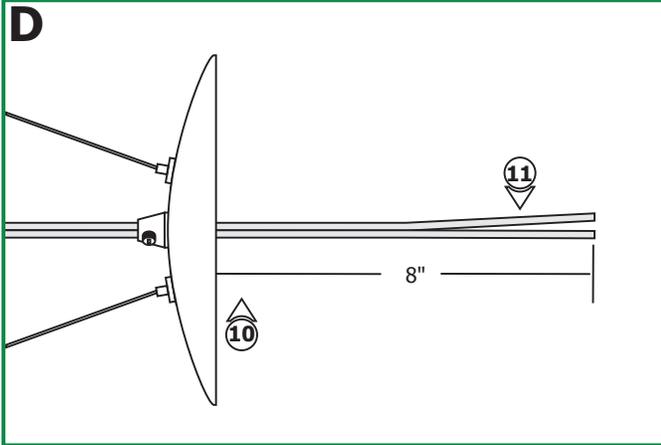

10: Leave 8" of the clear cord exposed behind the canopy for power connection. Trim off the excess clear cord.

11: From the end of the clear cord, separate the wires from the cord web for 4" and strip the ends.

12: Mount the crossbar assembly to the electrical box holes with the two #8-32 screws provided.

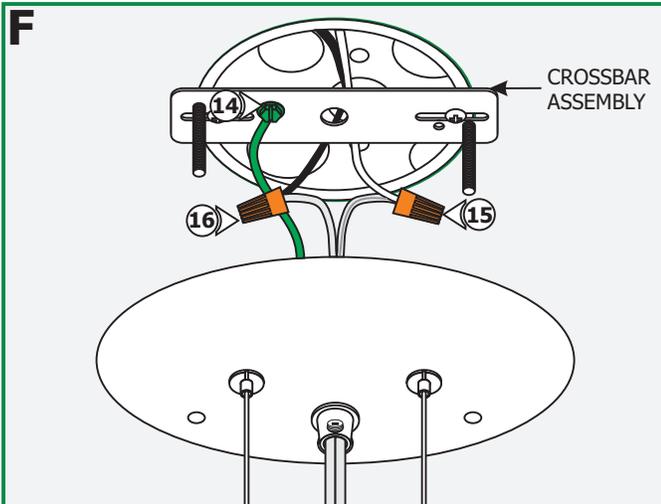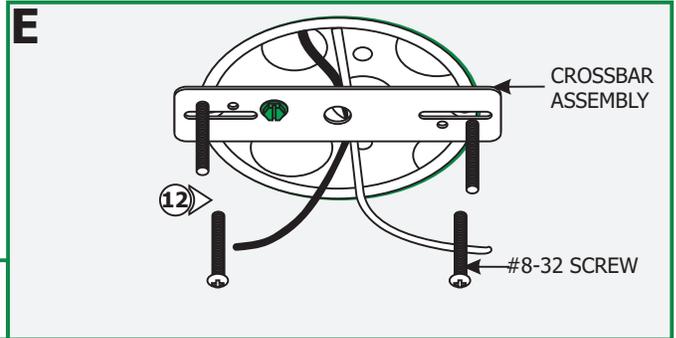

NOTE: It is recommended a person to hold the fixture while the electrician connects the power to the fixture.

13: Make sure the power to the electrical box is off.


14: Make sure that the canopy is grounded in accordance with local electrical codes.

15: Connect the grooved surface clear wire to the neutral power wire with a wire nut.


16: Connect the smooth surface clear wire to the hot power wire with a wire nut.

17: Place all wires and wire nut connections inside the canopy.

18: Align and slide the canopy holes onto the threaded studs. While holding the canopy, tighten the two thumb nuts to secure the canopy in place.

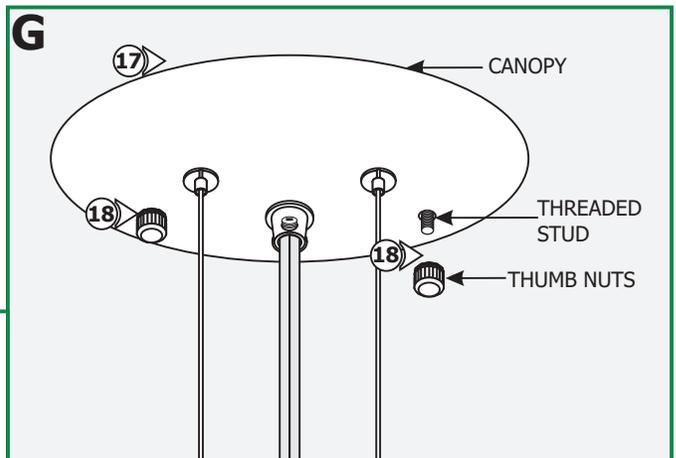

Install the Lamps & Crystals


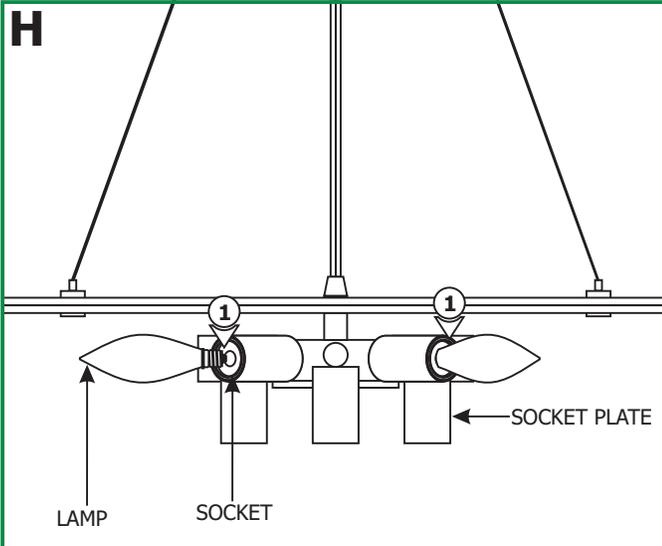


CAUTION: To reduce risk of a burn or electrical shock during lamping, disconnect the power to the fixture.

Use **MAX 60** Watt Type E12 base, Torpedo Style Candelabra Base Lamp For Each Socket.




1: For each socket, screw the lamp completely into the socket.

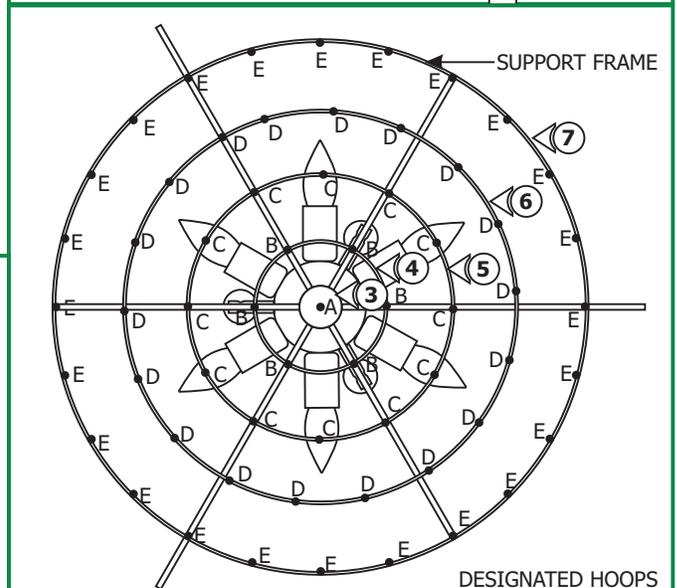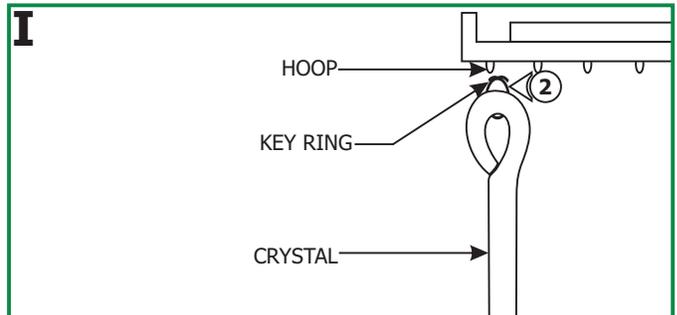


NOTE: Follow step 2 to install all crystals. Follow steps 3 through 7 to install the crystals in correct position and orientation.

- 2:** To install a crystal, squeeze the key ring to open the end. Slide the end through the designated hoop and rotate it inside the hoop to lock in place.
- 3:** Install the crystal marked "A" into the center hoop in the center of the socket plate.
- 4:** Install each crystal marked "B" into the hoops of the first support frame from the center of the fixture.
- 5:** Install each crystal marked "C" into the hoops of the second support frame from the center of the fixture.
- 6:** Install each crystal marked "D" into the hoops of the third support frame from the center of the fixture.
- 7:** Install each crystal marked "E" into the hoops of the fourth support frame from the center of the fixture.

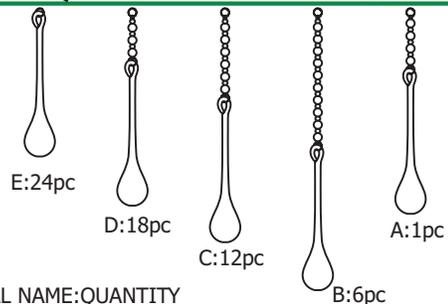


CRYSTAL NAME:QUANTITY

B:6pc

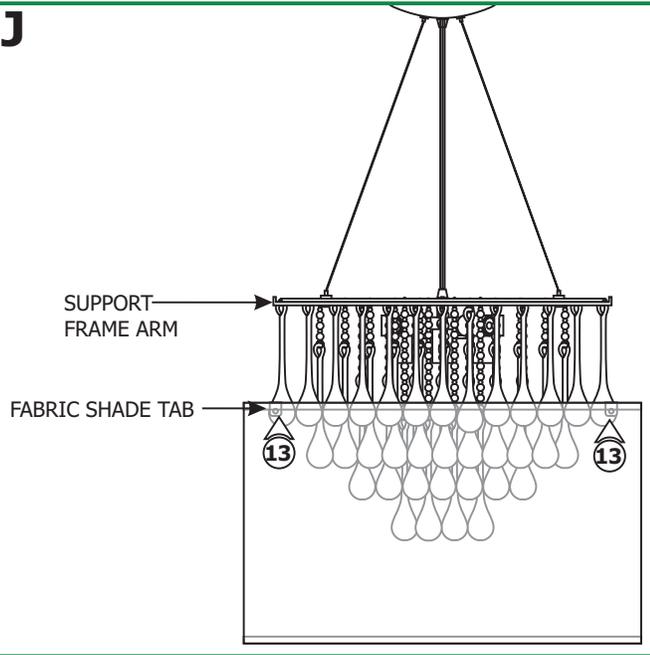J

13: Slide the fabric shade from the bottom of the chandelier up. Align and set the shade tab holes onto the support arm ends.

Replacing the Lamp

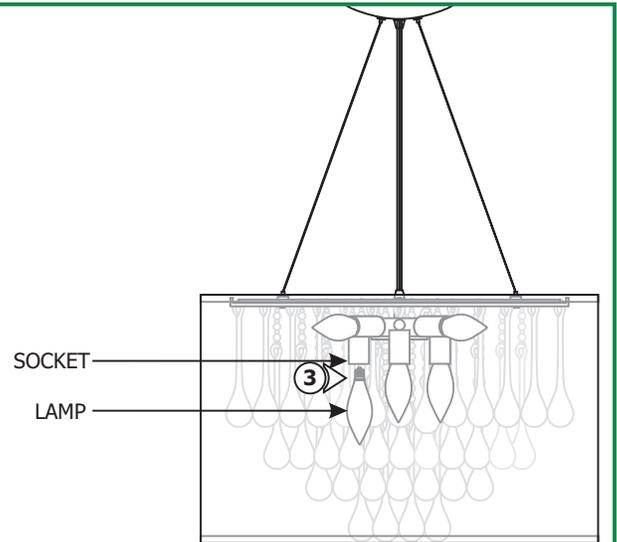K

- 1:** Reach the burnt lamp through the crystals.
- 2:** Loosen and remove the burnt lamp.
- 3:** Screw the new lamp completely into the socket holes.