



CONTENTS

Updated 02OCT2019

(x1) Lighting Assembly

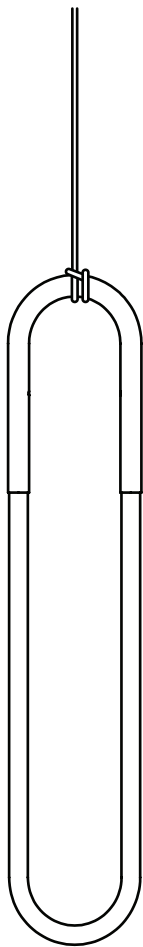


(x1) Crossbar assembly

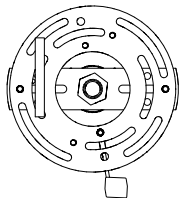


(x1) Driver




(x1) Canopy

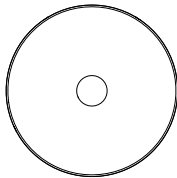


(x2) 8-32 Screw




(x1) Strain relief




(x2) Toggle anchor
On 240V fixtures only



(x2) Metal screw
On 240V fixtures only



(x2) Wood screw
On 240V fixtures only



(x2) Long 8-32 screw
On 240V fixtures only



SAFETY INFORMATION


Only suitable for direct mounting on non-combustible surfaces.
Under no circumstances can Rudi Pendants be mounted on normally flammable surfaces.
Suitable for dry, indoor use only.
Maximum ambient temperatures: 25° C

RUDI INSTALLATION

Updated 02OCT2019

Note: Please contact a licensed electrician. Make sure all power is off before beginning installation


1. Remove the collar (A) from the crossbar assembly (B). Then Feed the drop cable (C) through the collar (A), canopy (D) and the crossbar assembly (B).
2. Zip tie (E) the cable to the crossbar as shown below, and then crimp the strain relief (F) onto the cable right above the nipple.
3. Connect the LED output wires from the driver to the fixture cable using the two provided Wago connectors (G).
4. Connect the ground (H) from the junction box (I) to the crossbar using the provided Wago connector.
5. Connect the wires from the junction box (I) to the AC inputs from the driver using the two provided Wago connectors (J)
6. Lay the driver (K) into the canopy (D) and then connect the crossbar (B) to the junction box (I) using the two 8-32 screws (L).
- 240V VERSION: Use the provided Toggle anchors and screws as necessary to secure the fixture to the ceiling.
7. Bring the canopy up and hold it in place by threading the collar (A) onto the crossbar (B).

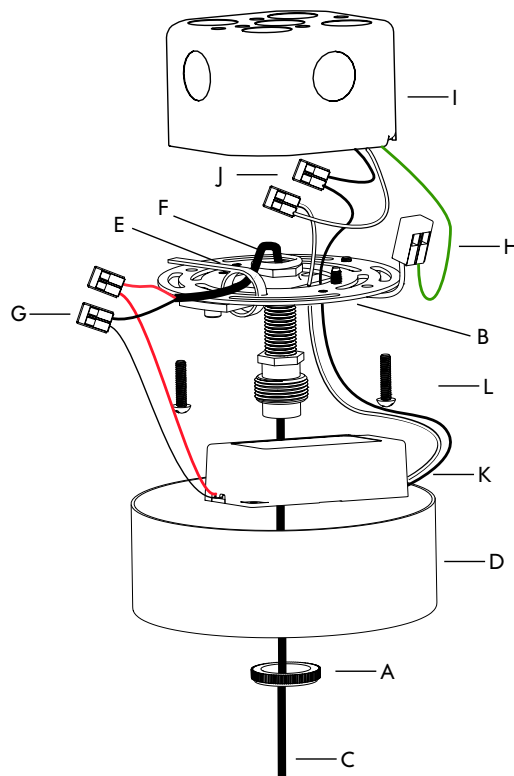


CONTENTS

Updated 02OCT2019


(x1) Lighting Assembly

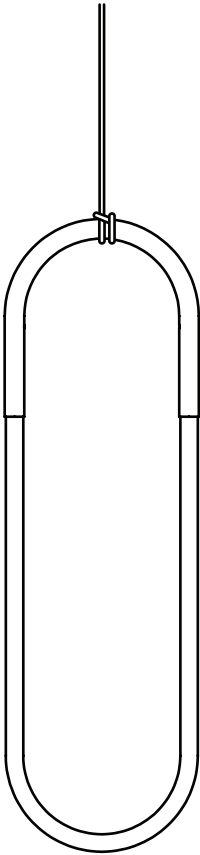


(x1) Crossbar assembly

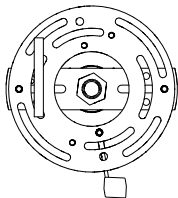


(x1) Driver




(x1) Canopy

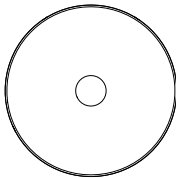


(x2) 8-32 Screw




(x1) Strain relief




(x2) Toggle anchor
On 240V fixtures only



(x2) Metal screw
On 240V fixtures only



(x2) Wood screw
On 240V fixtures only



(x2) Long 8-32 screw
On 240V fixtures only



SAFETY INFORMATION


Only suitable for direct mounting on non-combustible surfaces.
Under no circumstances can Rudi Pendants be mounted on normally flammable surfaces.
Suitable for dry, indoor use only.
Maximum ambient temperatures: 25° C

RUDI INSTALLATION

Updated 02OCT2019

Note: Please contact a licensed electrician. Make sure all power is off before beginning installation


1. Remove the collar (A) from the crossbar assembly (B). Then Feed the drop cable (C) through the collar (A), canopy (D) and the crossbar assembly (B).
2. Zip tie (E) the cable to the crossbar as shown below, and then crimp the strain relief (F) onto the cable right above the nipple.
3. Connect the LED output wires from the driver to the fixture cable using the two provided Wago connectors (G).
4. Connect the ground (H) from the junction box (I) to the crossbar using the provided Wago connector.
5. Connect the wires from the junction box (I) to the AC inputs from the driver using the two provided Wago connectors (J)
6. Lay the driver (K) into the canopy (D) and then connect the crossbar (B) to the junction box (I) using the two 8-32 screws (L).
- 240V VERSION: Use the provided Toggle anchors and screws as necessary to secure the fixture to the ceiling.
7. Bring the canopy up and hold it in place by threading the collar (A) onto the crossbar (B).

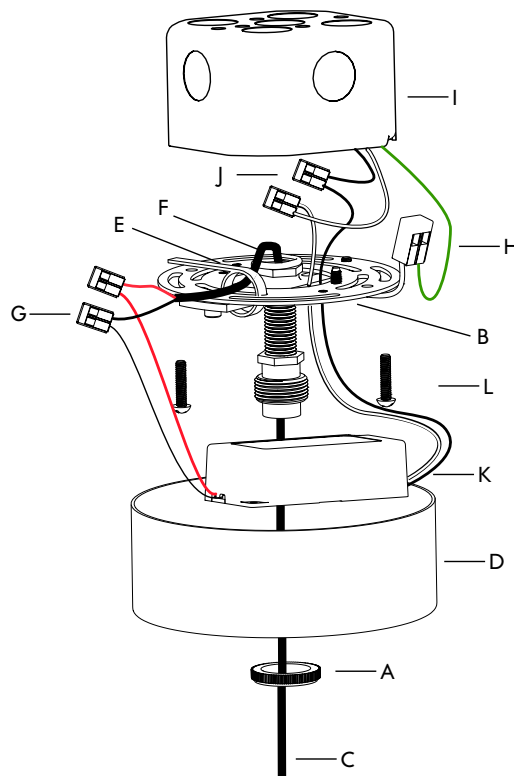


CONTENTS

Updated 02OCT2019


(x1) Lighting Assembly

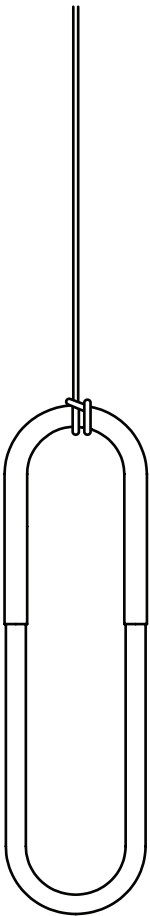


(x1) Crossbar assembly

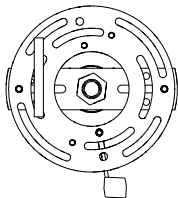


(x1) Driver




(x1) Canopy

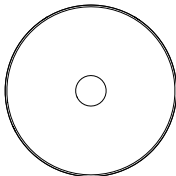


(x2) 8-32 Screw




(x1) Strain relief




(x2) Toggle anchor
On 240V fixtures only



(x2) Metal screw
On 240V fixtures only



(x2) Wood screw
On 240V fixtures only



(x2) Long 8-32 screw
On 240V fixtures only



SAFETY INFORMATION

Only suitable for direct mounting on non-combustible surfaces.
Under no circumstances can Rudi Pendants be mounted on normally flammable surfaces.
Suitable for dry, indoor use only.
Maximum ambient temperatures: 25° C

RUDI INSTALLATION

Updated 02OCT2019

Note: Please contact a licensed electrician. Make sure all power is off before beginning installation

1. Remove the collar (A) from the crossbar assembly (B). Then Feed the drop cable (C) through the collar (A), canopy (D) and the crossbar assembly (B).
2. Zip tie (E) the cable to the crossbar as shown below, and then crimp the strain relief (F) onto the cable right above the nipple.
3. Connect the LED output wires from the driver to the fixture cable using the two provided Wago connectors (G).
4. Connect the ground (H) from the junction box (I) to the crossbar using the provided Wago connector.
5. Connect the wires from the junction box (I) to the AC inputs from the driver using the two provided Wago connectors (J)
6. Lay the driver (K) into the canopy (D) and then connect the crossbar (B) to the junction box (I) using the two 8-32 screws (L).
- 240V VERSION: Use the provided Toggle anchors and screws as necessary to secure the fixture to the ceiling.
7. Bring the canopy up and hold it in place by threading the collar (A) onto the crossbar (B).

