## LED Wallsconce

## WS83218 INSTALLATION SHEET

## START FROM HERE


- Make sure power is completely off at the fuse box.
- Have your fixture installed by a qualified licensed electrician
- Prepare everything in a clear area.
- Wear gloves at all times during this installation.
- Read instructions carefully before you start assembly.
- Keep this instruction sheet for future reference.

Technical Support: 1-855-855-8926

- Remove the fixture from its original packaging. Next, remove the mounting plate (1c) from within the canopy (2b) by removing the screws (2a). Secure the mounting bar (1c) to the electrical junction box (1a) with screws (1d) provided in the hardware package.
- You are now ready to mount the canopy to the mounting bar. First connect all wires (1b) correctly black to black "L", white to white "N" and the ground wire with provided marrettes from the hardware package. Push the canopy (2b) towards the mounting plate (1c) so the holes in the canopy and the mounting plate align. Next, attach the screws (2a) and secure the canopy to the mounting plate.
- **3.** You have now completed the installation of your fixture, enjoy.

## Please Note:

- All Kuzco LED fixtures come with pre-wired LED module(s).
- Unless instructed to do so, please do not touch any part of the LED module(s) as any unnecessary contact with the module could cause permanent damage.
- For dimming, an ELV (Electronic Low Voltage) type of dimmer is required.

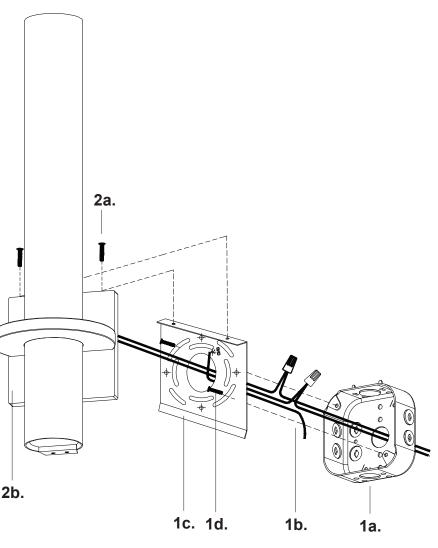

K U Z C C Canada V3Z 6M3 19054 28th Avenue Surrey, BC Canada V3Z 6M3 T: 604 538 7162 TF: 1-855 85 KUZCO F: 604 538 7196 W: kuzcolighting.com

20181030