

ASSEMBLY INSTRUCTION MODEL #LAY-301-LG



All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.





You will need 1 - 3.5 Watts G9 LED bulb included


THIS FIXTURE IS Damp RATED

How to Install

1. Remove the mounting plate from the backplate. Install the mounting plate to the outlet box using two outlet box screws.
2. Install the back plate onto the mounting plate using the ball nuts.
3. Install the bulb onto the socket.
4. Slide the glass shade over the socket and hang it onto the hook on the backplate and sit inside the bottom font.
5. The bottom font can be moved upwards or downwards to allow the font to fully cover the bottom of the glass shade.

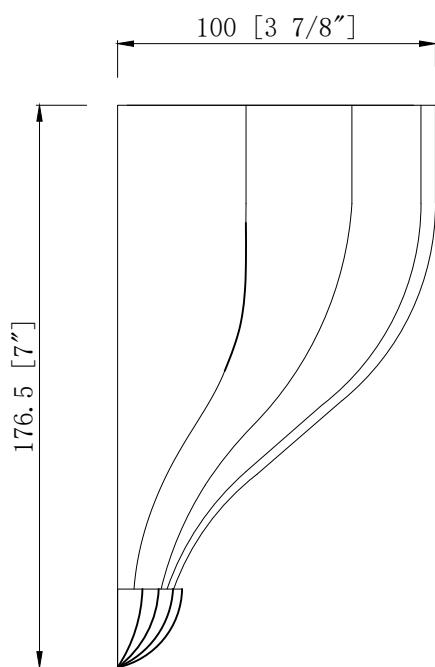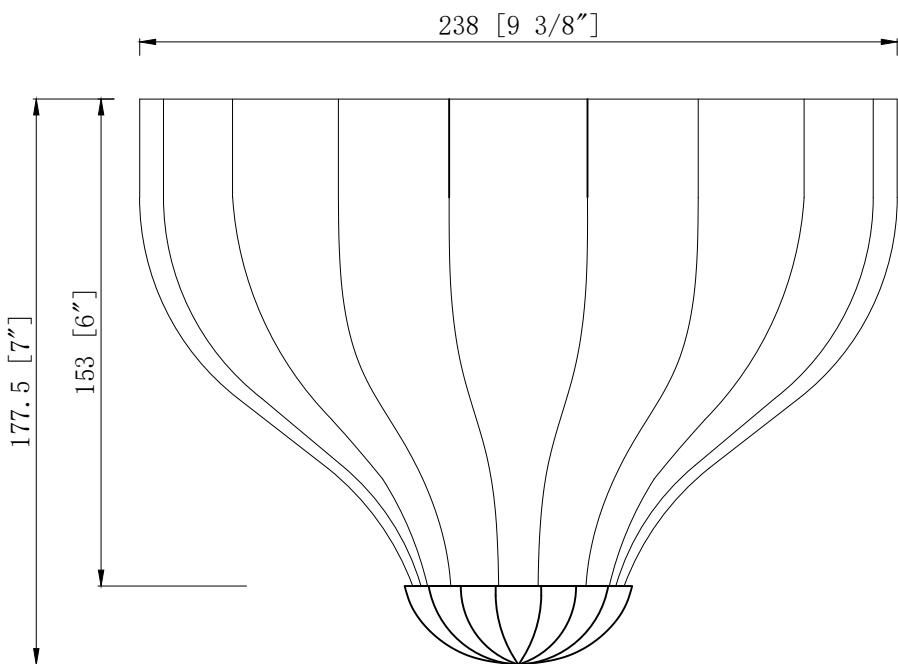


CRYSTORAMA

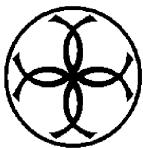

LIGHTING THE WAY FOR SIXTY YEARS



ASSEMBLY INSTRUCTION MODEL #LAY-301-LG

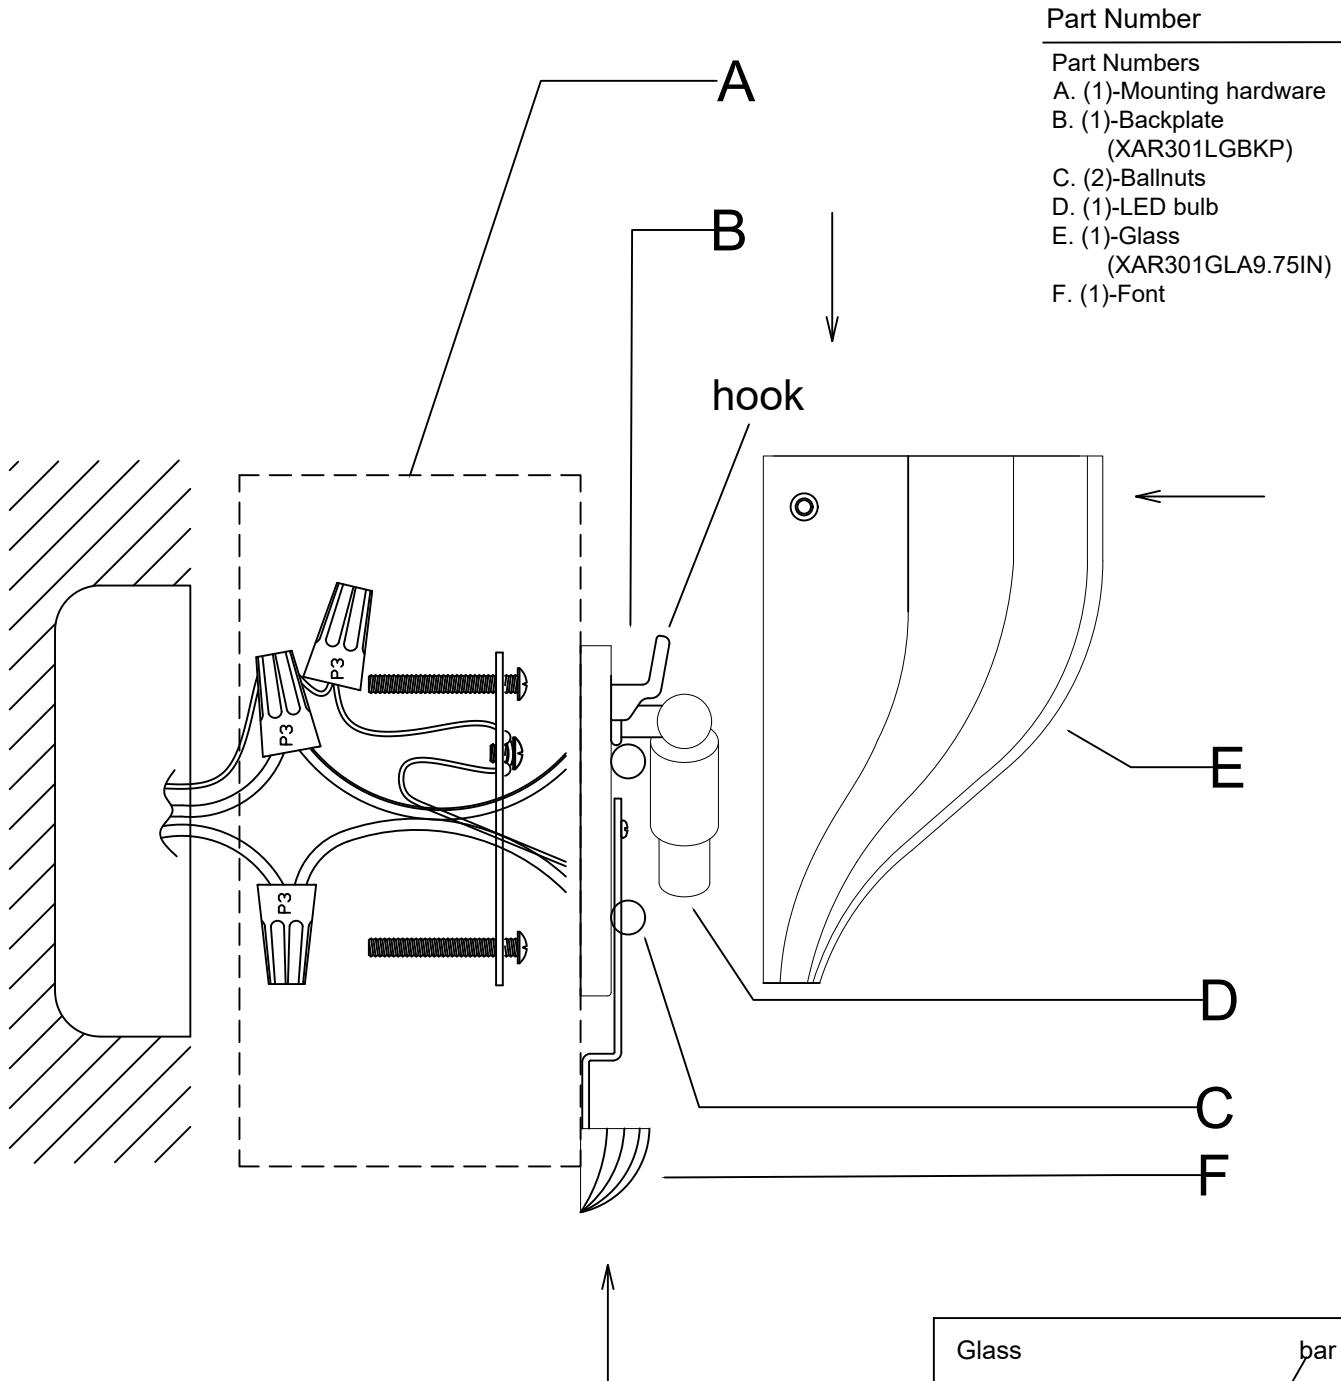

Part Number

Part Numbers
A. (1)-Mounting hardware
B. (1)-Backplate
(XAR301LGBK)
C. (2)-Ballnuts
D. (1)-LED bulb
E. (1)-Glass
(XAR301GLA9.75IN)
F. (1)-Font

