


Little Fella Side Table - Round Assembly Instructions

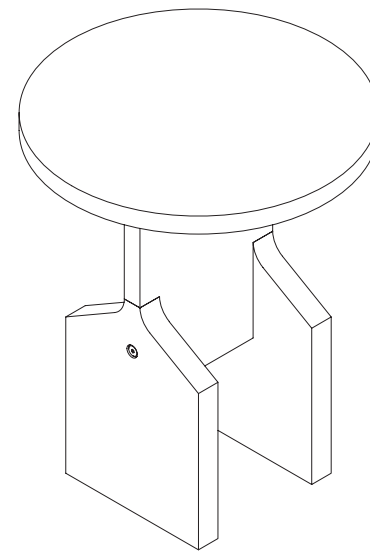

Resident


Little Fella Side Table - Assembly Instructions

Product Code: LFT001N


Assembly Kit Contents:

1 x Allen Key
2 x Wooden Leg
1 x Wooden Body
1 x Wooden Top
1 x Metal Bracket
6 x Wooden Dowel
2 x M6 x 40 Screw
2 x M6 x 16 Screw
1 x M6 x 20 Screw


- 1
- Press two wooden dowels into the holes of each leg.
 - Screw each leg to the wooden body using the 2x M6 x 40 Screws.

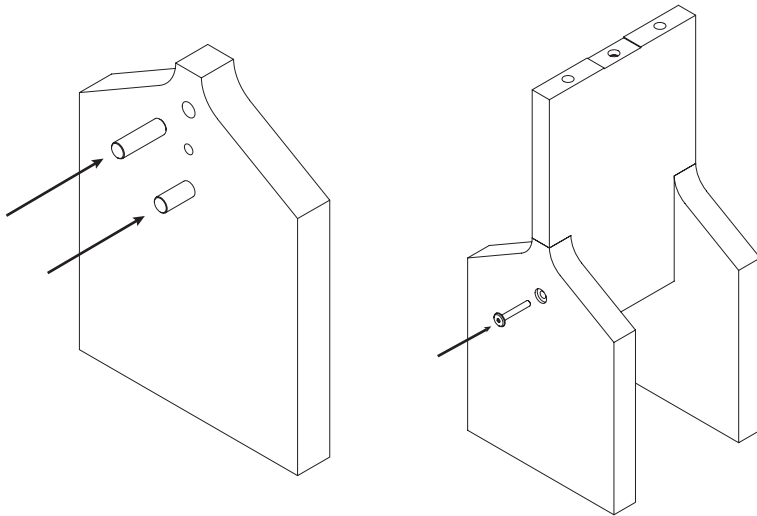


- 2
- Press two wooden dowels into the top of the wooden body. Screw the metal bracket into the top of the body using the M6 x 20 Screw.
- Ensure the middle hole on the metal bracket is the counter sunk side up.

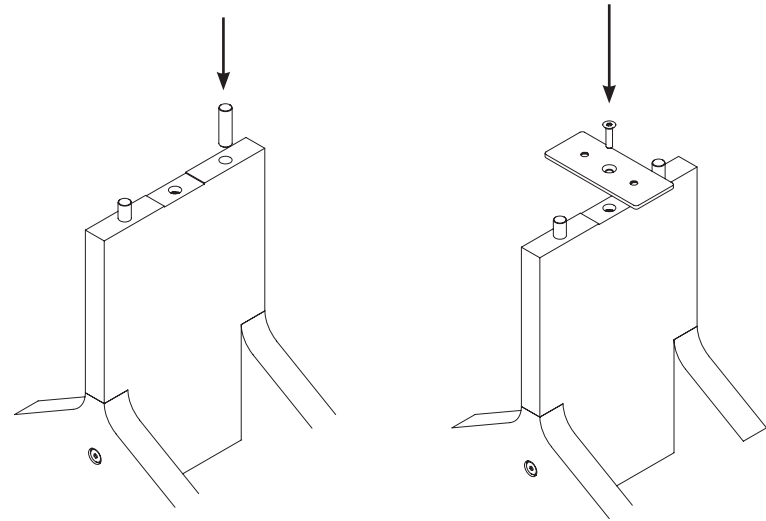

- 3
- Flip the body and the wooden top upside down. Place the base so the metal bracket lines up with the groove in the wooden top.
 - Using the 2x M6 x 16 screws, screw the top onto the wooden base.

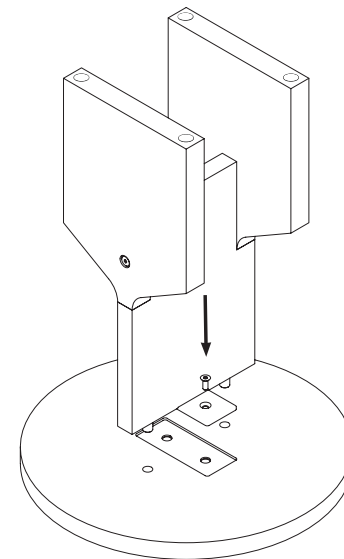

Little Fella Side Table - Square Assembly Instructions

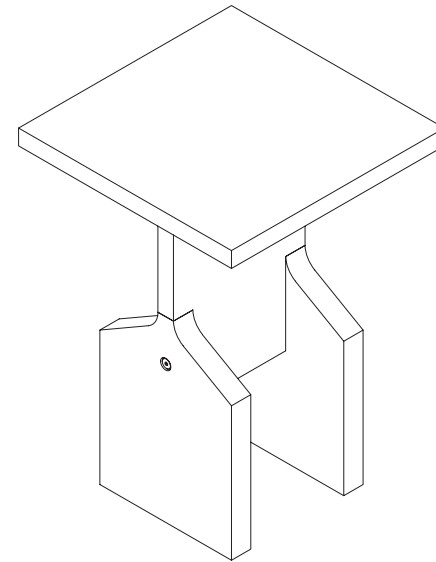

Resident


Little Fella Side Table - Assembly Instructions

Product Code: LFT002N


Assembly Kit Contents:

1 x Allen Key
2 x Wooden Leg
1 x Wooden Body
1 x Wooden Top
1 x Metal Bracket
6 x Wooden Dowel
2 x M6 x 40 Screw
2 x M6 x 16 Screw
1 x M6 x 20 Screw


- 1 • Press two wooden dowels into the holes of each leg.
• Screw each leg to the wooden body using the 2x M6 x 40 Screws.

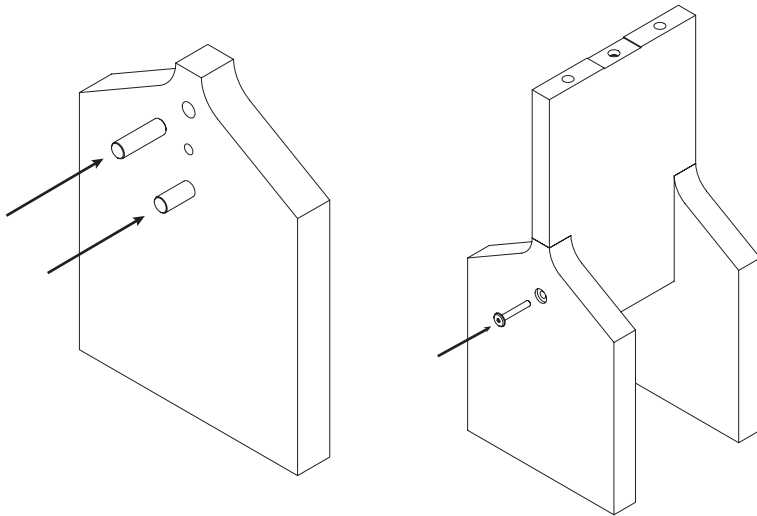


- 2 Press two wooden dowels into the top of the wooden body. Screw the metal bracket into the top of the body using the M6 x 20 Screw.
- Ensure the middle hole on the metal bracket is the counter sunk side up.

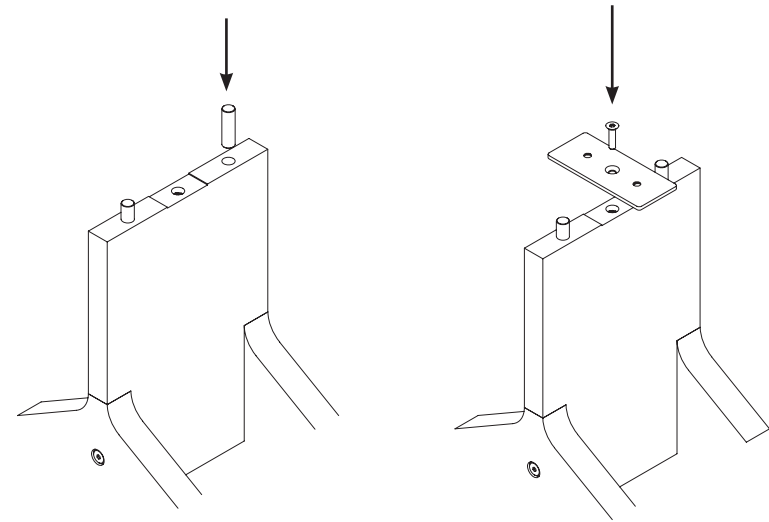

- 3 • Flip the body and the wooden top upside down. Place the base so the metal bracket lines up with the groove in the wooden top.
• Using the 2x M6 x 16 screws, screw the top onto the wooden base.

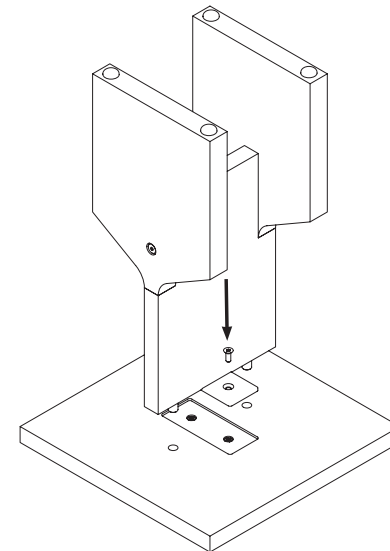

Little Fella Side Table - Double Assembly Instructions

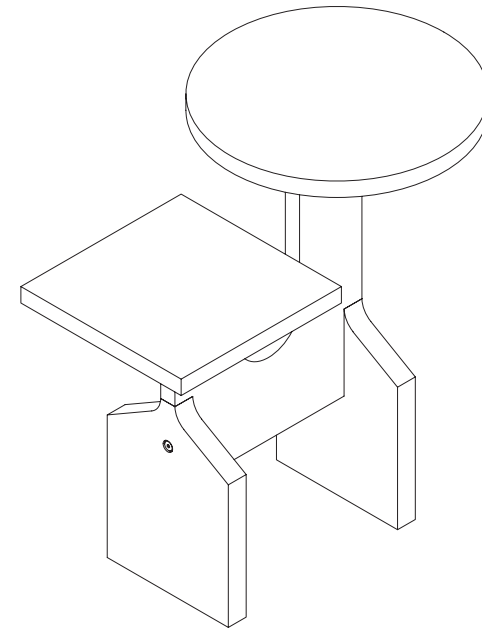

Resident


Little Fella Side Table - Assembly Instructions

Product Code: LFT003N

Assembly Kit Contents:


- 1 x Allen Key
- 2 x Wooden Leg
- 1 x Wooden Body
- 1 x Wooden Top - Round
- 1 x Wooden Top - Square
- 2 x Metal Bracket
- 8 x Wooden Dowel
- 2 x M6 x 40 Screw
- 4 x M6 x 16 Screw
- 2 x M6 x 20 Screw

- 1
- Press two wooden dowels into the holes of each leg.
 - Screw each leg to the wooden body using the 2x M6 x 40 Screws.

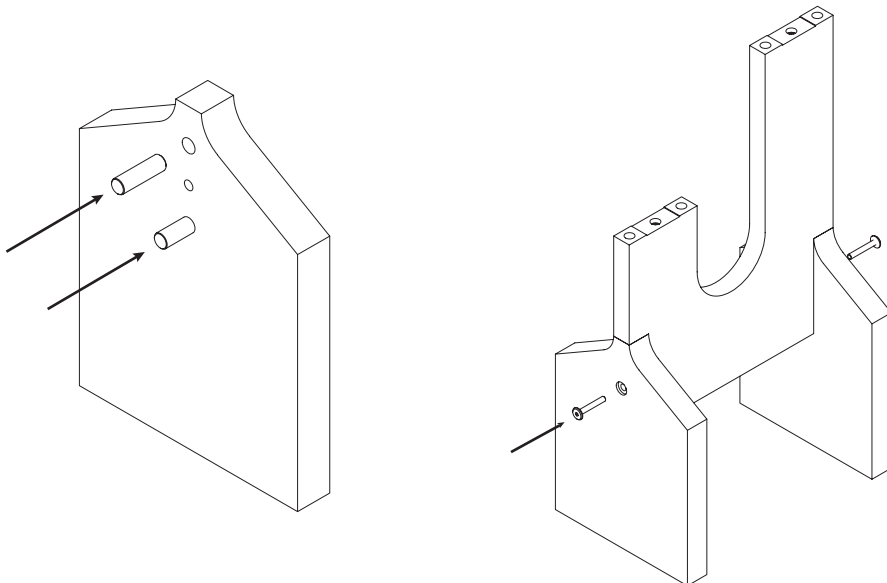

- 2
- Press two wooden dowels into each of the top surfaces on the wooden body. Screw the metal brackets into each of the top surfaces on the body using the M6 x 20 Screws.

- Ensure the middle hole on the metal bracket is the counter sunk side up.

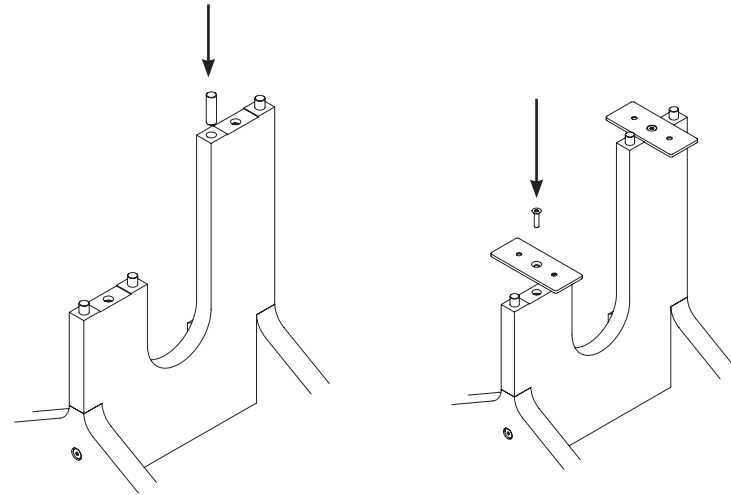

- 3
- Flip the body and the wooden tops upside down. Place the base so the metal brackets line up with the groove in the wooden top.
 - Using the 4x M6 x 16 screws, screw the tops onto the wooden base.

