




LAURENT 10

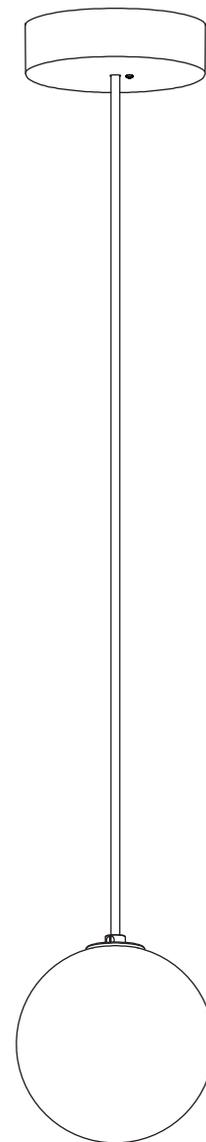

- Please read entire manual before beginning installation
- To be installed by an electrician to an electrical box
- Use appropriate screws and anchors where necessary
- Wear enclosed gloves when handling lamp
- Handle materials with care. Please consult lamp maintenance sheet

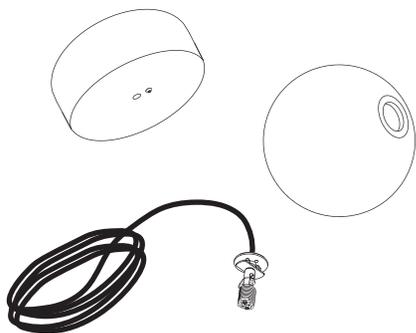


1

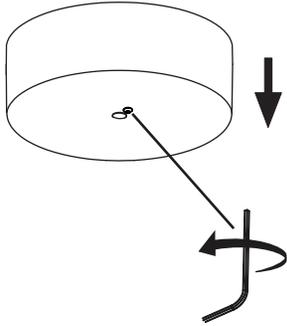


2

Chose desired height (X) and mark it.
 Leave enough wires inside canopy
 to reach connectors (± 6 / 15cm).

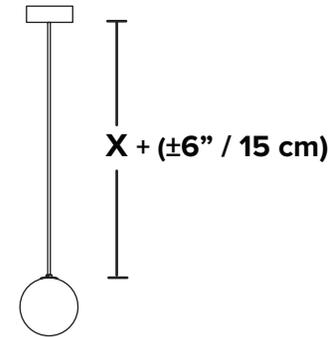

3

Feed wires through canopy and into bracket.
 Do not trim wires until passing them through
 canopy and bracket.
 Leave ± 6 " / 15 cm of wire after strain relief
 to make connections. Leave 1" / 2.5cm of sleeved
 wire after strain relief.
 Secure strain relief.

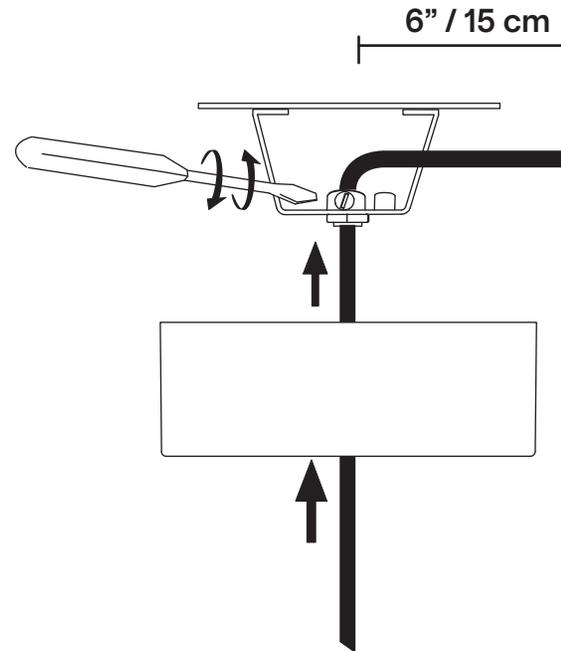

4


Make connection.

We recommend making your connection within the electrical box, however you may also make your connections within your canopy.



Secure bracket.
Screws not provided.
Use appropriate anchors where necessary



FOR 120V WIRING

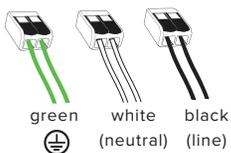


FOR 220V-240V WIRING

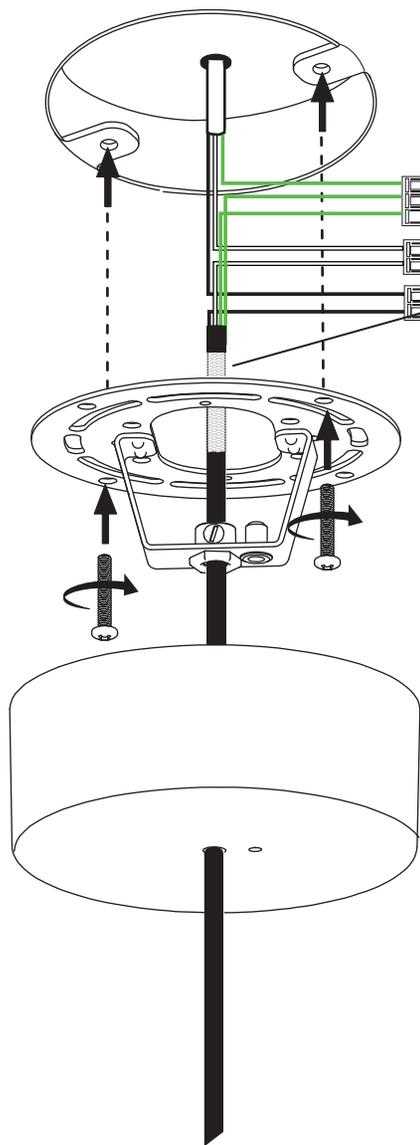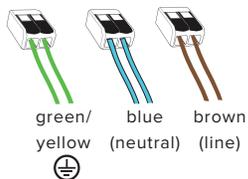


OR




Insert provided fiberglass sleeve before making connection.

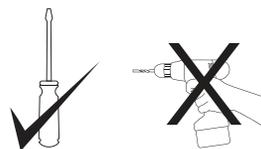







Avoid scuffing wires during this operation.

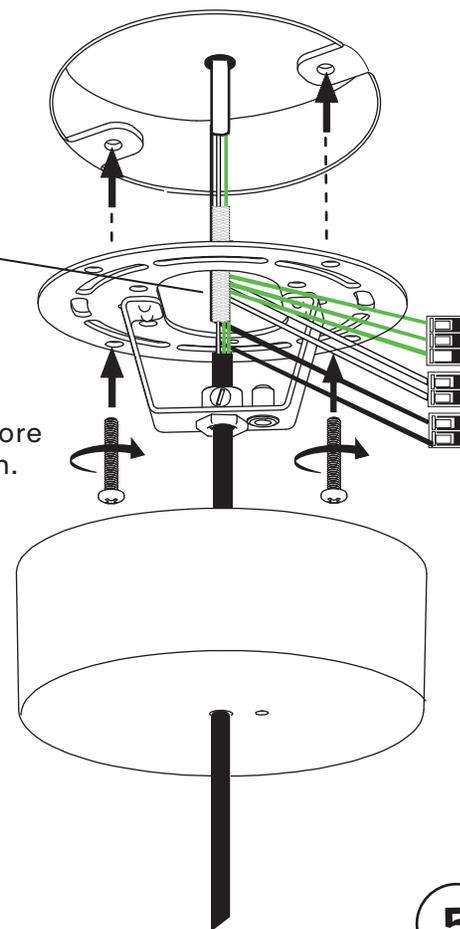

5

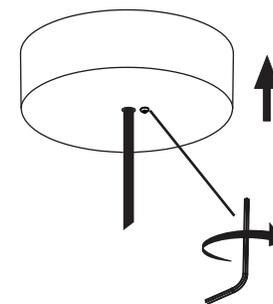

6

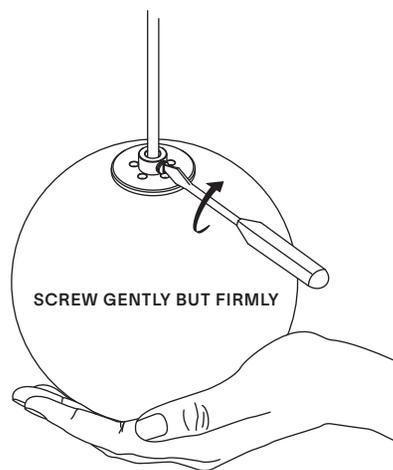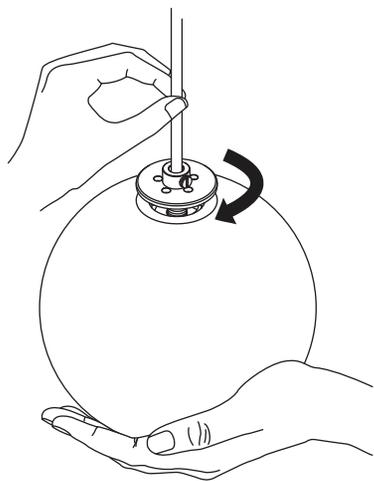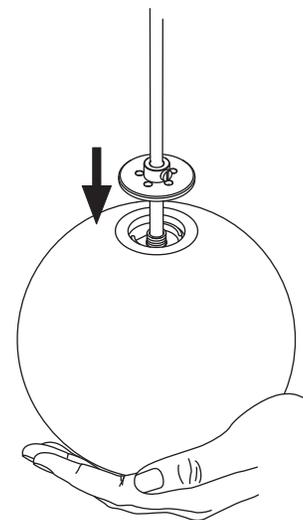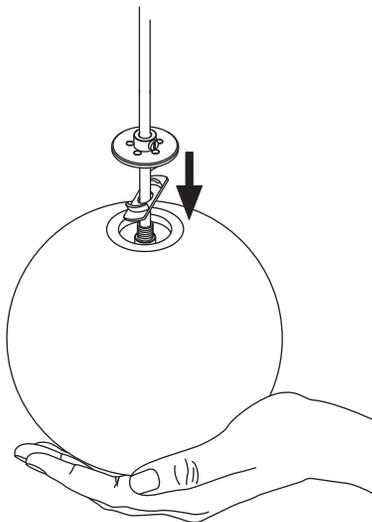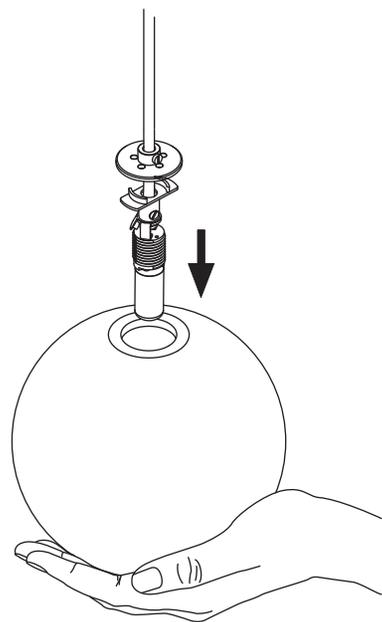

7

If micro-adjustments are needed.

