



1718 W. Fullerton Chicago, IL 60614
 Ph: 773.770.1195 • Fax: 773.935.5613
 www.PureEdgeLighting.com • info@PureEdgeLighting.com
 © 2016 PureEdge Lighting. All Rights Reserved.


Installation Instructions for TruTrack L-Connector

TR24-L_C-WH


IMPORTANT INFORMATION

- This instruction shows a typical installation.

SAVE THESE INSTRUCTIONS!

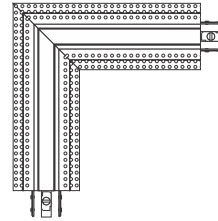



Install the L-Connector

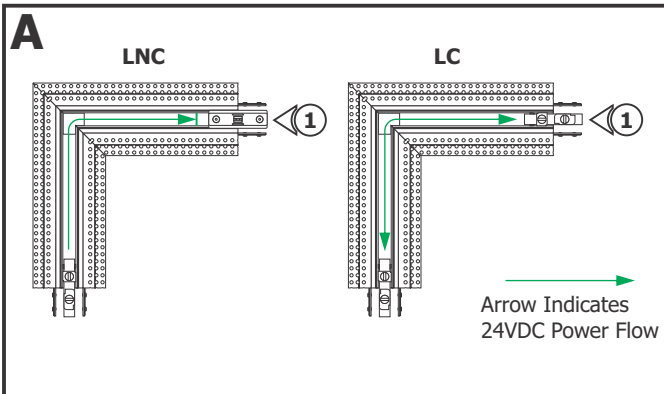

1: L-Connectors join two track sections together in a 90 degree angle and either isolate the power from one track to the other (LNC) or conduct the power from one track to the other (LC).


2: Place the L-Connector against the ceiling. Ensure the L-Connector is aligned with the TruTrack Recessed Channel installation location.

3: Mark the installation location of the L-Connector on the drywall using a pencil or chalk line before cutting.

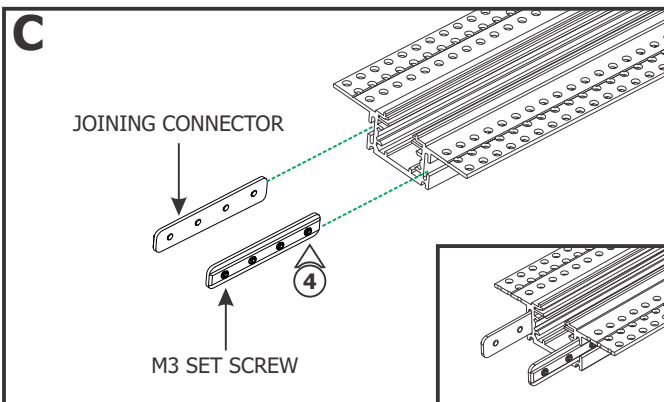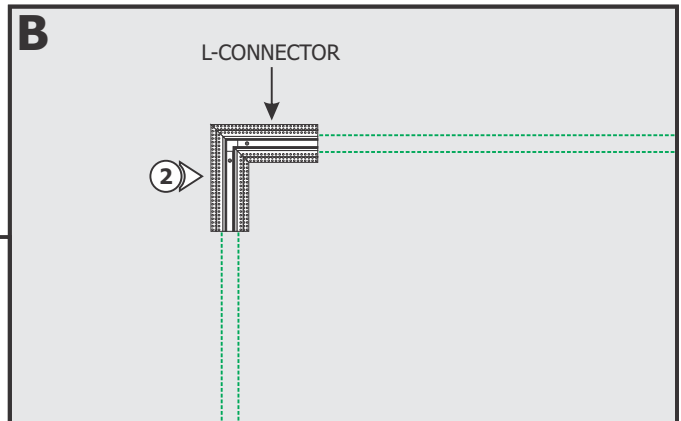

4: Insert the joining connectors half way into the L-Connector and tighten the M3 set screws using a 1.5mm Allen wrench.

5: Repeat step 4 for the other end of the L-Connector.

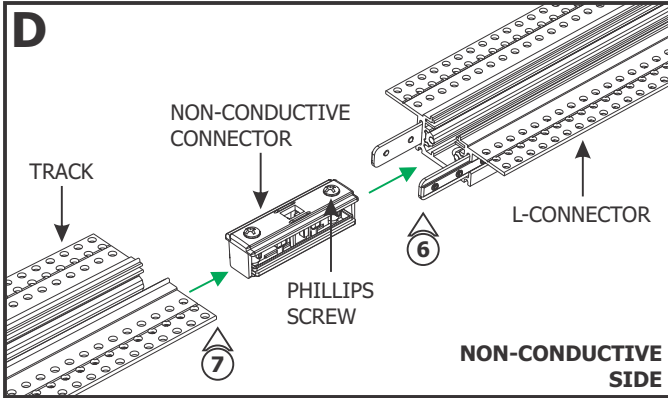

6: For the non-conductive side, insert the non-conductive connector half way into one end of the L-Connector. Tighten the screw snugly with a Phillips screw driver (do not overtighten).

7: Slide the track over the non-conductive connector and joining connectors and tighten the remaining set screws and Phillips screw.

8: For the conductive side(s) of the L-Connector, insert the conductive connector half way into the L-Connector. Tighten the slotted screw with a flat-head screw driver.

9: Slide a track over the joining connectors and conductive connector. Tighten the remaining set screws and the slotted screw to secure in place.

NOTE: Follow steps described in the TruTrack Track instruction to complete the installation and snap the covers onto the L-Connector.

