

STRIA 3 SCONCE

INSTALLATION DIAGRAM




WARNING:

Turn off power at circuit before wiring.
Always consult a licensed electrician.

NOTE:

Once the fixture is slid into the
backplate, tighten the set screws
with the provided hex key to
ensure a secure installation.

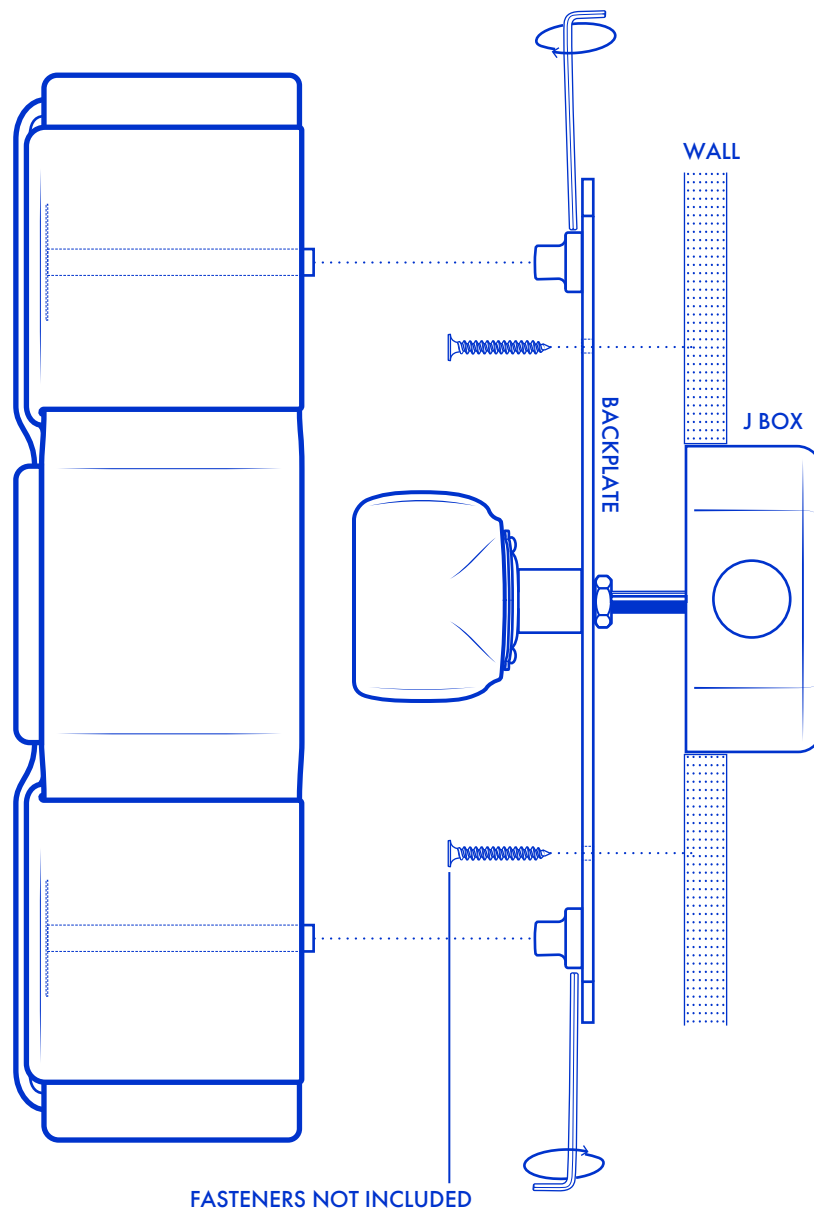

PROVIDED HARDWARE

X1

