

Signature

La Motte SW34516-\_\_\_ SW34521-

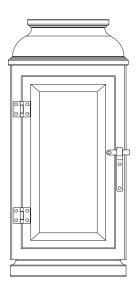


This design is the proprietary trade dress/trademark of w schonbek LLC.

Signature





WWW.SCHONBEK.COM/INSTALLATIONMANUAL

All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

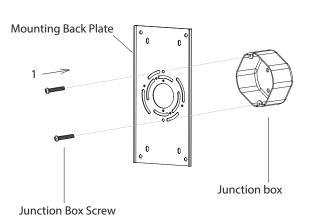

## SW34516

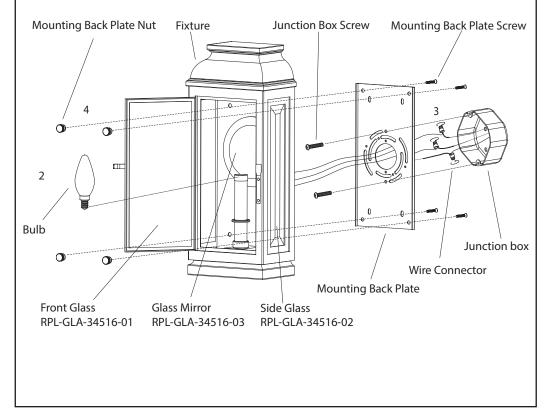

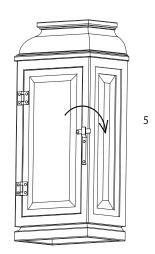

## SW34521

Except for installating three bulbs, other installation steps refer to SW34516

