



# CRYSTORAMA


LIGHTING THE WAY FOR SIXTY YEARS

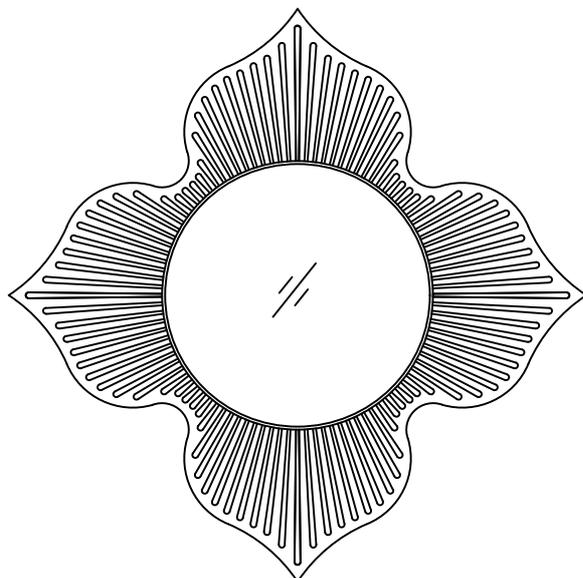

ASSEMBLY INSTRUCTION MODEL# TUL-M100-BB

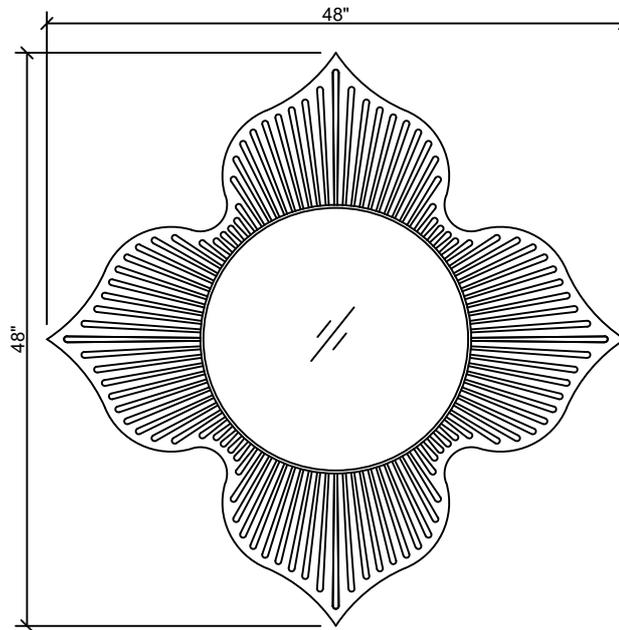

FRONT VIEW

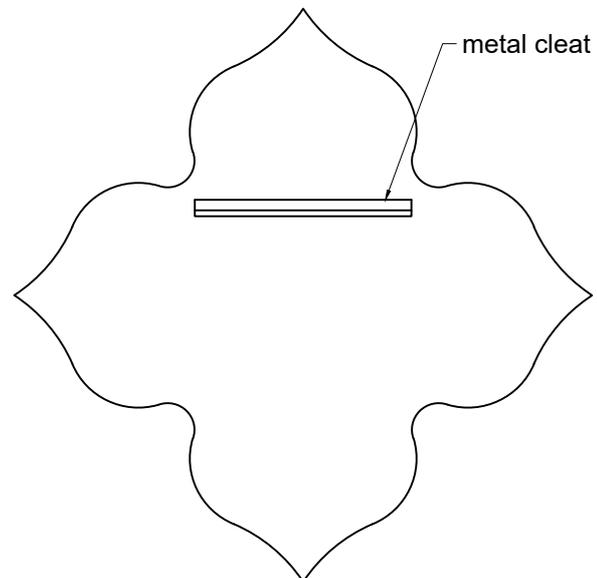

BACK VIEW




## INSTALLATION INSTRUCTIONS

### ITEMS INCLUDED

Anchor(A): Ø7.5[mm]x36[mm]x5 Wall cleat: x1  
Screws(B): Ø4[mm]x40[mm]x5

### NECESSARY TOOLS (NOT INCLUDED)



	<p><b>Step 1</b></p> <p>Place the metal cleat at the desired wall location and mark three points at the center of the hole on the metal cleat using the pencil.</p>
	<p><b>Step 2</b></p> <p>Drill the holes at the marked points and insert the anchors into the hole.</p>
	<p><b>Step 3</b></p> <p>Mount the metal cleat onto the wall surface using the screws supplied. Make sure that the metal cleat is straight using a level.</p>
	<p><b>Step 4</b></p> <p>Carefully lift from the mirror frame sides and hang onto the metal cleat</p>