


## ASSEMBLY INSTRUCTION MODEL VNC-6508-NB

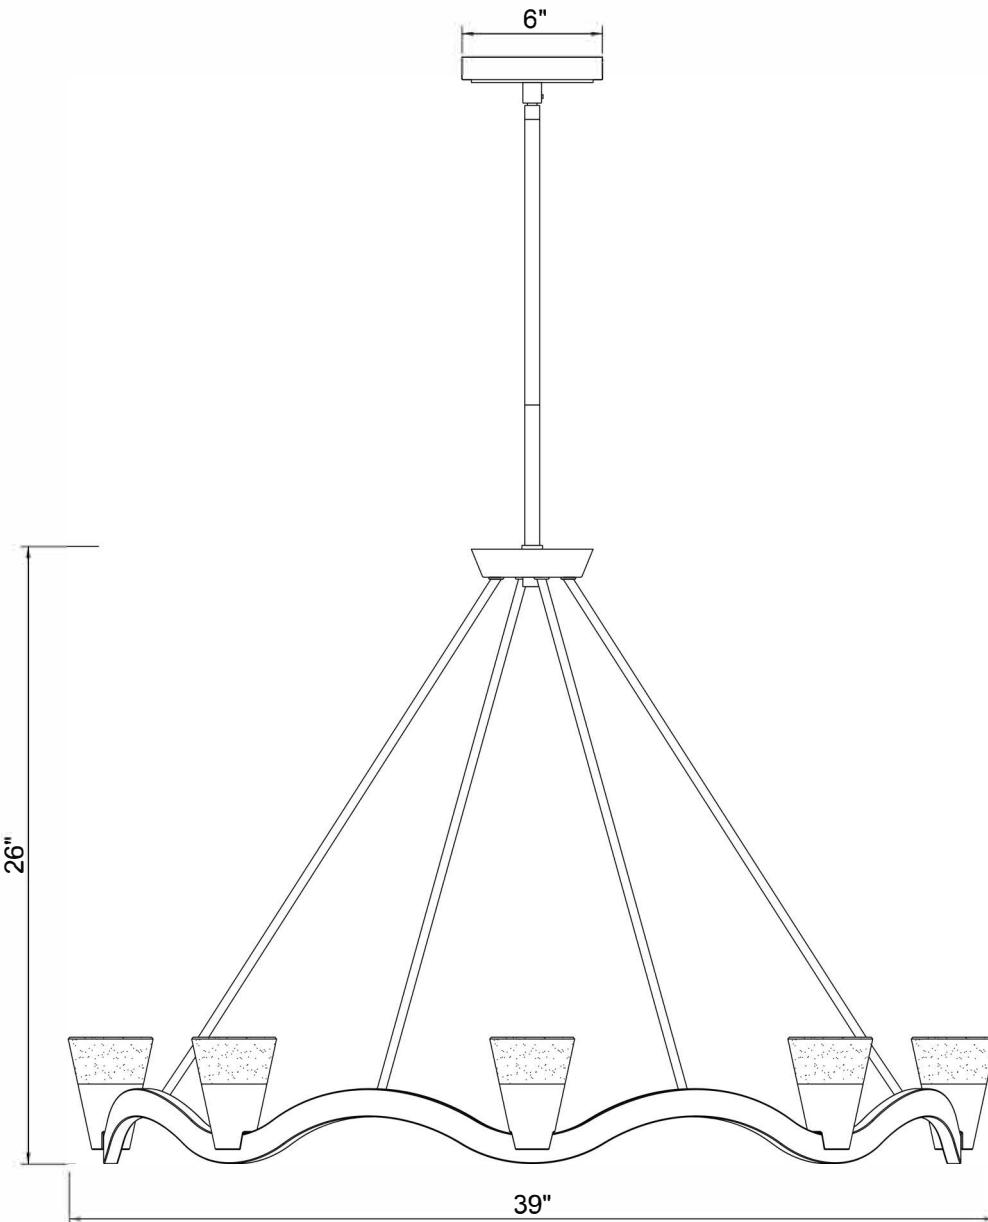

### WARNING:



Electrical Danger



Turn Power Off

All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.




You will need 8-5 Watts Intergrated LED module (LED included)

**This fixture is Dry Rated.**

1. Loosen the coupler to take the metal plate off the distributor box.
2. Take one hand rod, locate the side with an open hole and insert it into the stud on the inside of the lamp body. Secure with the set screw using the wrench included. Repeat this process for the rest of the rods.
3. Slide the distributor box over the top end of the hang rod and secure with the washer and hex nut.
4. Put the metal plate back over the distributor box and secure with the coupler set screw using the wrench.
5. Decide the preferred hanging height and choose the correct length of stems needed.
6. Install the mounting plate onto the outlet box.
7. Raise the fixture up to the ceiling and do the wire connection as illustrated. Secure the canopy onto the mounting plate using the screws.
8. Screw the glass shade onto the socket.

# CRYSTORAMA

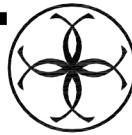


LIGHTING THE WAY FOR SIXTY YEARS



Crystorama.com

PART NUMBER MODEL VNC-6508-NB

## Part Number

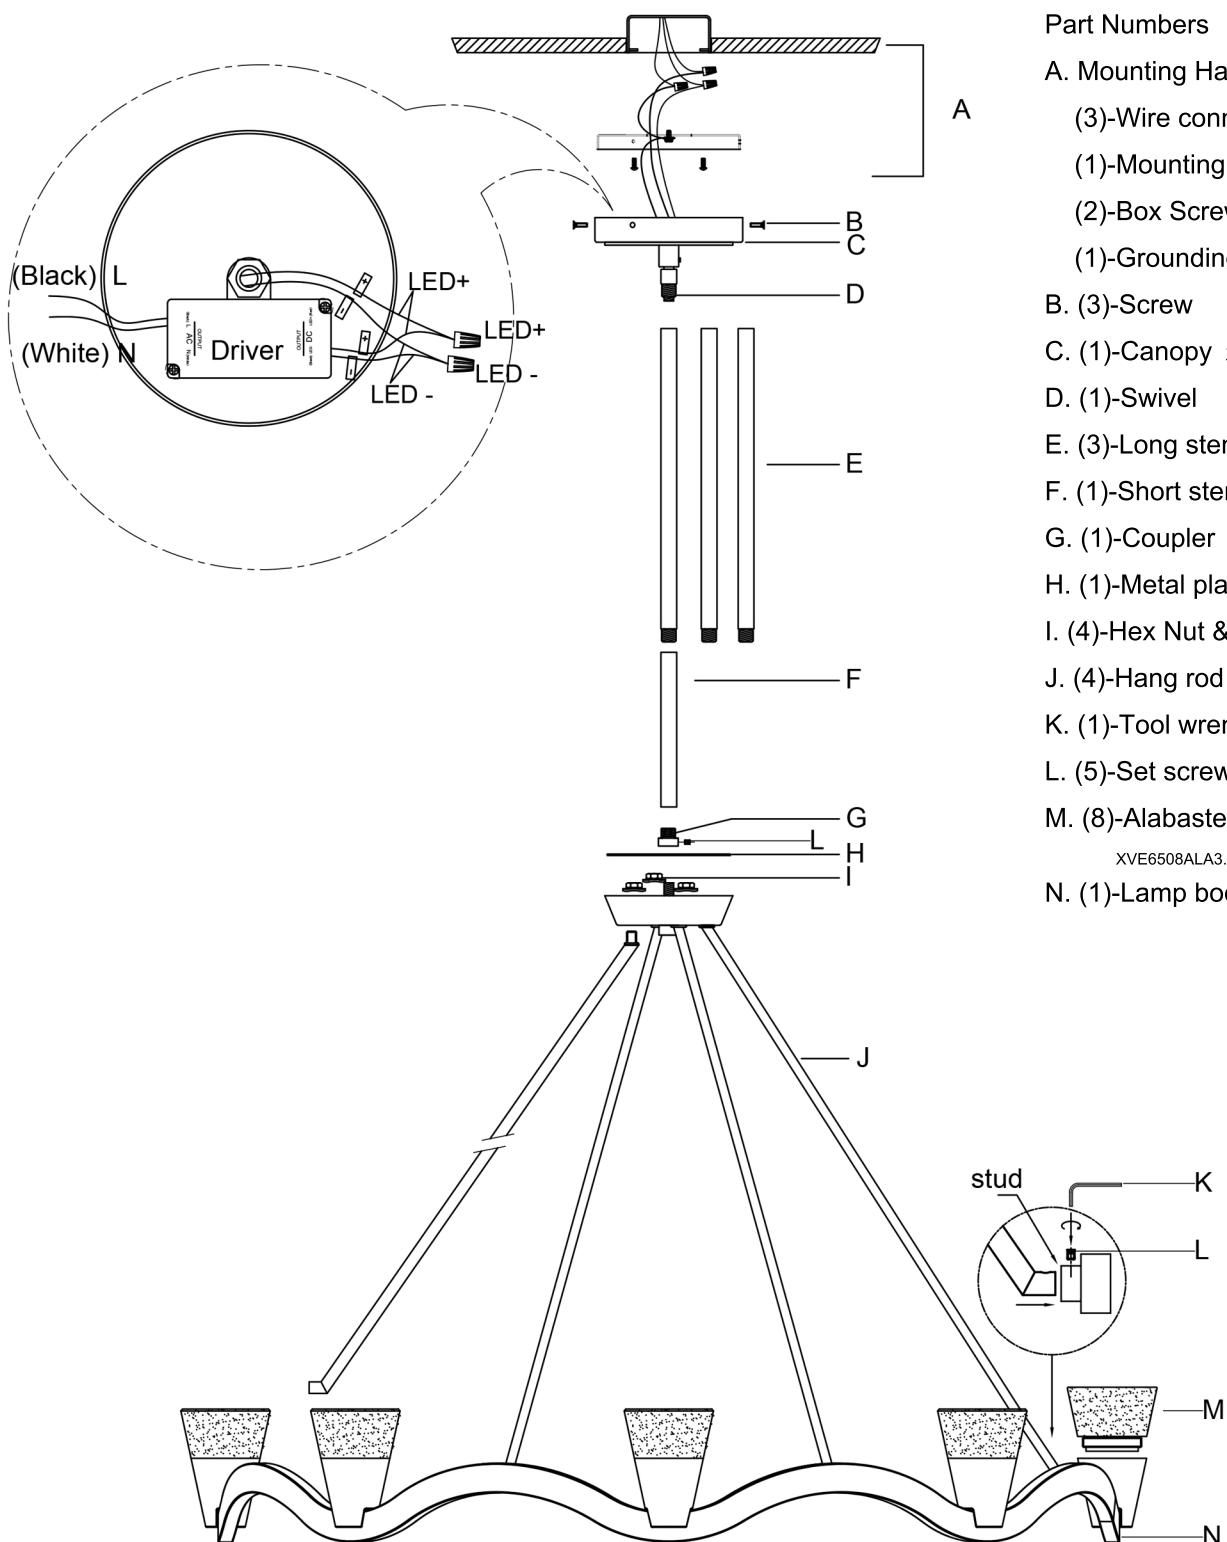

### Part Numbers

#### A. Mounting Hardware

(3)-Wire connector

(1)-Mounting Plate

(2)-Box Screws

(1)-Grounding Screw

#### B. (3)-Screw

C. (1)-Canopy XVE6508NB CAN6IN

#### D. (1)-Swivel

E. (3)-Long stem XVE6508NB ROD12IN

F. (1)-Short stem XVE6508NB ROD6IN

#### G. (1)-Coupler

#### H. (1)-Metal plate

I. (4)-Hex Nut & Washer

J. (4)-Hang rod

K. (1)-Tool wrench

L. (5)-Set screw

M. (8)-Alabaster Shade

XVE6508ALA3.6IN

N. (1)-Lamp body