




# ASSEMBLY INSTRUCTION MODEL #WIN-217-GA-CL-MWP

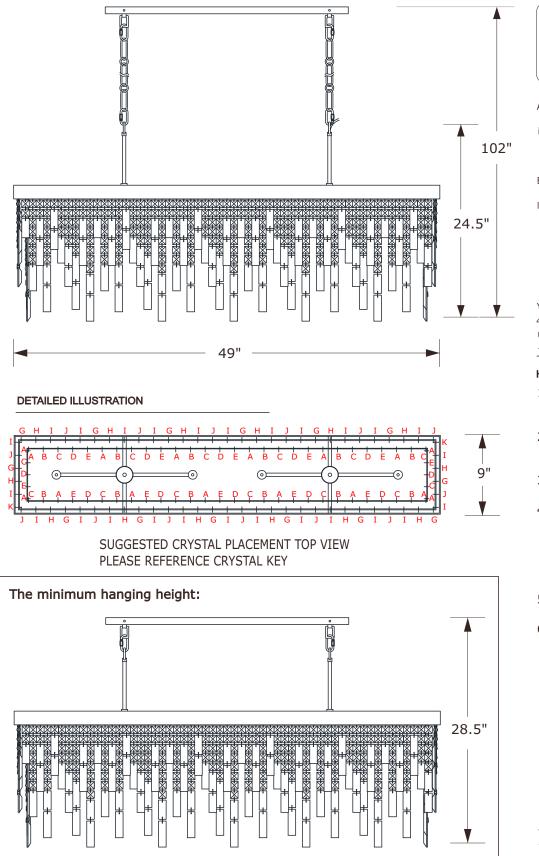





You will need 6 -Candelabra Base Bulb 40 Watts Recommended 60 Watts Max. USE LED BULBS FOR EXTENDED USE THIS FIXTURE IS DAMP RATED

### How to Install

- 1.Determine preferred hanging height and adjust to the required chain.
- 2.On both sides, feed wires through the hanging rod and chain.
- 3.Attach the rod onto the fixture body.
- 4.On each chain, open one quick link and attach it to the loop on the canopy. Open the other quick link, at the opposite end of the chain, and attach it to the loop on the top of the rod.
- 5.Insert recommended bulb (not included).
- 6.Dress the crystal strands as illustrated.

A warning: This product can expose you to Lead, which is known to the State of California to cause cancer and/or birth defects or reproductive harm. For more information go to www.P65Warnings.ca.gov.

# CRYS1

LIGHTING THE WAY FOR SIXTY YEARS

# PART NUMBER MODEL #WIN-217-GA-CL-MWP

- $D = 222 \times 222$
- $G = \boxtimes \boxtimes \boxtimes \boxtimes \boxtimes \boxtimes \boxtimes$ Ŧ
- $H = \boxtimes E \rightarrow E$
- I =
- $K = \boxtimes \boxtimes \boxtimes E$


#### **Crystal Key**

- A.16 Sets. (4)22X22mm+(1)22X76
- B.12 Sets. (7)22X22mm+(1)22X56+(1)22X76
- C.14 Sets. (7)22X22mm+(1)22X76
- D.12 Sets. (8)22X22mm+(1)22X56+(1)22X76
- E.12 Sets.
- (6)22X22mm+(2)22X76
- G.14 Sets.
  - (5)22X22mm+(2)22X56

### H.14 Sets. (1)22X22mm+(2)22X56 I.26 Sets. (2)22X22mm+(1)22X56+(1)22X76 J.14 Sets. (2)22X22mm+(1)22X56 K.2 Sets. (3)22X22mm+(1)22X76

Part Number

- A. (1) Mounting Hardware
  - include:
  - (1) Mounting Plate
  - (4) Machine Screw
  - (3) Wire Connector
  - (2) Plastic Anchor
  - (2) Wood Screw
- B. (1) Canopy(L28",W4.5",H0.75") #XRE217GACAN28IN
- C. (4) Fixture Loop
- D. (4) Quick Link
- E. (2) Hanging Chain(each72", 5.0mm) #XRE217GACHA5MM
- F. (2) Rod(6",12.7mm) #XRE217GAROD6IN



- 1.Please measure the distance between the two mounting keyholes on the mounting plate.
- 2. Make two points on the ceiling according to the distance measured above.
- 3.Drill two holes at the two points and insert the plastic anchors.
- 4. Put the mounting plate over outlet box and insert two wood screws in the plastic anchors and tighten them.

