X20212/X20216

INSTALLATION INSTRUCTIONS SHEET

START FROM HERE

- Make sure power is completely off at the fuse box.
- Have your fixture installed by a qualified licensed electrician
- Prepare everything in clear area.
- Wear gloves at all times during this installation.
- Read instructions carefully before you start assembly.
- Keep this instruction sheet for future reference.


Technical Support:1-844-628-8368

Please Note:

- All Matteo Lighting fixtures come with pre-wired module(s).
- Unless instructed to do so, please do not touch any part of the module(s) as any unnecessary contact with the module could cause permanent damage.

THIS LUMINAIRE MUST BE MOUNTED OR SUPPORTED IN A JUNCTION BOX

CE LUMINAIRE DOIT ÊTRE MONTÉ OU SUPPORTÉ DANS UNE BOÎTE DE JONCTION

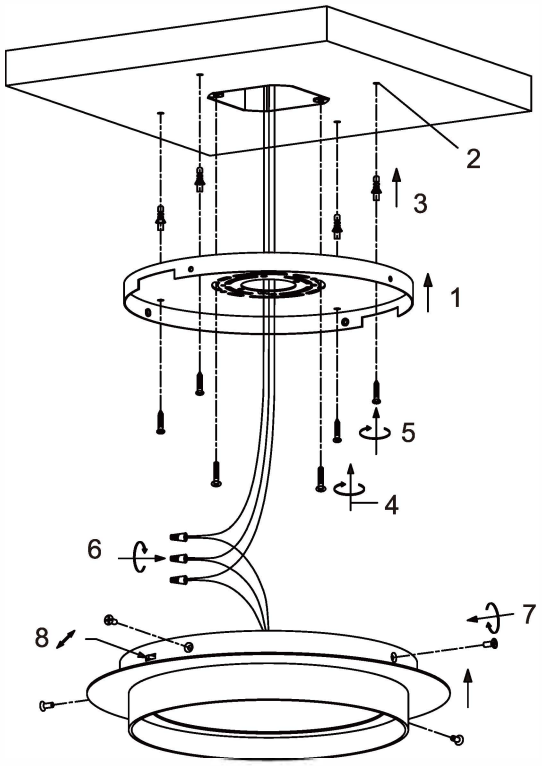

- Ensure main supply is switched off
- Put the canopy tightly onto the ceiling at right position, mark on the ceiling at the position of ∅5 holes then put the canopy down from the ceiling (1)
- Drill holes on the ceiling at the position with signs (2)
- Insert anchors into the holes (3)
- Use screws to fix the mounting bracket onto junction box (4)
- Use self-tapping screws to fix the mounting bracket onto the ceiling (5)
- Connect wires according to colour (White to White, Black to Black), connect all earth lug together onto the crossbar with green screw to tight (6)
- Use M4 screws to fix the canopy onto the mounting bracket (7)
- Use dip-switch to choose the colour temperature (8)
- Reconnect power.
- Light source:
- X20212-DC LED 14W CRI90 ELV DIM, 5CCT: 2700/3000/3500/4000/5000K selectable
- X20216-DC LED 18W CRI90 ELV DIM, 5CCT: 2700/3000/3500/4000/5000K selectable

WARNING:

- This fitting must be earthed.
- Disconnect power and allow fitting to cool down before cleaning or changing the lamp.