



anony


186 St Helens Ave
Toronto, Ontario
M6H 4A1
+1 905 301 0306
sales@anony.ca

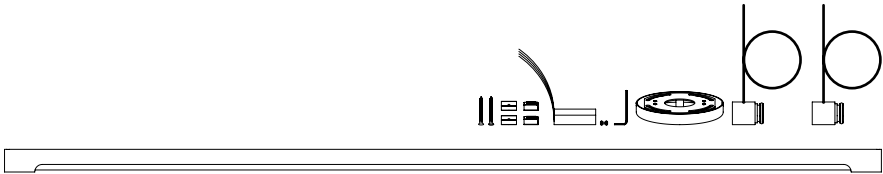

1. Disconnect power

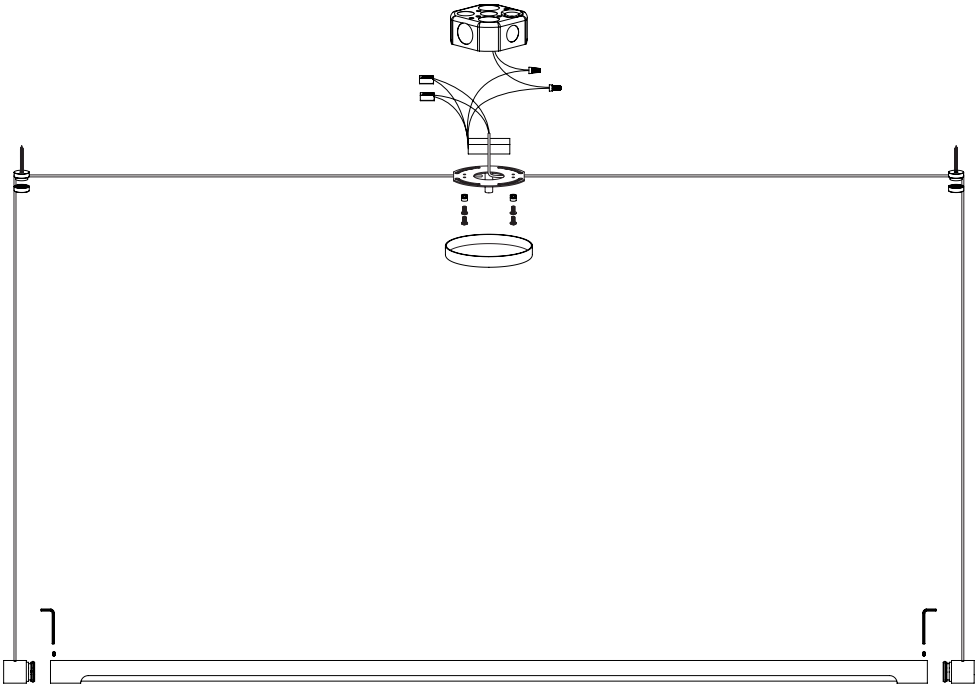

- 2. Layout points onto ceiling
- 3. Connect wires to junction box
- 4. Screw backplate to junction box
- 5. Tighten strain reliefs onto wire
- 6. Attach canopy to backplate

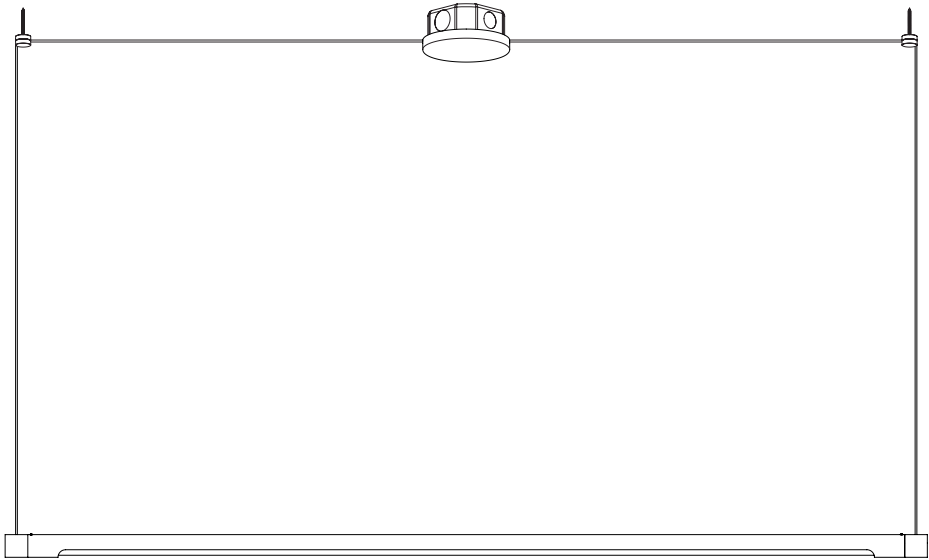

7. Connect & secure with set screws

1220mm
[48in]