



INSTALLATION OF MINI ELECTRICAL BOX

1. Place box against structural member (joist or stud) and secure through 3/8" diameter holes on side with drywall screws (by others). Be sure to use two screws. Mini Electrical box must be flush with drywall when installed.
2. **Example:** If using 5/8" drywall be sure bottom of electrical box extends past structural member 5/8" to be flush with dry wall when installed.
3. If attaching Mini Electrical box between structural members attach blocking in appropriate position and secure Mini Electrical box to blocking per step 1.
4. Attach conduit to supplied knock outs.
5. **Note:** Mini Electrical box is **not** suitable for through wiring.
6. Install transformer in electrical box if supplied.
6. Wire and finish per instructions supplied with light fixture.

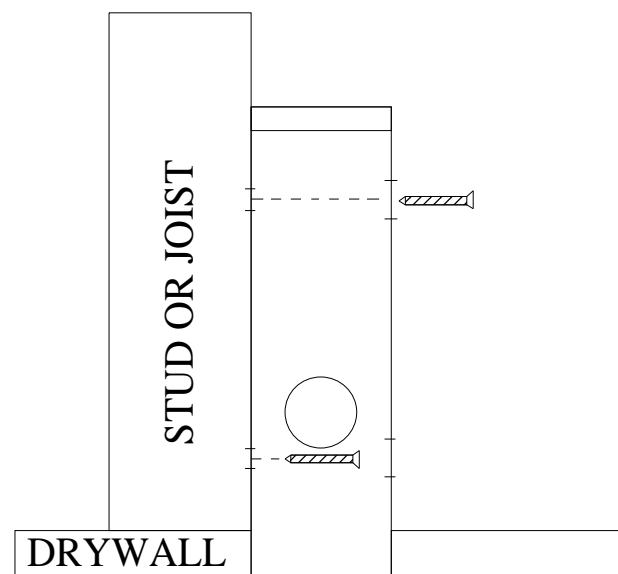


NOTE 1

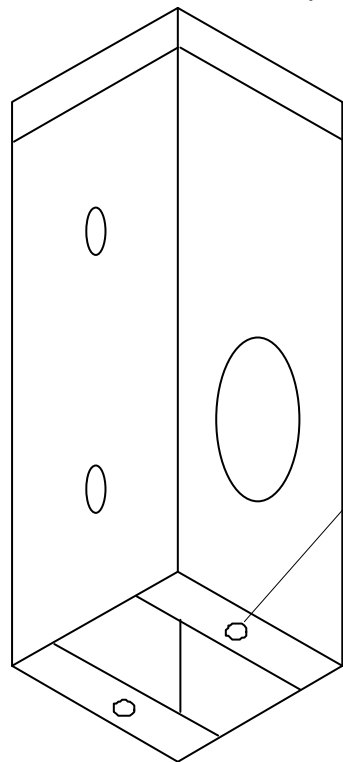

LumenArt Mini Electrical Box

Note: Orient the mounting ears to match your Alume fixture

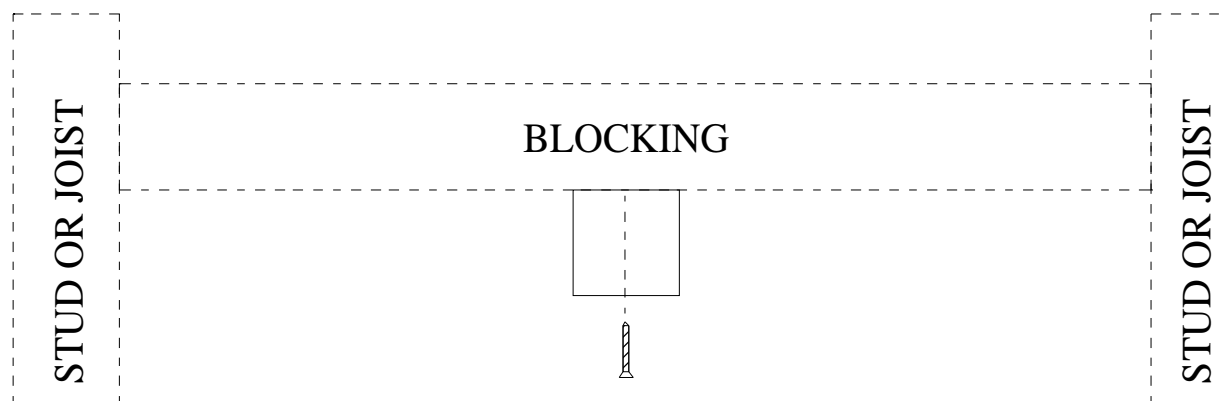

NOTE 2

Alume Install with ASC or ASR Canopy

