



Lamping Specifications

Incandescent:

- Type A-19, Three, 150w max

Fluorescent: 120v or 277v

Non-Dimming

- Four, CFTR26W/GX24q or
- Four, CFTR32W/GX24q or
- Four, CFTR42W/GX24q

Dimming

- Four, CFTR26W/GX24q

IMPORTANT | CAUTION

Read all instructions thoroughly, and turn off power at circuit breaker or fuse box before proceeding.

Step 1 Carefully remove fixture from packaging. Avoid using a sharp blade on packaging as doing so may result in damage to the finish on the fixture. Turn off power at breaker/fuse box.

Step 2 Align glass diffusers on backplates so notches line up with the black protruding rods. Attach diffusers to lamping assembly using bronze plates and thumb nuts provided. Bronze plates should pinch glass diffusers into place.

Step 3 Assemble lamping assembly, top diffuser (fluorescent only), stem, aligner adapter, canopy, and mounting hardware. Note that the aligner adapter threading should be on top.

Step 3 Attach assembly to J-box and attach wires using mounting hardware and wirenuts provided.


Step 4 Secure canopy against ceiling with aligner adapter.

Step 5 Remove bowl diffuser (fluorescent only) and install proper lamping, according to relamp label. For fluorescent luminaires, reattach the bowl diffuser to assembly.

Step 6 Attach bottom diffuser, and diffuser knob.

Step 7 Restore power at the breaker/fuse box.

Figure 1

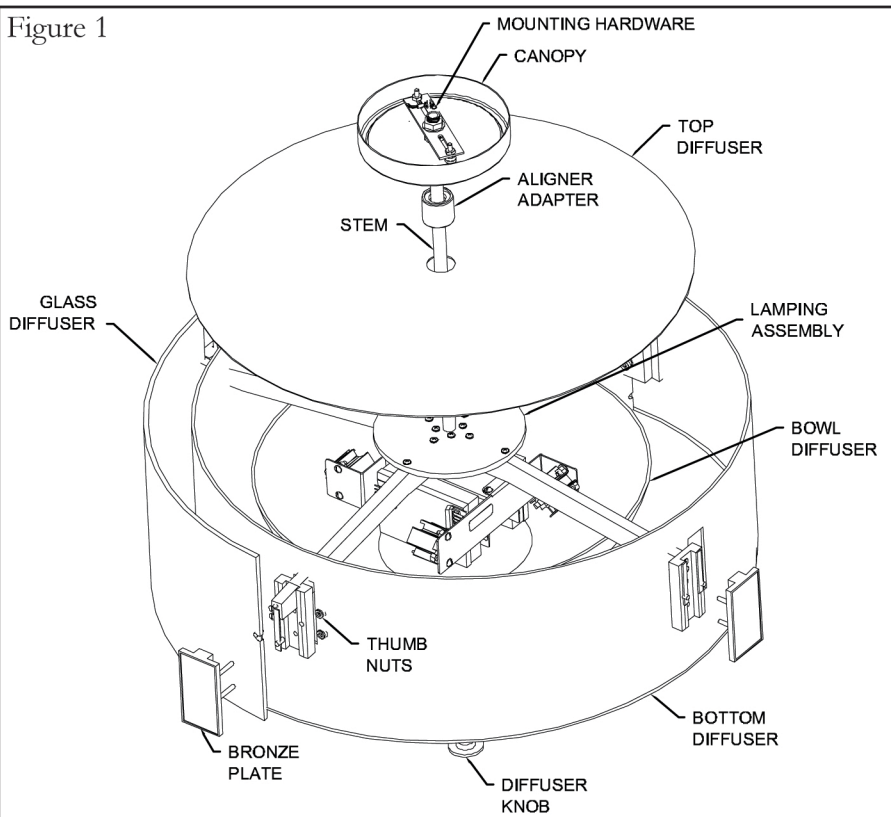

Thank you for your purchase and enjoy your Boyd lighting fixture.