

Instructions for Installation:
 C-10471 Topanga Sconce
 C-10472 Graduated Topanga Sconce

Lamping Specifications:
 Incandescent: Candelabra Base
 One, B-10, 40w max

IMPORTANT! AT ALL TIMES WIRING TO BE DONE PER NATIONAL ELECTRIC CODES (NEC) OR APPLICABLE LOCAL CODES

**IMPORTANT | CAUTION
 READ ALL INSTRUCTIONS THOROUGHLY.
 TURN OFF POWER AT CIRCUIT BREAKER OR FUSE BOX BEFORE PROCEEDING.**



Figure 1

Step 1 Carefully remove fixture from packaging. To avoid damage to the fixture be careful using a knife to open box.

Step 2 Attach Universal Mounting Strap to J-box if necessary. Attach Mounting Bracket to Mounting Strap/J-box. (Figure 1)

Step 3 Make wire connections: connect black fixture wire to black supply wire (load typical); white fixture wire to white supply wire (neutral); attach fixture ground wire to ground wire or ground screw. Use wire connectors provided and push connections inside outlet box. (Figure 2)

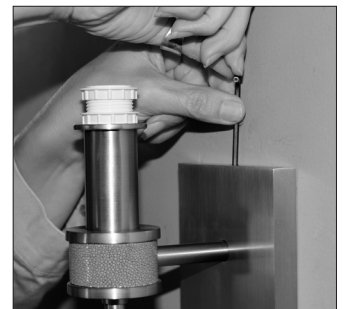


Figure 4

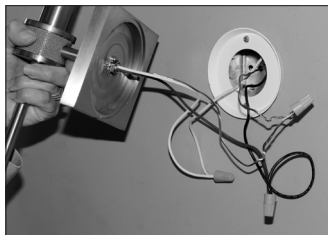


Figure 2

Step 4 Lower fixture onto the Mounting Bracket, ensuring backplate is securely seated in place. (Figure 3)

Step 5 Tighten set screw on top and bottom of backplate with included hex wrench. (Figure 4)

Step 6 Remove top Shade Ring and install the Shade onto fixture. (Figure 5)

Step 7 Reinstall Shade Ring snugly against the Shade. (Figure 6)

Step 8 Install lamp into socket per label recommendations.

Step 9 Restore power to circuit and illuminate lamps.



Figure 3

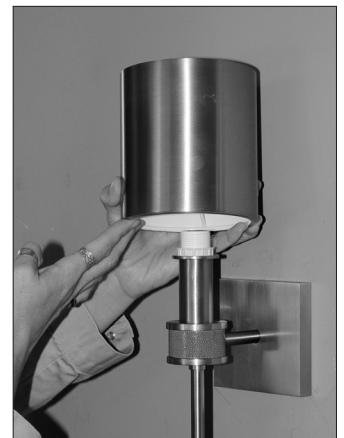


Figure 5



Figure 6