

## Installation Instructions For TruLine 1.6A L-Picture Frame Channel Connector


1718 W. Fullerton Ave Chicago, IL 60614 Tel: 773-770-1196 Fax: 773-883-6128 www.purelighting.com info@purelighting.com

## **IMPORTANT INFORMATION**


- This instruction must be used concurrently with other TruLine 1.6A BIY installation instructions.
- This product is wall or ceiling mount.
- This instruction shows a typical installation.

## **SAVE THESE INSTRUCTIONS!**

## Install the L-Picture Frame Channel Connector

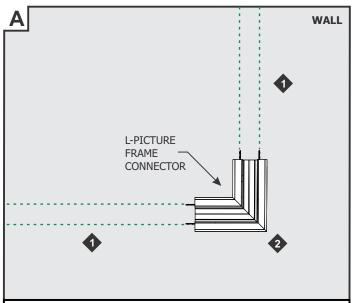

- 1: Place the L-Picture Frame Connector against the wall. Ensure the L-Picture Frame Connector is aligned with the TruLine Channel installation location.
- 2: Mark the installation location of the L-Picture Frame Connector on the drywall using a pencil or chalk line before cutting.

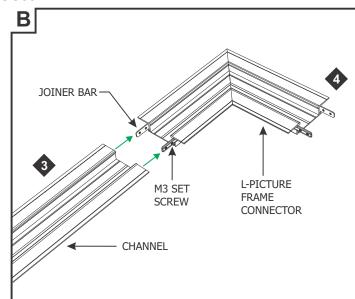

- **3:** Slide a straight channel onto the joiner bars and tighten the remaining M3 set screws with a 1.5mm Allen Wrench.
- **4**: Repeat step 3 for the other end of the L-Picture Frame Connector.

