

1718 W. Fullerton Ave Chicago, IL 60614 Tel: 773-770-1195 Fax: 773-935-5613 www.edgelighting.com info@edgelighting.com 3RE-WH




904-3RE-01

## Installation Instructions for **3" Rectangle Canopy Cover**


## **IMPORTANT INFORMATION**


- This product is ETL listed for indoor dry locations.
- This product can only be installed to a 4.5" X 2.5" rectangle electrical box (gangbox).

SAVE THESE INSTRUCTIONS!



## **Install the Canopy Cover**

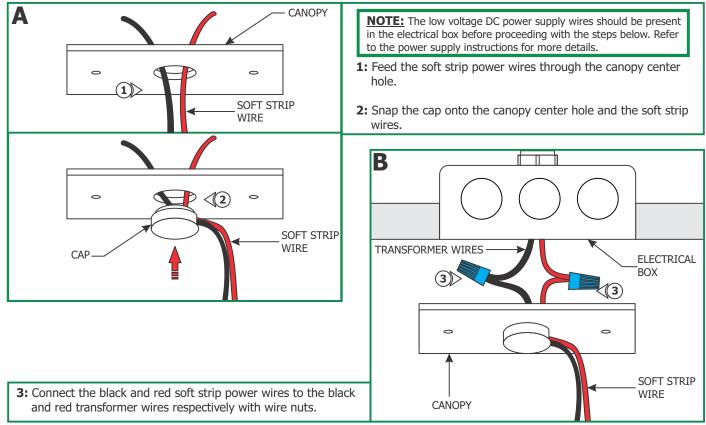

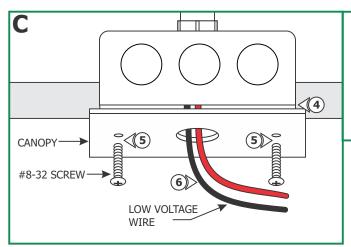

- **4:** Place all wire and wire nut connections inside the electrical box.
- **5:** Secure the canopy to the electrical box with the two #8-32 provided screws.
- **6:** Refer to the instructions provided with the soft strip to connect the power to soft strip.