

1718 W. Fullerton Ave Chicago, IL 60614 Tel: 773-770-1195 Fax: 773-935-5613 www.edgelighting.com info@edgelighting.com



Intertek

904-M-RCS-03

Installation Instructions for **Pre-Bent Monorail**

IMPORTANT INFORMATION


- This product is ETL listed for indoor dry locations.
- Monorail is bendable horizontally to a radius as small as 6".
- The product is intended to be used with Edge Lighting Monorail systems only.

SAVE THESE INSTRUCTIONS!



Connect the Pre-Bent Monorail Sections with the Conductive Connectors

A STRAIGHT CONDUCTIVE CONNECTORS ONE PRE-BENT MONORAIL SECTION	 Push the Monorail conductive connector pins completely into one pre-bent Monorail section. <u>Make sure this Monorail</u> <u>section is secured with the standoffs (Refer to the</u> <u>instructions provided with the standoffs)</u>. Push the other pre-bent Monorail section completely onto the Monorail straight conductive connector pins and simultaneously connect the pre-bent Monorail to the standoffs.
	Connect the Pre-Bent Monorail section with the Isolating Connectors
 Push the straight isolating connectors completely into one pre-bent Monorail section end. <u>Make sure this pre-bent</u> <u>Monorail section is secured with the standoffs (Refe</u> to the instructions provided with the standoffs). 	B ISOLATING CONNECTOR

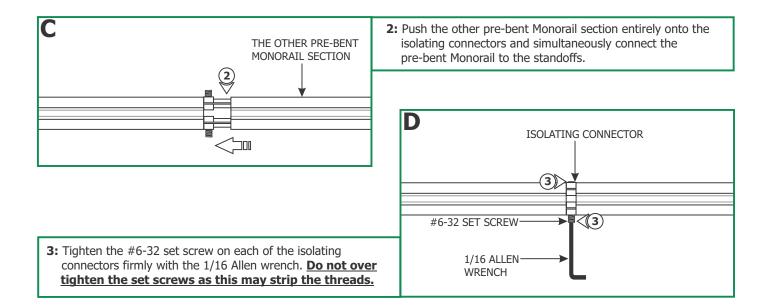

Connecting a Pre-Bent Circle Sections

