# GENERATION LIGHTING PENDANTS

# **GENERAL PRODUCT INFORMATION:**

These fixtures are intended to be installed utilizing NEC compliant junction hoves

This product is safety listed for damp locations.

This instruction shows a typical installation.

### **CAUTION - RISK OF FIRE**


This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

Use minimum 90°c supply conductors.

# **SAVE THESE INSTRUCTIONS!**



# Install the Fixture

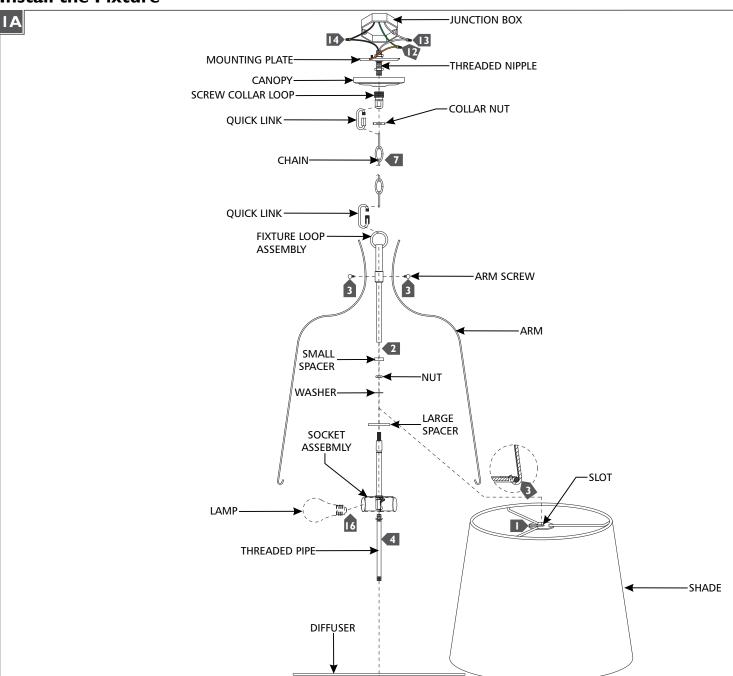

Place the large spacer onto the socket assembly, slide the shade slot onto the socket assembly, place the washer onto the socket assembly, and secure them together using the nut.

**>**₫.

- Place the small spacer over the nut, then screw the fixture loop assembly onto the socket assembly.
- 3 Install the top of the arms to the fixture loop assembly using the arm screws, then hook the bottom of the arm underneath the shade.
- 4 For Models AP1253 and AP1264 Only: Screw the threaded pipe to the bottom of the socket assembly.
- If necessary, screw the short end of the threaded nipple tightly onto the mounting plate, then screw the screw collar loop onto the threaded nipple.
- **6** Secure the mounting plate to the junction box.
- 7 Determine the wanted height of the fixture and remove a portion of the chain from the bottom by opening a link with pliers.

FINIAL .

- 8 Install a quick link to bottom end of the chain, then secure the link onto the fixture loop.
- 9 Unscrew the collar nut from the screw collar, then install the collar nut and the canopy onto the chain (in that order).
- IO Install a quick link onto the remaining end of the chain, then secure the quick link onto the canopy loop.
- Weave the cord through the chain, canopy loop, and canopy, threaded nipple, and out of the junction box. Trim the cord leaving enough to make electrical connections.
- [2] Connect the fixture to a suitable ground in accordance to local electrical codes.
- Connect the white fixture wire (square and/or rigid) to the neutral power line wire with a wire nut.
- [4] Connect the black fixture wire (round and/or smooth) to the hot power line wire with a wire nut.
- 15 Neatly place all the wires into the junction box, place the canopy onto the mounting plate, and secure it in place by screwing the collar nut tightly onto the screw collar loop.
- [6] Screw the lamps into the sockets. Refer to the label on the lamp socket for Max Wattage information.
- Place the diffuser onto the threaded pipe and secure it in place by screwing the finial onto the threaded pipe.