

## MARLOWE SMALL FLUSH MOUNT

LF1081

## General Product Information



Product Warranty

FCC Statement

## Suggested/Required Tools



## Safety Information

## CAUTION-RISK OF FIRE


This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.


USE MINIMUM 90°C SUPPLY CONDUCTORS.



Turn off electrical current at the source before working with any lighting fixture or portable lamp.

Install and use this product in adherence with local electrical codes and regulations.

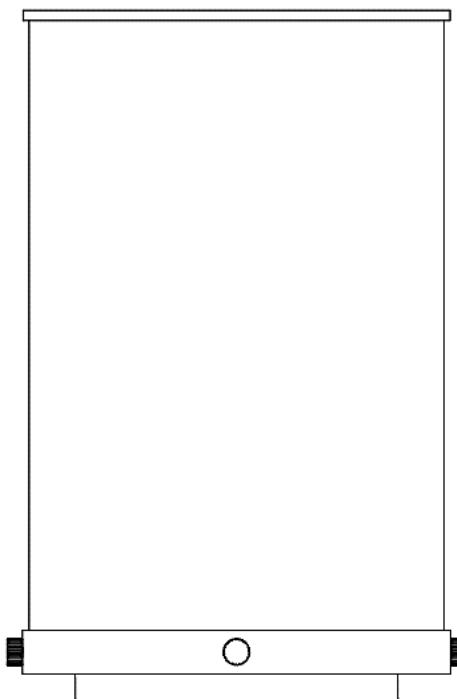

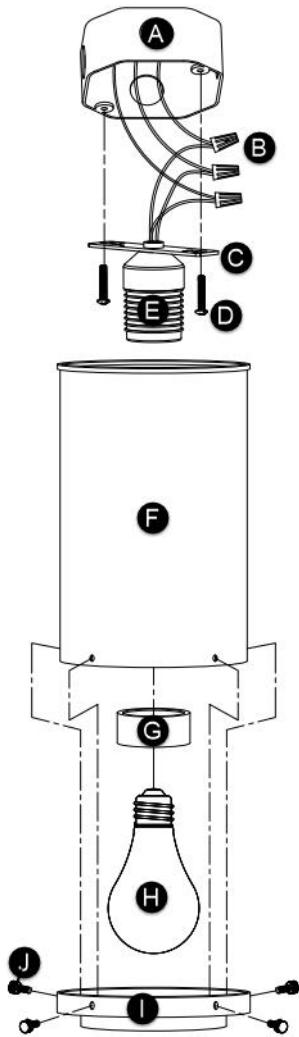

## Fixture Parts

- A. Junction Box
- B. Wire Nut Connections
- C. Mounting Bar
- D. Mounting Screws
- E. Socket
- F. Shade
- G. Socket Ring
- H. Bulb (Not Included)
- I. Diffuser
- J. Fixture Screws

## INSTRUCTIONS

### I. Preparing the Fixture

1. Separate the mounting bar from the fixture backplate.
2. Install the mounting bar to the junction box and secure it using the mounting screws.

### II. Wiring the Fixture

1. Safety first! Locate the circuit breaker and switch it off to cut off the power supply to the relevant circuits to ensure there's no electricity running through the wiring.
2. In accordance with local electrical codes, connect the fixture ground wire (bare copper or silver wire) to suitable ground. This may be a green ground screw on the mounting plate, which the ground wire should be tightly wrapped around or a house wire (green or bare copper wire without insulation).
3. Twist the bare ends of the following pairs of wires together using a wire nut to secure a connection:
  - a) Hot fixture wire to hot power line wire
  - b) Neutral fixture wire to neutral power line wire
4. Carefully tuck all the wires into the junction box.

### III. Installing the Fixture

1. Install the shade over the socket and secure it with the socket ring.
2. Screw the bulb into the socket. Refer to the socket label for max wattage information.
3. Affix the diffuser to the shade using the fixture screws to complete the installation.