LED Vanity



START FROM HERE

- Make sure power is completely off at the fuse box.
- · Have your fixture installed by a qualified licensed electrician
- · Prepare everything in a clear area.
- Wear gloves at all times during this installation.
- Read instructions carefully before you start assembly.
- Keep this instruction sheet for future reference.

Technical Support: 1-855-855-8926

Please Note:


· For dimming, a TRIAC type of dimmer is required.


(Octagon junction box install)

- 1. Remove the fixture from its original packaging. Next, remove the mounting plate (1c) from the canopy (2b) by removing the screws (2a). Install a backplate (1e) to the mounting plate (1c) with screws (1f) provided in hardware package. Secure the universal mounting plate (1g) and mounting plate (1c) with backplate to the electrical junction box (1a) with screws (1d) provided in the hardware package.
- 2. You are now ready to mount the canopy to the mounting bar. First connect all wires (1b) correctly black to black "L", white to white "N" and the ground wire with provided marrettes from the hardware package. Attach the canopy (2b) to mounting plate (1c) and secure with screws (2a)
- **3.** You have now completed the installation of your fixture, enjoy.

(Single gang box install)

- 1. Remove the fixture from its original packaging. Next, remove the mounting plate (1c) from the canopy (2b) by removing the screws (2a). Secure the mounting plate (1c) to the electrical junction box (1a) with screws (1d) provided in the hardware package.
- 2. You are now ready to mount the canopy to the mounting bar. First connect all wires (1b) correctly black to black "L", white to white "N" and the ground wire with provided marrettes from the hardware package. Attach the canopy (2b) to mounting plate (1c) and secure with screws (2a)
- **3.** You have now completed the installation of your fixture, enjoy.

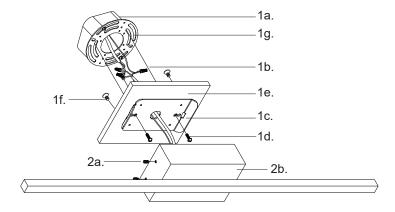

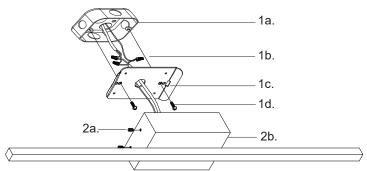

LED Wall Sconce

WS18224

START FROM HERE

- Make sure power is completely off at the fuse box.
- Have your fixture installed by a qualified licensed electrician
- Prepare everything in a clear area.
- Wear gloves at all times during this installation.
- · Read instructions carefully before you start assembly.
- Keep this instruction sheet for future reference.


Technical Support: 1-855-855-8926

Please Note:

- This Kuzco LED fixture comes with pre-wired LED module(s)
- Unless instructed, Do Not touch any part of the LED module(s) as any unnecessary contact with the module could cause permanent damage
- For dimming, an ELV (Electronic Low Voltage) or TRIAC type of dimmer is required

Octagon Junction Box Install

- 1. Remove the fixture from its original packaging. Next, remove the cover plate (2d) and backplate (2f) assembly from the canopy (2a) by removing the set screws (2e) with allen key.
- 2. Ensure that the backplate (2f) is secured to the cover plate (2d) using the cover plate screws (2b). See Illustration 1.
- 3. Install universal mounting plate (1c) to the electrical junction box (1a) using the junction box screws (1e).
- Secure the cover plate (2d) and backplate (2f) assembly to the universal mounting plate (1c) using the mounting screws (2g).
- **5.** Connect all wires correctly: black to black "L", white to white "N" and ground wire to ground using the included wire nuts (1b)
- **6.** Attach the canopy (2a) to the backplate (2f) and secure with set screws (2e) and allen key.

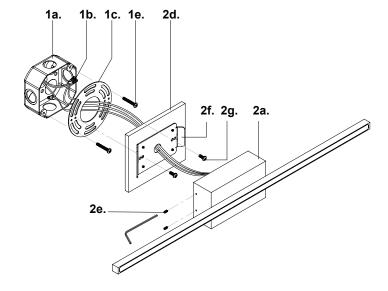

Single Gang Box Install

- 1. Remove the fixture from its original packaging. Next, remove the cover plate (2d) and backplate (2f) assembly from the canopy (2a) by removing the set screws (2e) with allen key.
- 2. The cover plate (2d) and the universal mounting plate (1c) are not needed for single gang box installation. Only the backplate (2f) is needed for single gang box installation. See Illustration 1.
- **3.** Install the backplate (2f) to the electrical junction box (1a) using the junction box screws (1e).
- **4.** Connect all wires correctly: black to black "L", white to white "N" and ground wire to ground using the included wire nuts (1b).
- **5.** Attach the canopy (2a) to the backplate (2f) and secure with set screws (2e) and allen key.


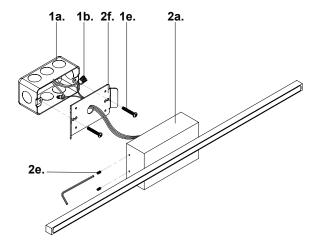


Illustration 1: Cover Plate + Backplate Asembly



*For Single Gang Box Installation, the backplate (2f) can be detached from the cover plate (2d) by removing the cover plate screws (2b).

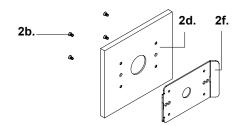