



1718 W. Fullerton Chicago, IL 60614
 Ph: 773.770.1195 • Fax: 773.935.5613
 www.PureEdgeLighting.com • info@PureEdgeLighting.com
 © 2016 PureEdge Lighting. All Rights Reserved.

Installation Instructions for **Verge Corner, TruColor™ RGBTW**

VGCO--

IMPORTANT INFORMATION


- This instruction shows a typical installation.
- It is recommended more than one person assist in this installation.
- This product must be installed by a qualified electrician and in accordance with local electrical codes.

SAVE THESE INSTRUCTIONS!



Section One: Install the Remote Power Supply

A


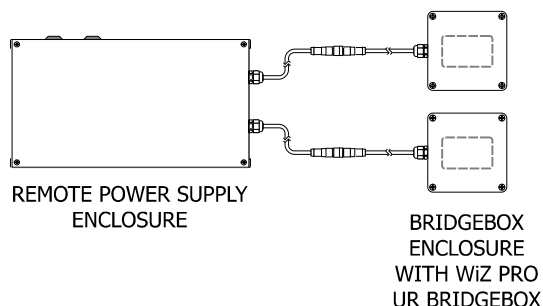


NOTE: Before beginning any electrical work, ensure that power to the electrical box is turned off.

- 1:** Remote power supply must be installed within 40ft of the junction box. Bridgebox enclosure must be minimum 2ft away from remote power supply enclosure. Refer to the instructions and wiring diagram provided with the remote power supplies.


Section Two: Install the Junction Box

B

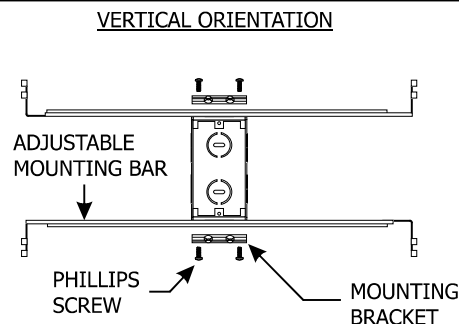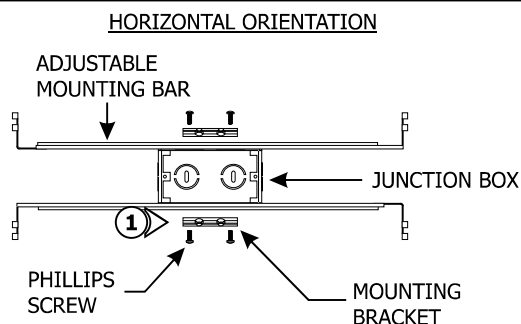

NOTE: The adjustable mounting bars mount to studs that are spaced 13" to 24" apart.

- 1:** Mount each adjustable mounting bar to one side of the junction box (mounts to any side of the housing depending on the orientation of the channel) and secure them with the mounting brackets and two Phillips screws provided.

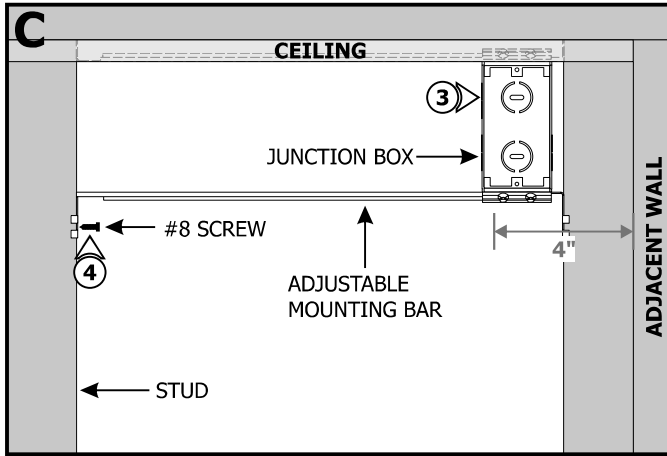


NOTE: The junction box must be installed at least 4" from the wall when using the provided backer plate.

2: Select the location between the two studs for the junction box to be mounted.


3: Place the adjustable mounting bars between the studs.

4: Make sure the lips on the adjustable mounting bars are against the studs. Secure the adjustable bars to the studs with the #8 screws.

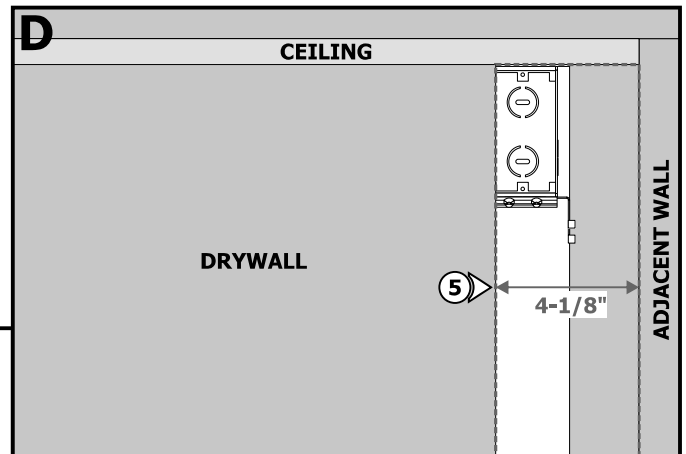

5: Cut the drywall 4-1/8" from the adjacent wall.


6: Mount the drywall to the studs. Mark the stud locations on the drywall for reference.

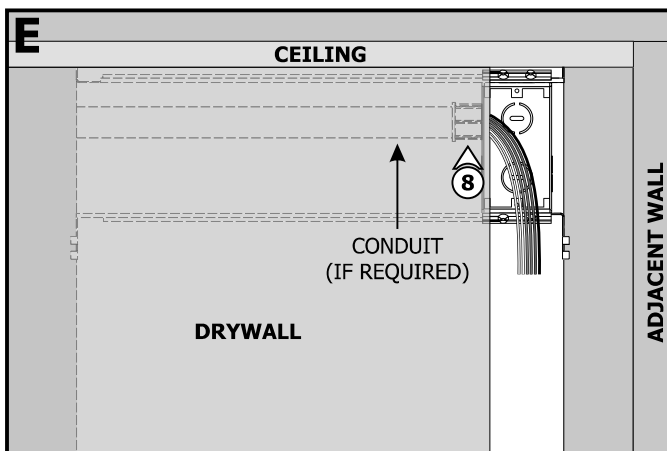

7: Remove a knockout to install the power line conduit.

8: Install the conduit (if required by local electrical codes) and run the proper sized low voltage 24VDC power wires coming from the Bridgebox enclosure to the junction box.



9: Refer to the instruction provided with the power supply along with the wiring diagram for proper wiring.

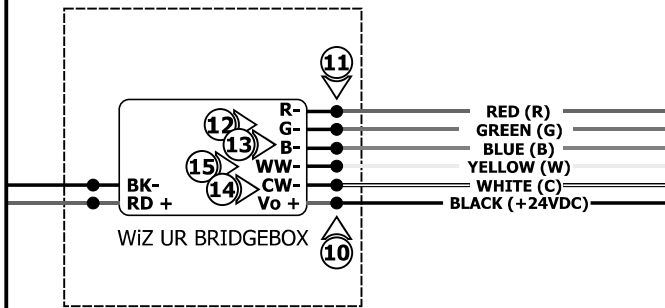F

- 10:** Connect the black "+" power connector wire to the "Vo+" red wire of the Bridgebox using a wire nut.
- 11:** Connect the red "R" power connector wire to the "R-" black wire of the Bridgebox using a wire nut.
- 12:** Connect the green "G" power connector wire to the "G-" black wire of the Bridgebox using a wire nut.
- 13:** Connect the blue "B" power connector wire to the "B-" black wire of the Bridgebox using a wire nut.
- 14:** Connect the white "C" power connector wire to the "CW-" black wire of the Bridgebox using a wire nut.
- 15:** Connect the yellow "W" power connector wire to the "WW-" black wire of the Bridgebox using a wire nut.


- 16:** Place the wire nut connections into the junction box, leaving the power connector free.

CAUTION: Unroll the entire LED strip from the reel and use the power connector to power the strip making sure there is no outage before continuing with the installation. Afterwards, carefully roll the LED strip loosely back into the reel.

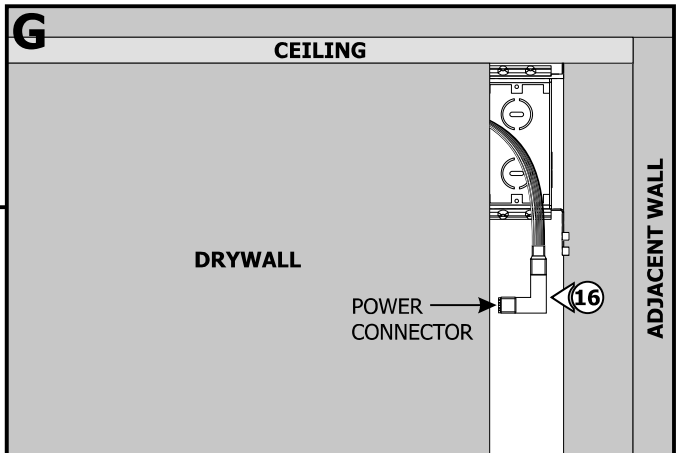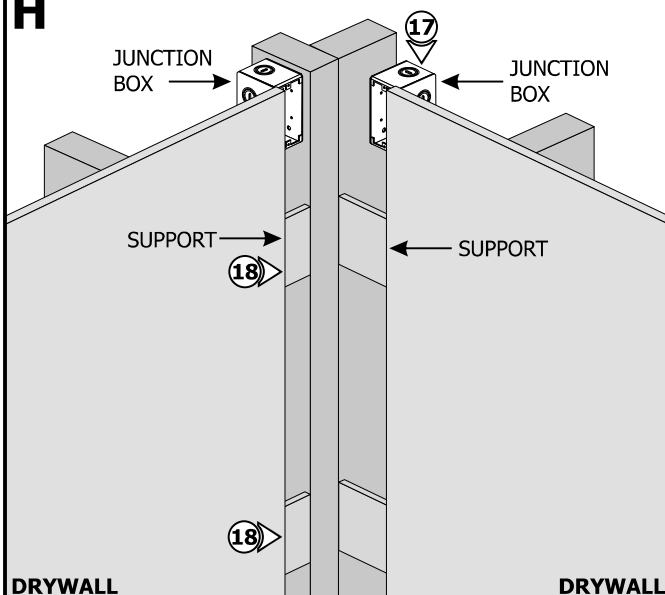**H**

- 17:** Repeat steps 1 through 16 to install the junction box and drywall on the adjacent wall.
- 18:** For areas with lots of vibrations, use shim wood behind drywall and against studs as supports or install 2"x4" cross brace supports as needed (suggested spacing is 32" to avoid cracking of plaster). Mark the locations of the supports on the drywall for reference.


Section Three: Install the Backer Plate and Channel

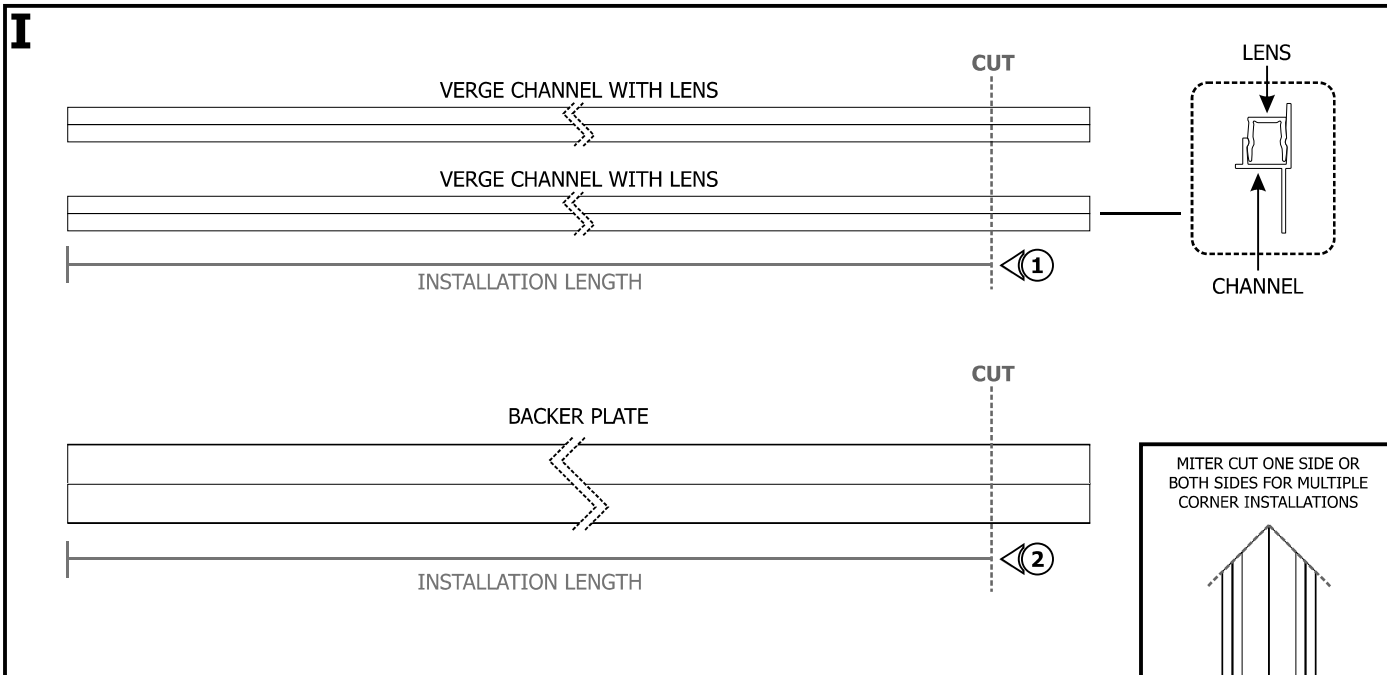

NOTE: For installations on corners, refer to steps 1 and 2 to miter cut the channel with lens and backer plate to match corner angles. In a 90° corner installation, each channel section is cut at a 45° angle to form a complete corner.


1: Snap the lens into the channel **BEFORE** cutting the channel to length. This ensures a proper fit after installation. Measure the desired lit installation length. Use a miter saw to cut the channel and lens to match the installation length.

2: Measure and cut the backer plate to match the desired lit installation length.

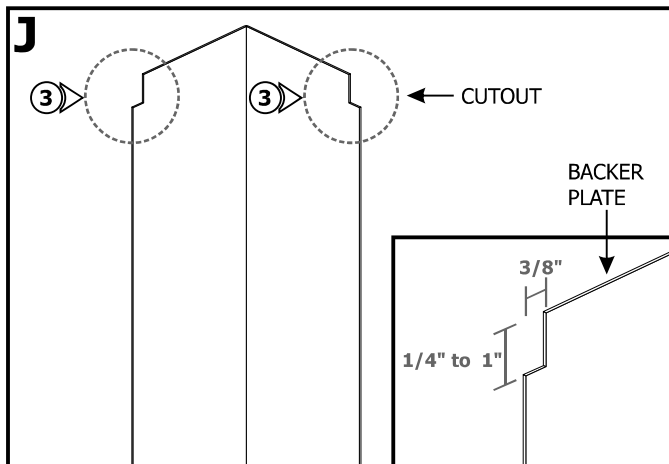

CAUTION: It may be necessary to remove material from the stud, backer plate, Verge channel, or lens to route power to the installation. Consult installation design when considering routing power.


3: Use a Dremel or other appropriate tool to make a 1/4" to 1" x 3/8" cutout on the backer plate that will be placed over the junction boxes.

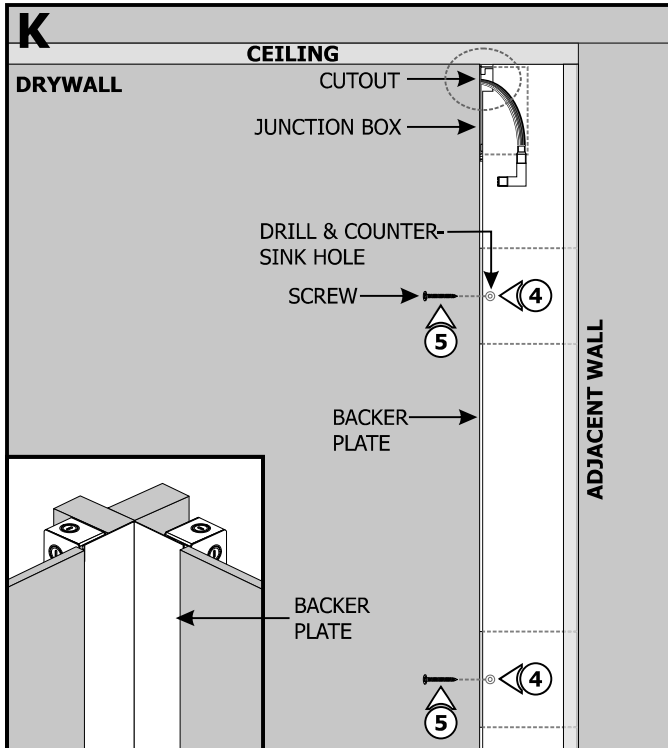

4: Using the marked locations on the drywall, carefully make holes to the backer plate using the provided square drill with counter sink bit. Ensure the top edge of the backer plate is flush with the ceiling or wall.



5: Secure the backer plate to the studs or supports with the #6 screws using the provided square recess bit.

6: Apply caulk or plaster to the backer plate to cover seams, and then paint the backer plate. For best results, use matte paint for finishing the backer plate.

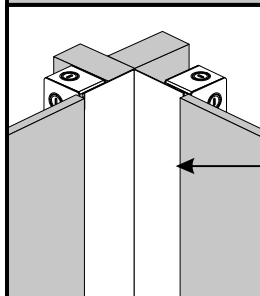

!CAUTION! It may be necessary to remove material from the stud, backer plate, Verge channel, or lens to route power to the installation. Consult installation design when considering routing power.


7: Use a Dremel or other appropriate tool to cut away a 1/4" to 1" section on the channel that will be placed over the electrical access junction box.

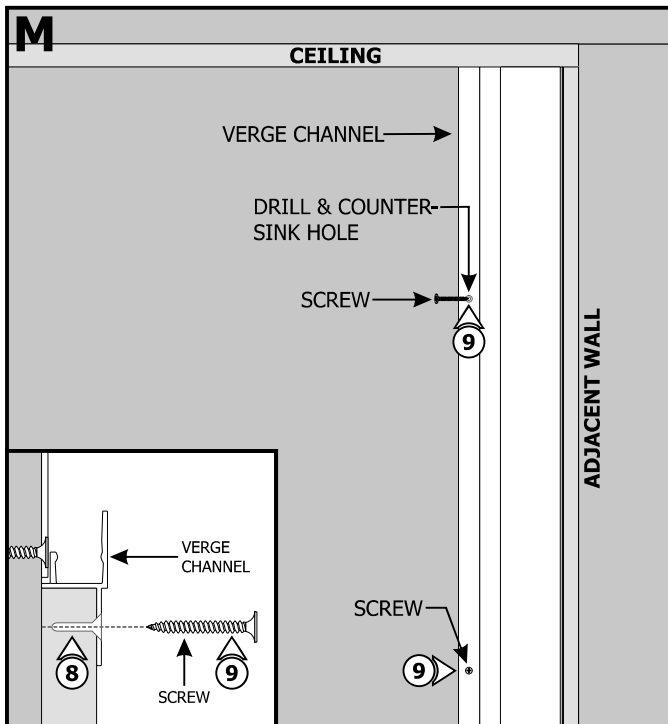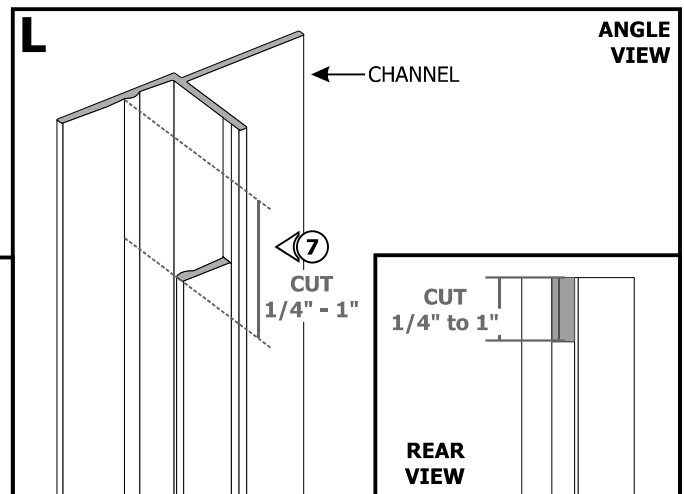

8: Using the marked stud locations on the drywall, carefully make holes to the Verge Channels using the provided square drill with counter sink bit.

9: Properly secure the channels to the drywall with the #6 screws using the provided square recess bit. Suggested screw spacing is 6". Ensure all screw heads are flush with the channel surface.


Section Four: Plaster, Sand and Paint

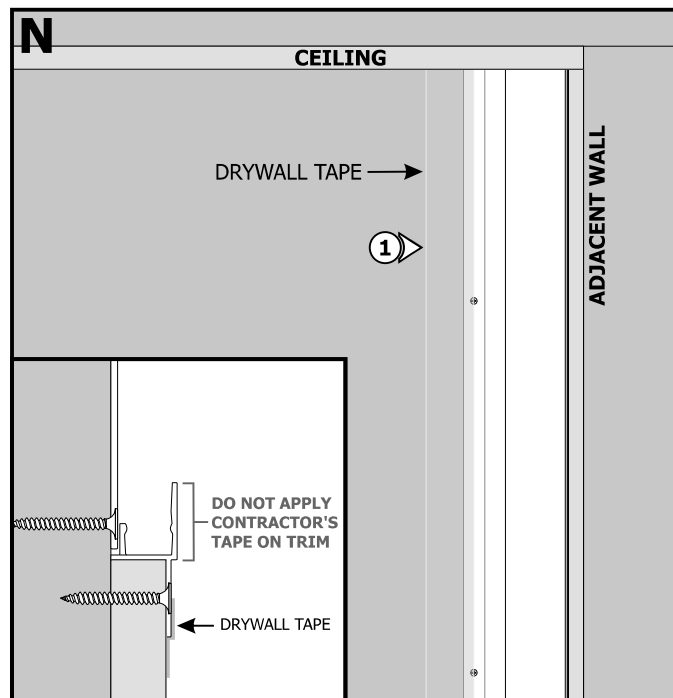

NOTE: For areas with lots of vibration, it is suggested to use Durabond to avoid cracking of plaster.


NOTE: Do Not use premixed joint compound "Soft Mud." No use compuesto para juntas premezclado "Soft Mud."

- 1:** Must apply drywall tape (Ultra-Thin drywall tape suggested) along edges of channel to prevent cracking of plaster after installation. **DO NOT** overlap strips of drywall tape. **DO NOT** apply blue contractor's tape on the channel trim.

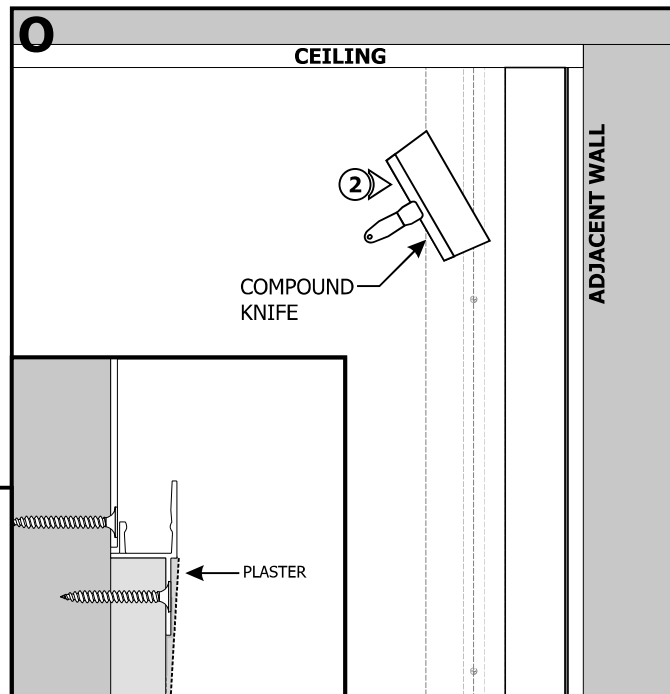

NOTE: Recommended plaster method: 1st Coat - Durabond 25 with 8" Blade, 2nd Coat - Easy Sand 45 with 10" Blade, 3rd Coat - with 12" blade. Taper the plaster to blend with the drywall.

- 2:** Use a compound knife for a smooth compound spread. Plaster the channel flange edges to the wall & fill the screw holes.

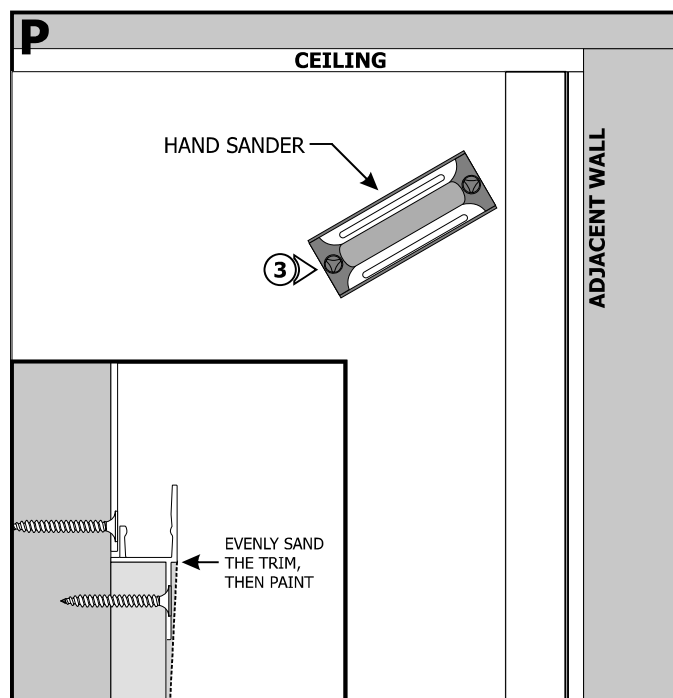


- 3:** Evenly sand the plaster so that there are no seams and then paint the wall.

- 4:** Clean the inside of the channel surface with alcohol to remove any dust or debris before continuing.

Section Five: Install the LED Strip

Q

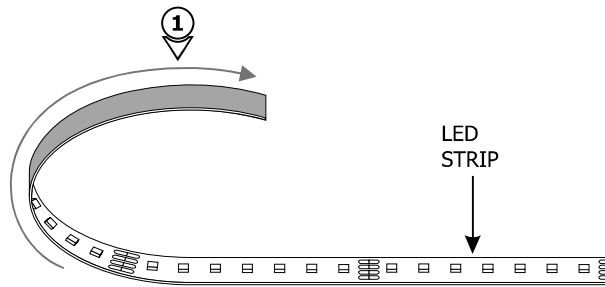


IMPORTANT: LED strip may not properly adhere to channel surface unless the channel is cleaned with alcohol prior to application.

1: Gently uncoil the LED strip before applying to the channel otherwise the strip may lift off of the surface.


2: Place the power connector into the channel where the LED Strip will be installed.

3: Align the "+" wire side of the power connector with the "+" marking on the LED Strip. Push the pins of the LED Strip into the Power Connector.

R

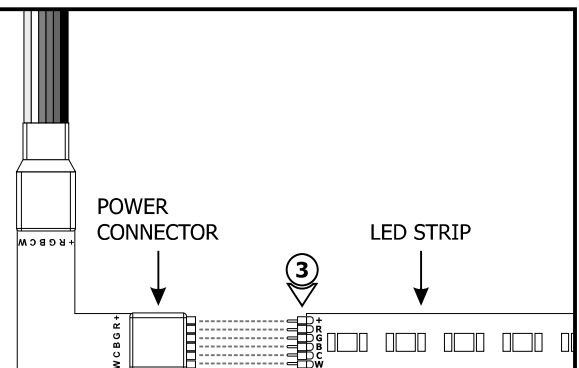


S

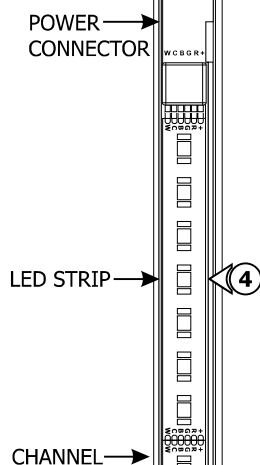

4: Carefully remove the backing from the LED strip, making sure not to remove the tape from the LED strip. Firmly press down the adhesive portion of the LED strip onto the channel surface while removing the rest of the backing, making sure there are no air bubbles that can cause surface irregularities.





5: Repeat steps 1 through 4 to install the LED strip on the other side.

T

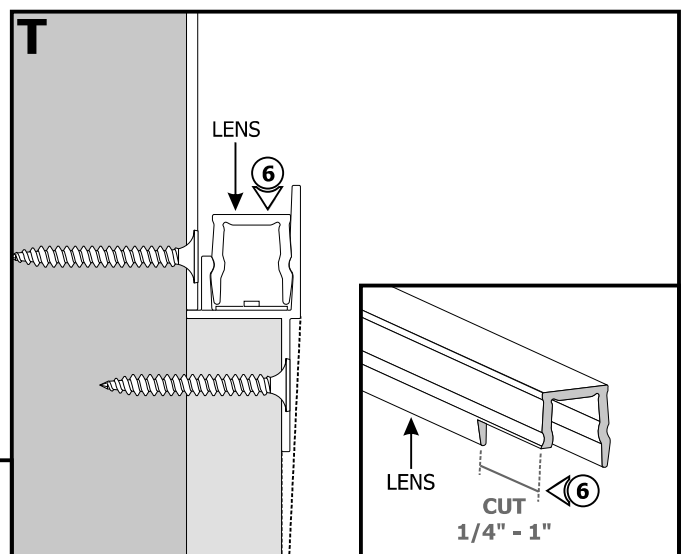


6: If necessary, remove material from the lens to allow room for the power connection. Snap the lens into the channel. Ensure the lens is fully seated.

IMPORTANT INFORMATION REGARDING INSTALLATION AND REWORK OF SOFT STRIP LED

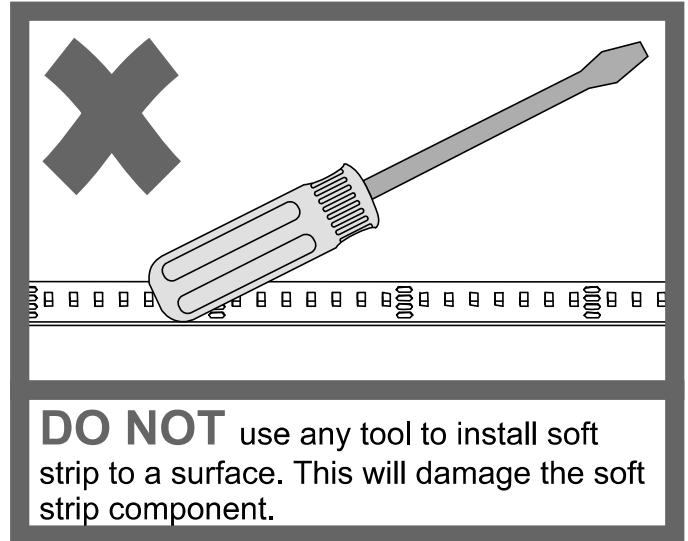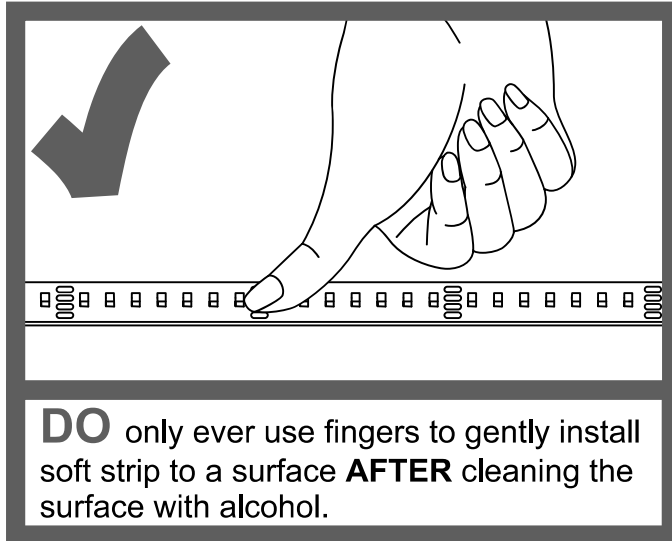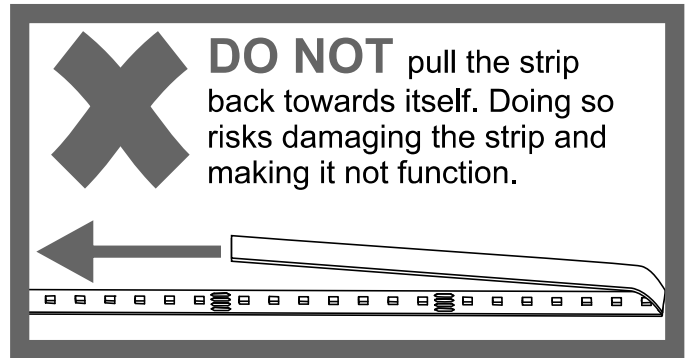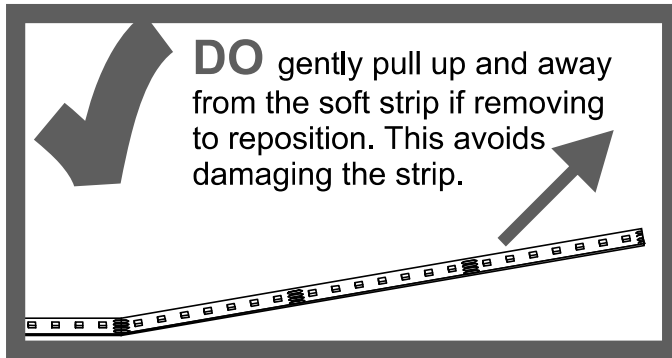

Relocating LED Strip (Optional)

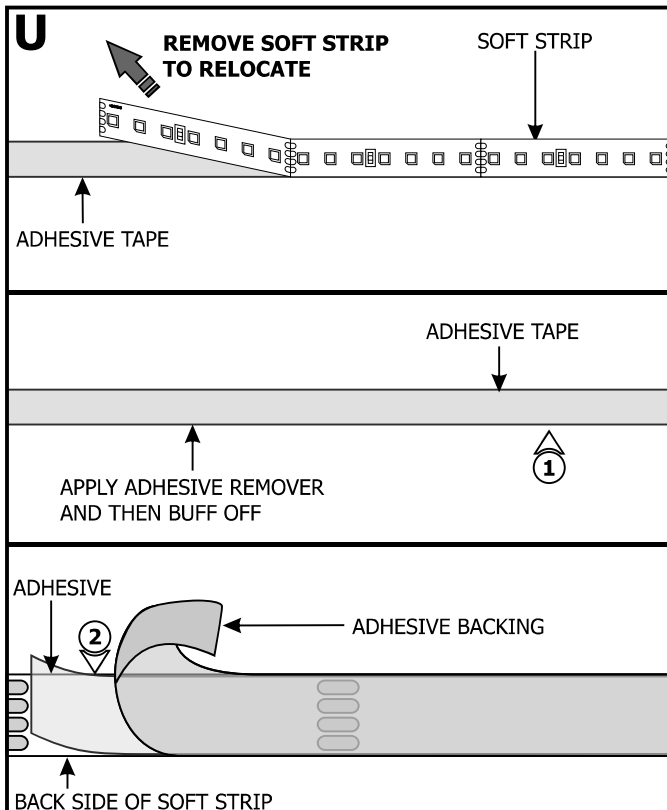

NOTE: If relocating the installed soft strip, make sure that the adhesive tape on back of the soft strip covers the entire strip. The adhesive tape isolates the strip from the installation surface. Damaged or inconsistent adhesive tape may cause the contacts on the back of the strip to come in contact with the conductive heat sink which will cause the strip to short and burn. Call Edge Lighting to get replacement adhesive tape and/or optional aluminum heat sink tape (SS-HR-F).

- 1:** To remove tape residue from back of the strip, apply WD-40, Goo Gone, or a mixture of warm water and lemon oil to the corner of a clean, dry towel. Gently buff the area containing the adhesive residue until it is completely removed.
- 2:** Gently remove a few inches from one side of the tape backing. Attach the adhesive tape to the back of the soft strip and apply moderate pressure to affix the tape. Continue this step a few inches at a time until the entire adhesive tape is attached to back of the soft strip.
- 3:** Refer to Section Five to reinstall the LED strip.

General Wiring Diagram

