Rae Bath

1.2

700BCRAER





GENERAL PRODUCT INFORMATION:

This fixture is intended to be installed utilizing NEC compliant junction boxes with a minimum depth of 2".


Minimum volume of the junction box must be 6 cubic inches (98 cubic centimeter).

Suitable for damp locations.


CAUTION - RISK OF FIRE This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

Use minimum 90°c supply conductors.

Install the Fixture

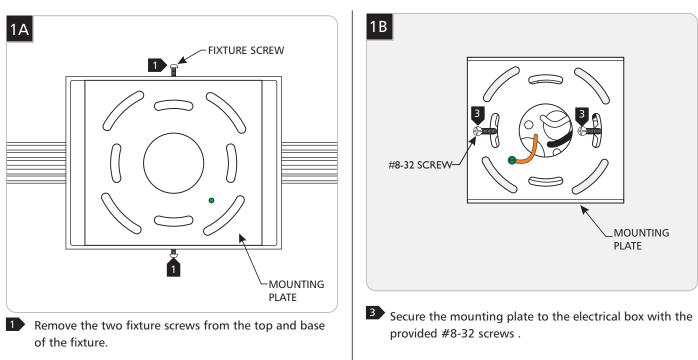


2 Remove the mounting plate from the back of the fixture.

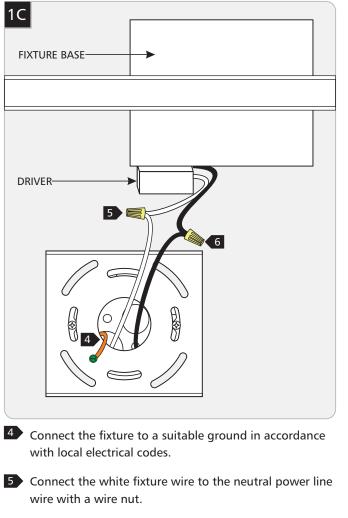



6 Connect the black fixture wire to the hot power line wire with a wire nut.

Properly place the driver, wires, and wire nut connections into the junction box.

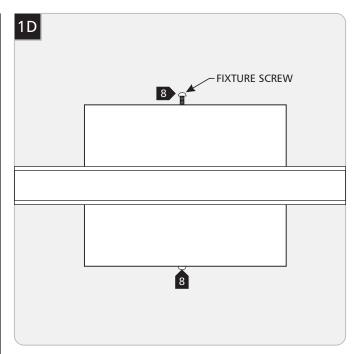

8 Mount the fixture by sliding it back onto the mounting plate and reinstalling the two fixture screws (reversal of figure 1A).

SAVE THESE INSTRUCTIONS!



847.410.4400 www.techlighting.com © 2016 Tech Lighting, L.L.C. All rights reserved. The "Tech Lighting" graphic is a registered trademark of Tech Lighting, L.L.C. Tech Lighting reserves the right to change specifications for product improvements without notification.

A Generation Brands Company