

Lody 18, 20, and 24 Chandelier

700LDY18, 700LDY20, 700LDY24

1.0



CAUTION - RISK OF FIRE
 This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.
 Use minimum 90°c supply conductors.

GENERAL PRODUCT INFORMATION:

This product is suitable for damp locations.

These fixtures are intended to be installed utilizing NEC compliant junction boxes.

This product can be dimmed with most ELV or TRIAC dimmers.

This instruction shows a typical installation.




Two Person Installation Recommended



7400 Linder Ave, Skokie, IL 60077
847.410.4400

www.techlighting.com


© 2019 Tech Lighting, L.L.C. All rights reserved. The "Tech Lighting" graphic is a registered trademark of Tech Lighting, L.L.C. Tech Lighting reserves the right to change specifications for product improvements without notification.
A Generation Brands Company

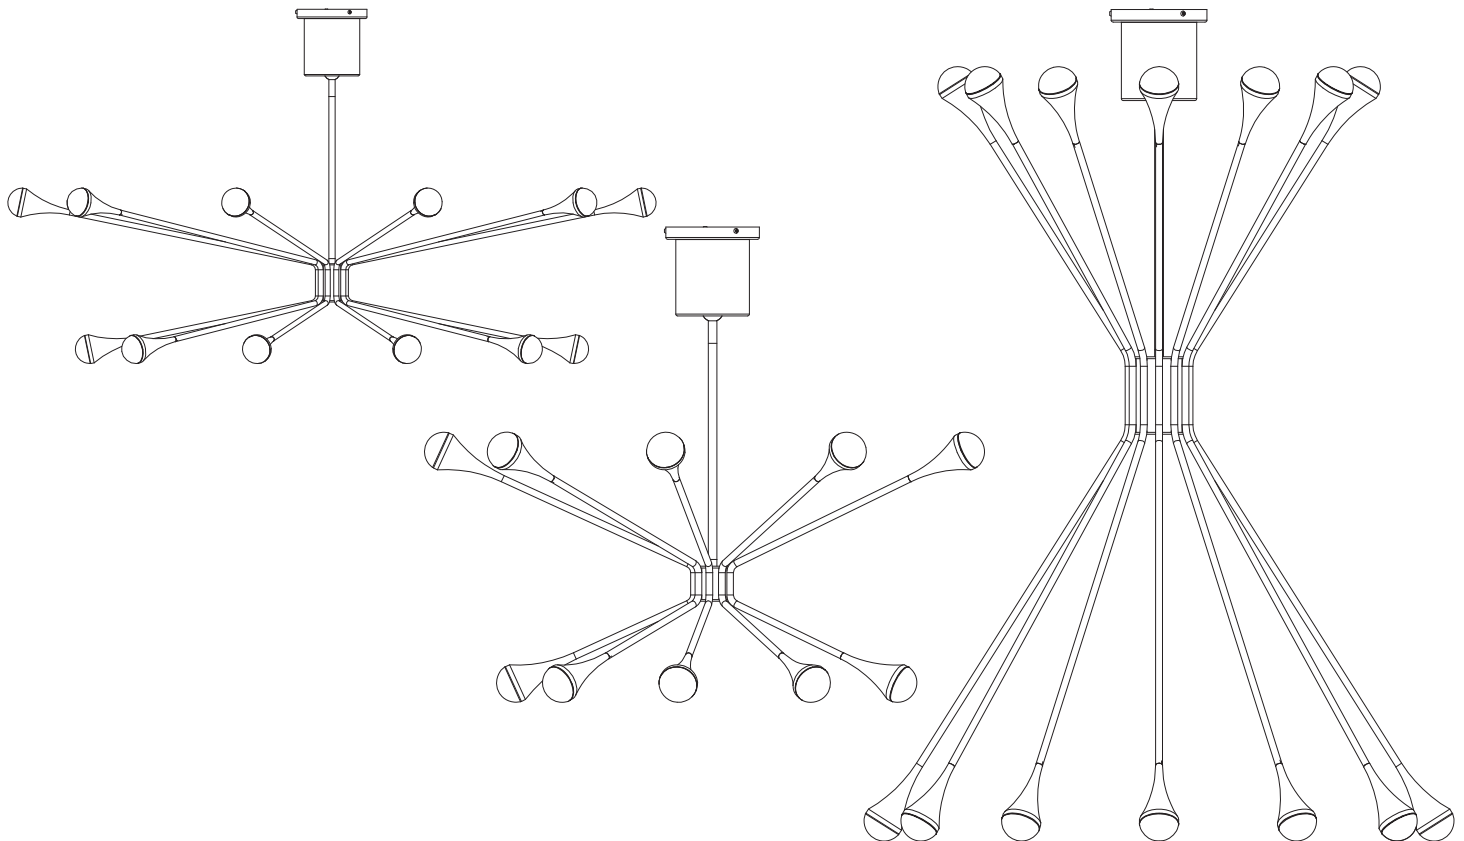

SAVE THESE INSTRUCTIONS!

Install the Fixture

1A

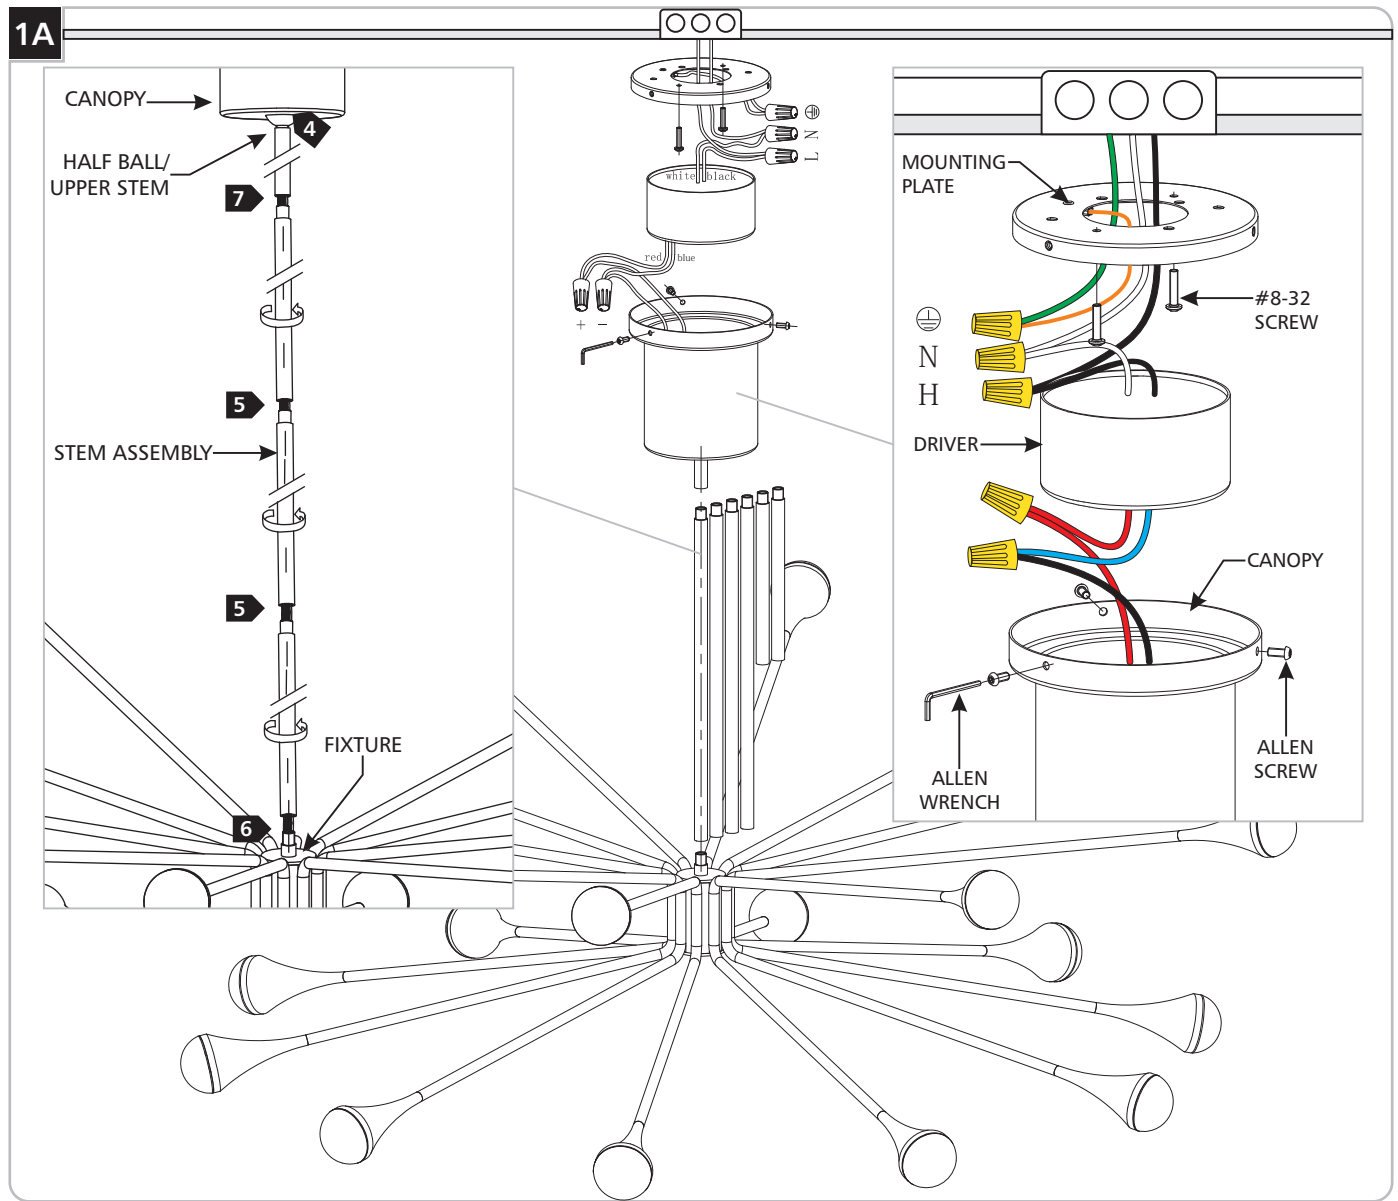

- 1 Remove all the canopy screws using the provided Allen Wrench.
- 2 Remove the mounting plate and driver from the canopy.
- 3 Secure the mounting plate to the electrical box with the #8-32 screws provided.
- 4 Feed the half ball/upper stem assembly through the top of the canopy.
- 5 Determine the desired height of the fixture using the provided stems and assemble them by screwing them together.
- 6 Feed the fixture wires through the stem assembly, then screw the stem assembly to the top of the fixture.
- 7 Feed the fixture wires through the stem and half ball assemblies, then screw the half ball/upper stem assembly to the stem assembly.
- 8 Connect the blue driver wire to the black fixture wire with a wire nut.
- 9 Connect the red driver wire to the red fixture wire with a wire nut.
- 10 Connect the fixture to a suitable ground in accordance with local electrical codes.
- 11 Connect the white driver wires to the neutral power line wire with a wire nut.
- 12 Connect the black driver wires to the hot power line wire with a wire nut.
- 13 Neatly place the driver, all wires, and wire nut connections inside the canopy, align the canopy holes with the mounting plate holes, and secure the canopy in place by tightening the Allen screws using the provided Allen Wrench.