

Esfera Chandelier

700ESF | 1.0

VISUAL COMFORT & Co.

MODERN COLLECTION

GENERAL PRODUCT INFORMATION:



This product is suitable for indoor locations.

This product can be dimmed with a standard electronic dimmer.


This instruction shows a typical installation.

CAUTION - RISK OF FIRE

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

Use minimum 90°C supply conductors.

SAVE THESE INSTRUCTIONS!

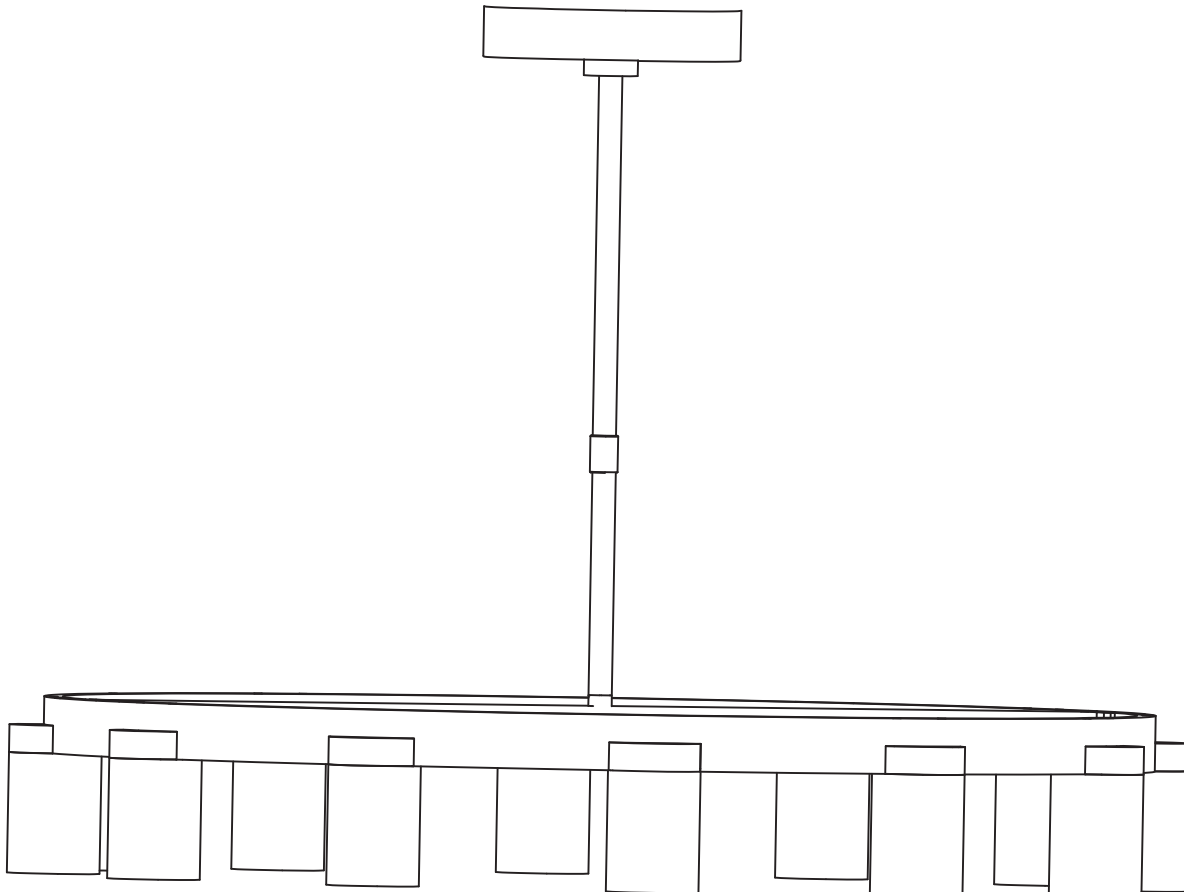

VISUAL COMFORT & Co.


7400 Linder Ave., Skokie, IL 60077

T 847.410.4400 | F

847.410.4500

www.visualcomfort.com

Install the Fixture

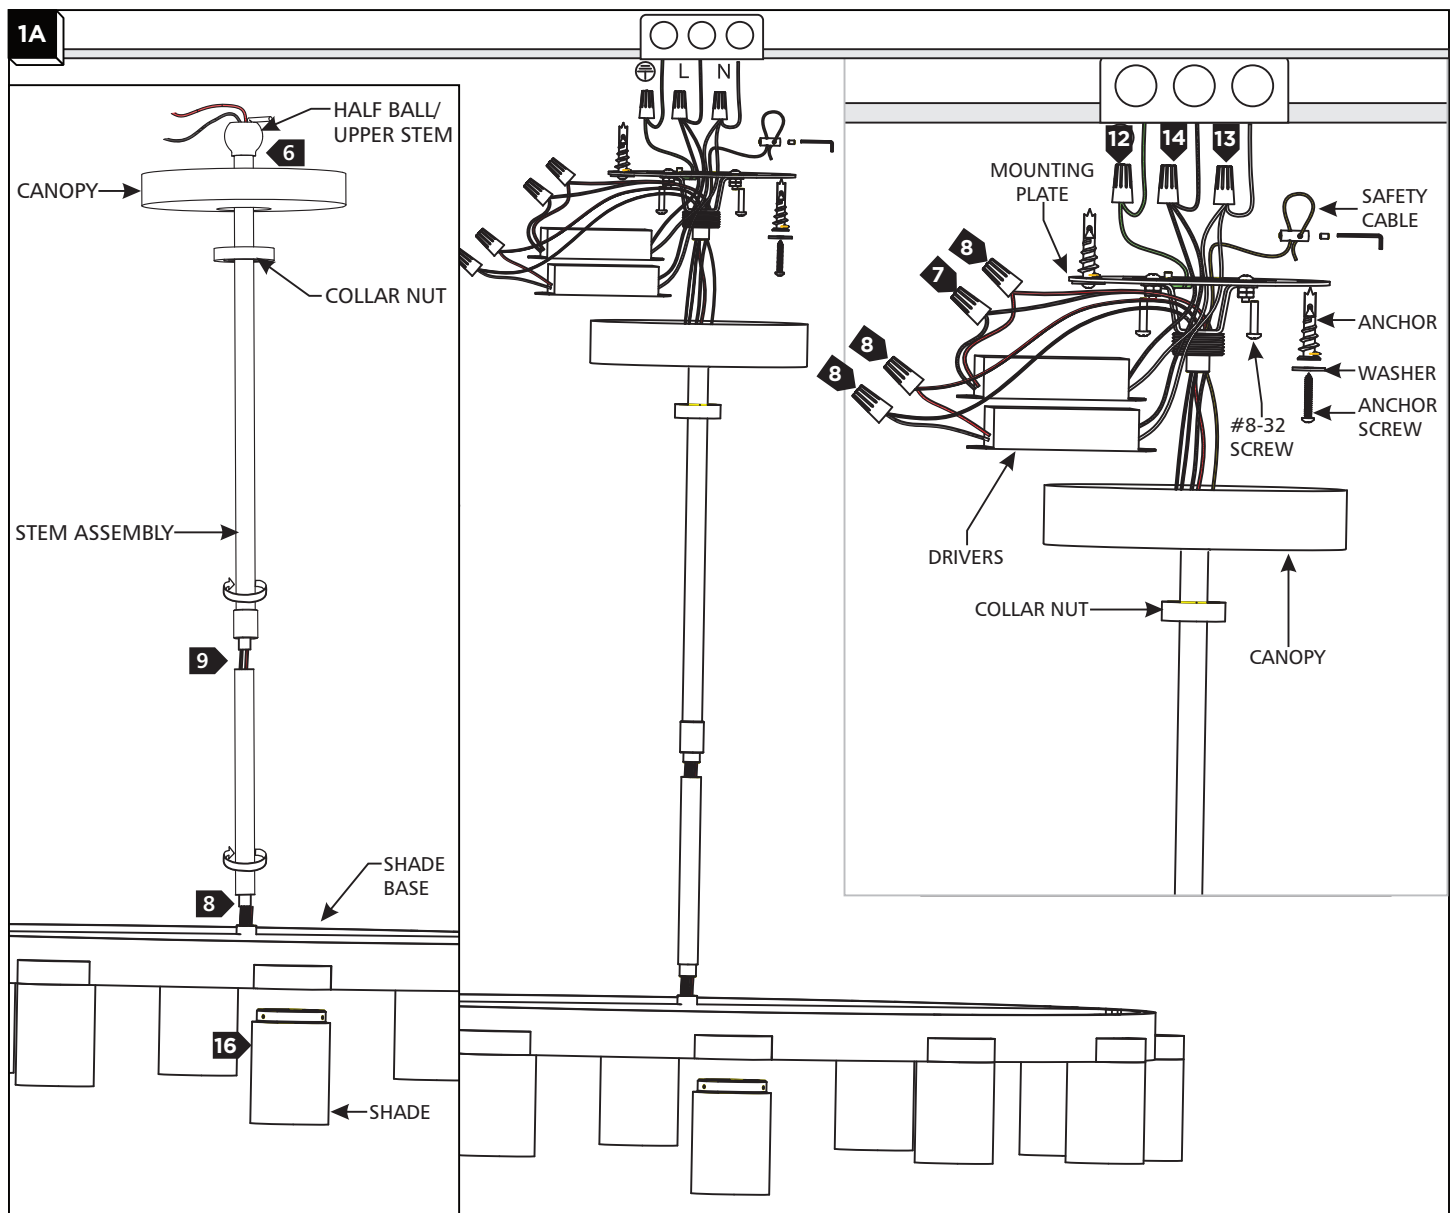

- 1 Remove the mounting plate and drivers from the canopy.
- 2 Temporarily Secure the mounting plate to the junction box with the provided #8-32 screws and mark the location of the anchors.
- 3 Remove the mounting plate and install the anchors by tapping them in to the drywall then screw them the rest of the way in with a screw driver.
- 4 Reinstall the mounting plate and secure with the anchor screws.
- 5 Install the safety cable to a support structure.
- 6 Determine the desired height of the fixture using the provided stems and half ball/upper stem and assemble them by screwing them together.
- 7 Slide the collar nut over the half ball/stem assembly.
- 8 Feed the fixture wires through the stem assembly, then screw the stem assembly to the top of the shade base.
- 9 Feed the fixture wires and half ball/stem assembly through the canopy, then seat the half ball into the mounting plate ensuring no wires are being pinched.
- 10 Connect the black driver wires to the black fixture wires with wire nuts.
- 11 Connect the red driver wires to the red fixture wires with wire nuts.
- 12 Connect the fixture to a suitable ground in accordance with local electrical codes.
- 13 Connect the white driver wires to the neutral power line wire with a wire nut.
- 14 Connect the black driver wires to the hot power line wire with a wire nut.
- 15 Neatly place the drivers, all wires, and wire nut connections inside the canopy, slide the canopy up to over the mounting bracket and secure in place with the collar nut.
- 16 Install the shade by screwing it into the shade base.