# **Crofton Vanity**

# DJV1031, DJV1032, DJV1033, DJV1034

#### 1.0

# Visual Comfort & Co.

STUDIO COLLECTION

#### **GENERAL PRODUCT INFORMATION:**

These fixtures are intended to be installed utilizing NEC compliant junction boxes.

This product is safety listed for damp locations.

Incandescent version may be dimmed with a standard incandescent dimmer.


LED version may be dimmed with a LED dimmer. Consult lamp manufacturer for additional information.

This instruction shows a typical installation.


### **CAUTION - RISK OF FIRE**

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

# **SAVE THESE INSTRUCTIONS!**

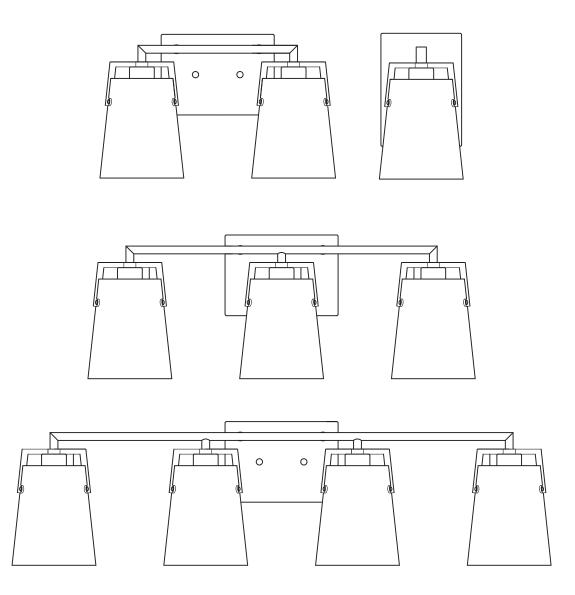

## Install the Fixture

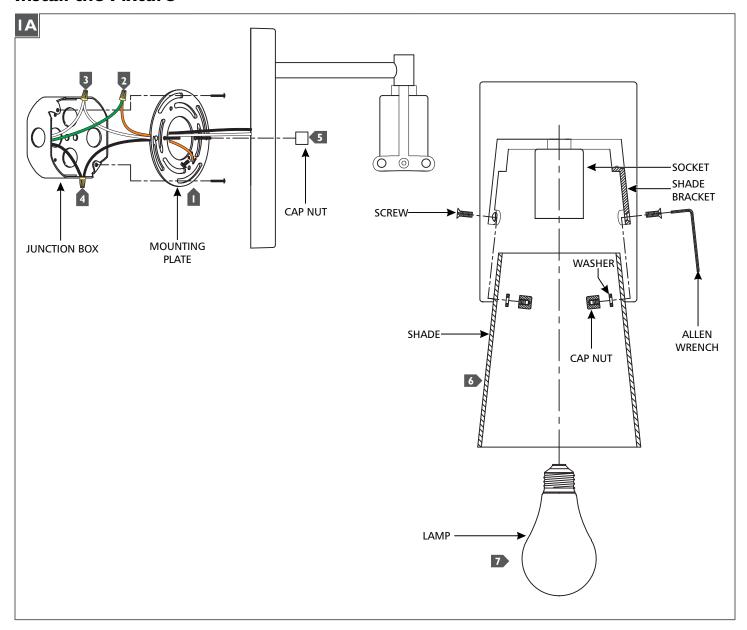

- I Secure the mounting plate to the junction box.
- 2 Connect the fixture to a suitable ground in accordance with local electrical codes.
- 3 Connect the white fixture wire (square and/or rigid) to the neutral power line wire with a wire nut.
- Connect the black fixture wire (round and/or smooth) to the hot power line wire with a wire nut.
- Neatly place all the wires into the junction box, place the fixture base onto the mounting plate, and secure it in place using the cap nuts.
- Install the shade(s) by sliding it over the socket and align the holes in the shade with the holes in the shade bracket. Place a washer and cap nut on the inside of the glass over the hole. Use the Allen wrench to tighten the shade screws to secure the shade(s) in place. Do not over tighten shade screws.
- Screw the lamp(s) into the socket(s). Refer to the label on the lamp socket for Max Wattage Information. nuts.