


## Installation Instructions for 17 Port Round Fast Jack Canopies


### IMPORTANT INFORMATION

- This product is dimmable with a low voltage electronic dimmer.
- This product can be installed to a 4" electrical box with round plaster ring, or to an octagon electrical box.


**SAVE THESE INSTRUCTIONS!**




### Install the Canopy

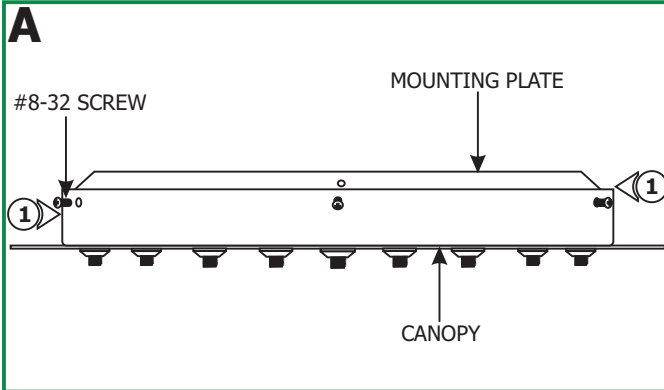


- 1:** Loosen and remove the six #8-32 screws around the canopy to remove the mounting plate.

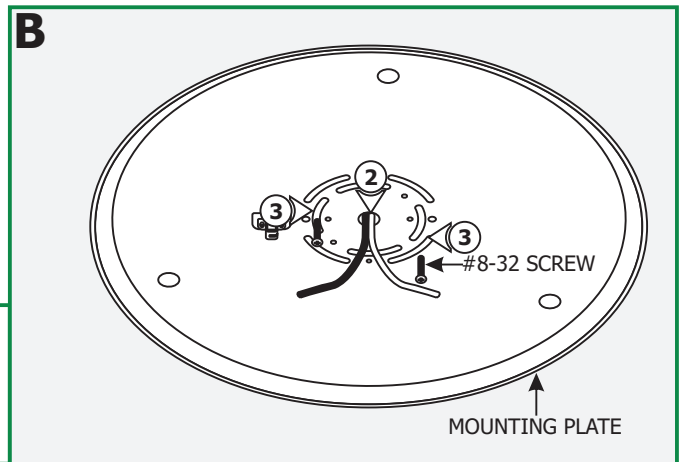


- 2:** Feed the power wires through mounting plate center hole.
- 3:** Align the mounting plate slots with the electrical box holes and secure it to the electrical box holes with the provided two #8-32 screws.

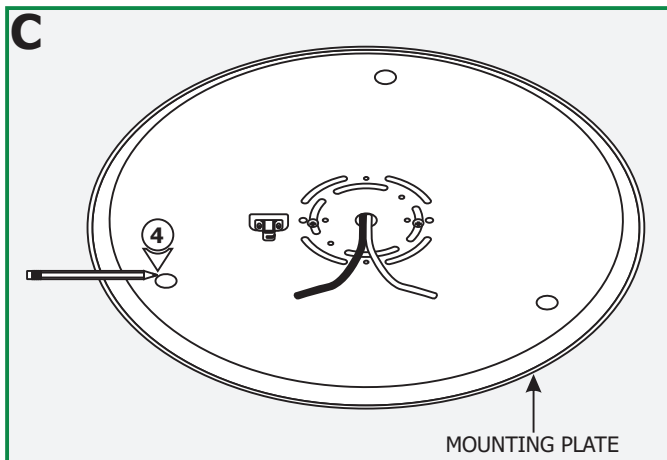

- 4:** Mark the three mounting plate holes on the ceiling.

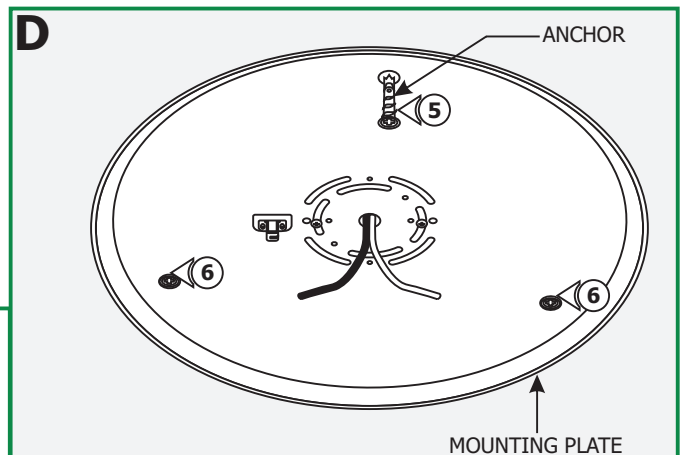


- 5:** Tap the anchors through the mounting plate holes onto the marked point up to the threaded portion with a hammer.
- 6:** Screw in the threaded portion of the anchors with a Phillips screwdriver.

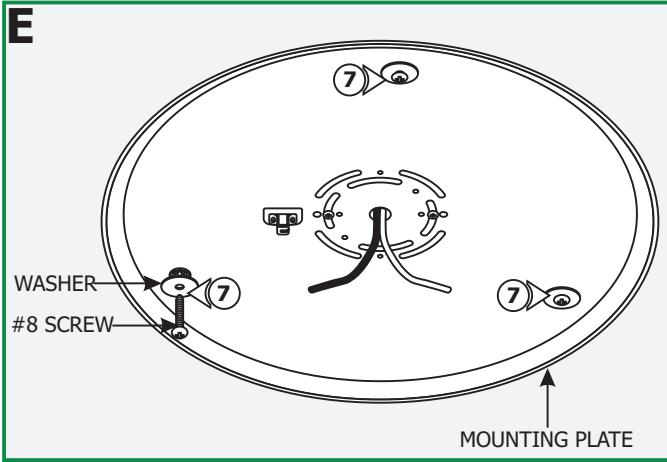

**7:** Secure the mounting plate to the anchors with the provided #8 screws and washers.


**8:** Insert one end of the safety cable into the safety bracket of mounting plate and the other end into the canopy safety bracket.

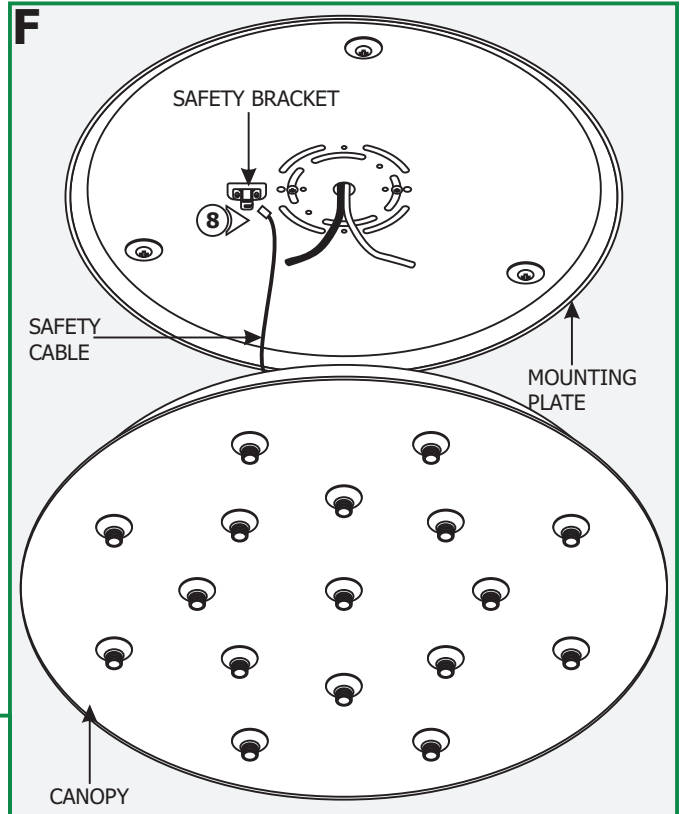


**9:** Make sure that the mounting plate is grounded in accordance with local electrical codes.

**10:** Connect the white fixture wire to the neutral power wire with a wire nut.

**11:** Connect the black fixture wire to the hot power wire with a wire nut.

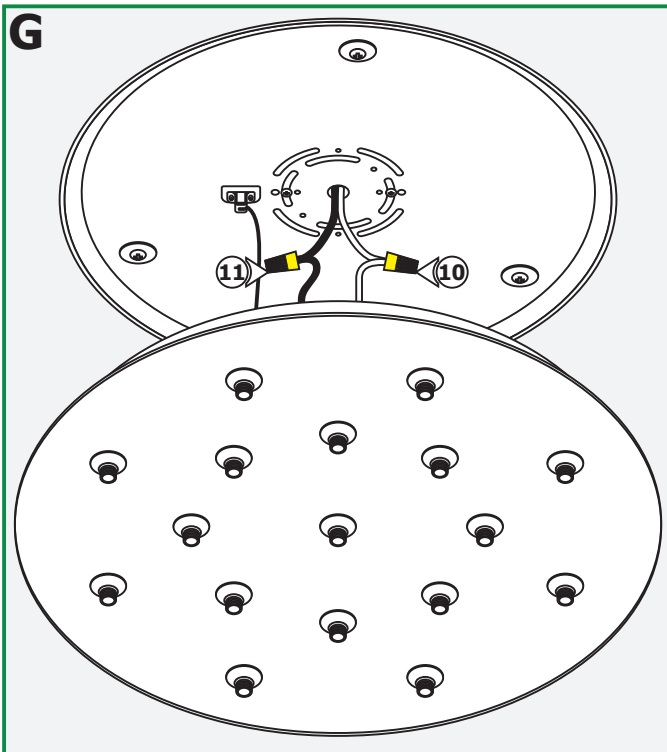

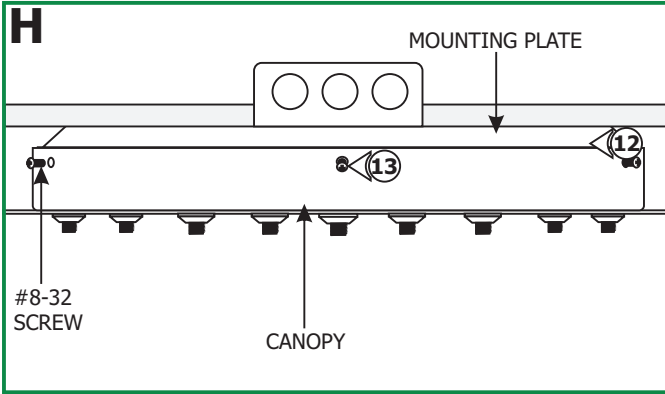

**12:** Place all wires and wire nut connections inside the canopy.

**13:** Place the canopy onto the mounting plate and tighten the six #8-32 screws.

**CAUTION: Maximum** load of each port is **20** watt. The 17 port Fast Jack canopy is intended to be used with the Bubble Ball fixtures. If using any other Fast Jack fixtures, lamp them to **MAX 20** watt.

**14:** Use fingers to tighten each Fast Jack fixture connector into one Fast Jack canopy port.

