Edge LIGHTING

1718 W. Fullerton Ave
Chicago, IL 60614
Tel: 773-770-1195
Fax: 773-935-5613
www.edgelighting.com
info@edgelighting.com
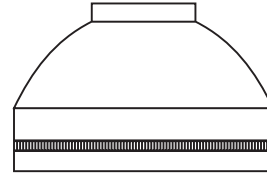
S6-_

904-S6-03

ETL LISTED
INTERTEK
C US

Installation Instructions for **Solid Back Shade MR16**
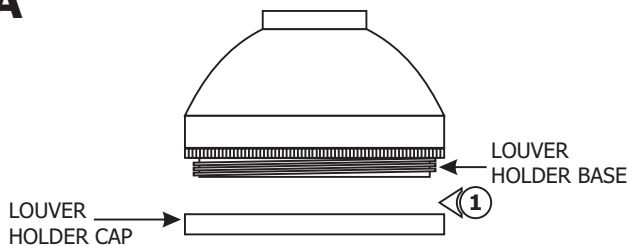

IMPORTANT INFORMATION

- This product is ETL listed for indoor dry locations.
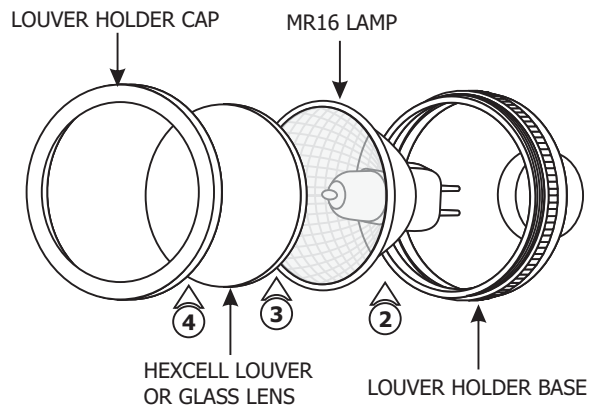
SAVE THESE INSTRUCTIONS!

Install the Accessory Shade in Chopper type Fixtures

A

LOUVER HOLDER BASE

LOUVER HOLDER CAP

①

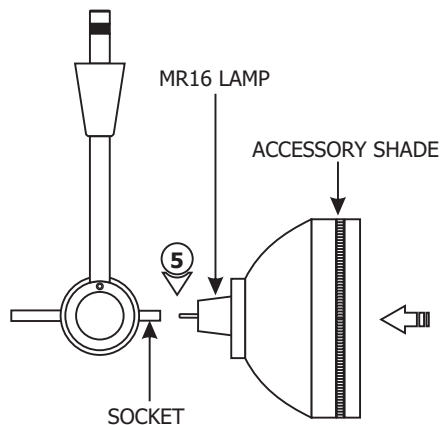**1:** Unscrew and remove the louver holder cap from the louver holder base.

2: Place the MR16 lamp into the louver holder base.

3: Place a hexcell louver (Optional) or a glass lens (Optional) or a combination of a hexcell louver and a glass lens on the front of MR16 lamp.
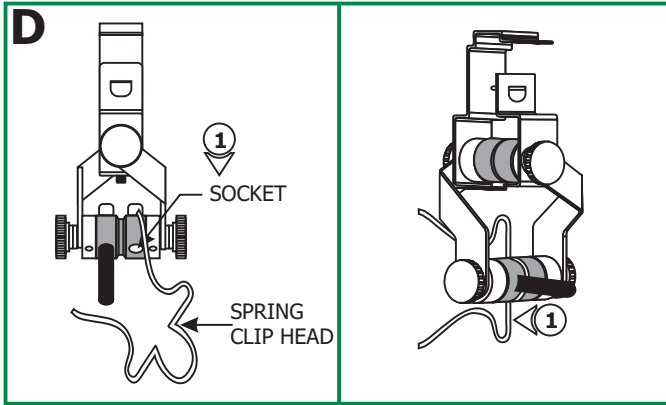
4: Replace and tighten the louver holder cap to the louver holder base.
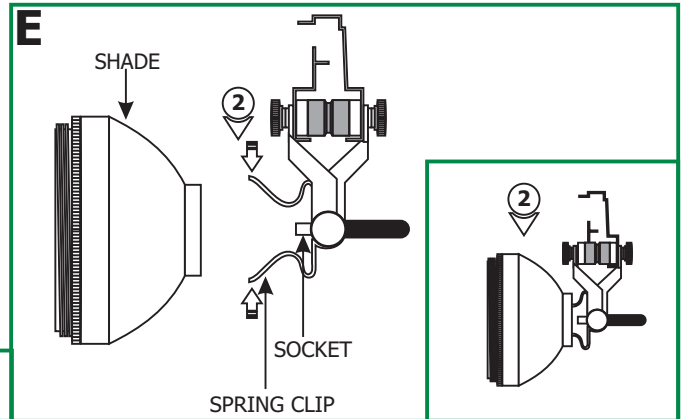
B

LOUVER HOLDER CAP   MR16 LAMP

④   ③   ②

HEXCELL LOUVER OR GLASS LENS   LOUVER HOLDER BASE

C

MR16 LAMP

ACCESSORY SHADE

⑤

SOCKET

5: Push the lamp pins completely into the socket holes.

1

Install the Accessory shade in Vespa type MR16 Sockets

D

SOCKET

SPRING
CLIP HEAD

1: Push the spring clip completely onto the center of the socket groove until it snaps into place.

E

SHADE

SOCKET

SPRING CLIP

2: Squeeze the spring clip ends while inserting it into the shade.

F

HEXCELL LOUVER
AND/OR GLASS LENS

ACCESSORY SHADE

CAP
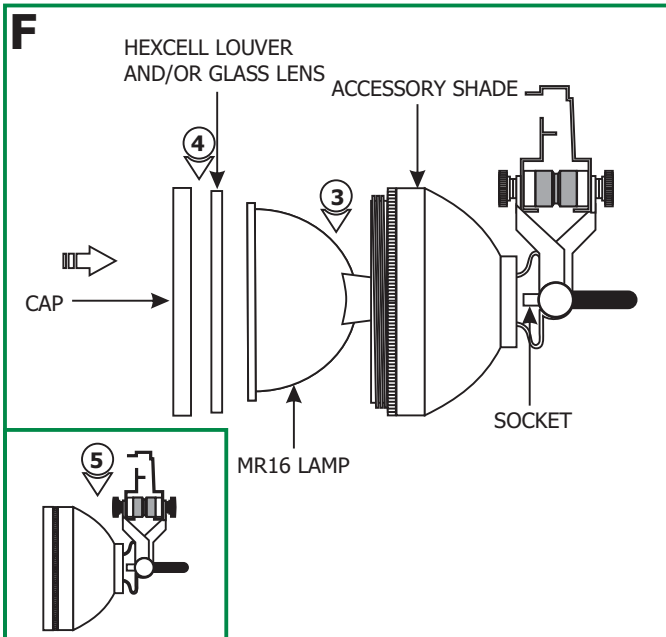
SOCKET

MR16 LAMP

3: Push the lamp pins completely into the socket holes.

4: Place a hexcell louver (Optional) or a glass lens (Optional) or a combination of a hexcell louver and a glass lens on the front of MR16 lamp.

5: Replace and tighten the louver holder cap to the louver holder base.