GENERATION LIGHTING

VERRA REGRESSED 4" ROUND

V4RR-3000K-WT; V4RR-5CCT-WT   **www.visualcomfort.com**

General Product Information

ETL LISTED c us Intertek	SAVE THESE INSTRUCTIONS!	STANDARD INSTALLATION	INDOOR
WET LOCATION SAFE	NEC COMPLIANT JUNCTION BOX	INTEGRATED LED NO BULBS REQUIRED	INSTALL IN ADHERANCE WITH LOCAL ELECTRICAL CODES
TITLE 24 COMPLIANT	PLEASE SEE visualcomfort.com FOR PRODUCT SPECS	CLEAN WITH SOFT, DRY CLOTH ONLY. NO HARSH CHEMICALS!	BEST PRACTICE: HANDLE FIXTURE WITH GLOVES

Product Warranty   FCC Statement

Suggested/Required Tools

ELECTRIC DRILL	PHILLIPS-HEAD SCREWDRIVER	PENCIL/MARKER	WIRE CUTTER
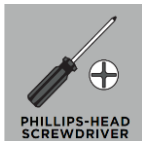
Safety Information
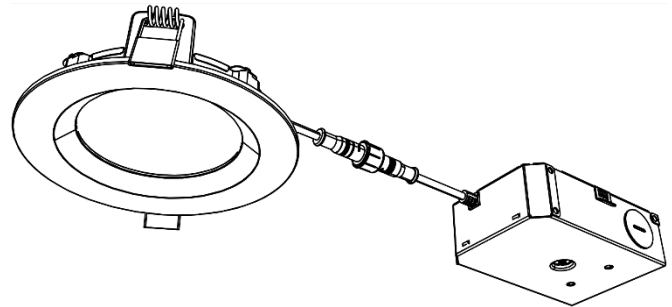
CAUTION-RISK OF FIRE

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.
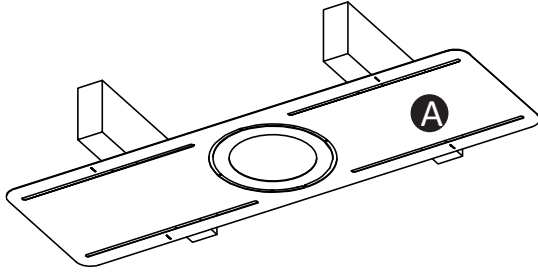
USE MINIMUM 90°C SUPPLY CONDUCTORS.

Turn off electrical current at the source before working with any lighting fixture or portable lamp.

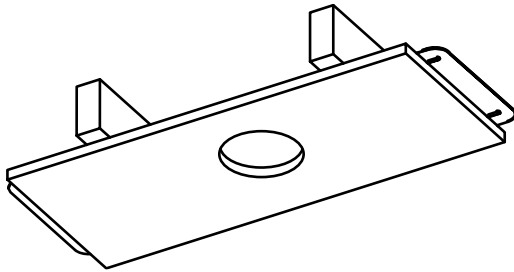Install and use this product in adherence with local electrical codes and regulations.

1. **Optional:** Install new construction pan (A) to joists. The pan is not required but assists in the accurate placement of the downlight.


2. Install the ceiling and use the provided cutout template (4-3/16") to cut a hole in the ceiling.


3. For 3000K version, skip this step. For 5CCT version, ensure color temperature switch is set to the desired color temperature. Factory default is 3000K.
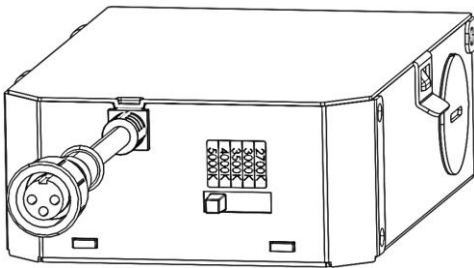
4. Safety first! Locate the circuit breaker and switch it off to cut off the power supply to the relevant circuits to ensure there's no electricity running through the wiring.

5. In accordance with local electrical codes, connect the fixture ground wire (bare copper or silver wire) to suitable ground. This may be a green ground screw on the mounting plate or a house wire (green/bare copper wire without insulation).
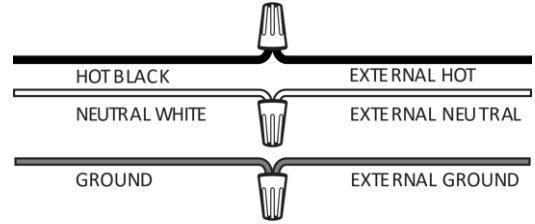
6. Twist the bare ends of the following pairs of wires together using a wire nut to secure a connection:

   a. Hot fixture wire (black) and hot power line wire
   b. Neutral fixture wire (white) and neutral power line wire

7. Carefully tuck all wires into the driver housing.

8. Place the driver housing above the ceiling and secure it through the screw holes.
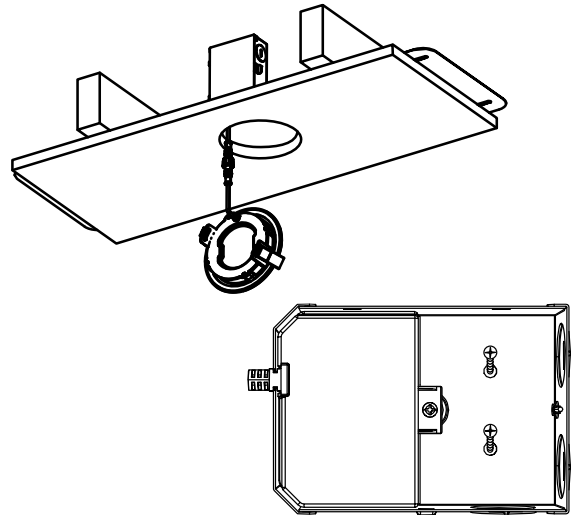
9. Insert the fixture into the ceiling cutout and push up until the fixture is flush and the spring clips snap into place.