Moresby Table Lamp

DJT1071 1.0

VISUAL COMFORT & CO.

STUDIO COLLECTION

GENERAL PRODUCT INFORMATION:


This product is safety listed for dry locations only.

This instruction shows a typical installation.

IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.


SAVE THESE INSTRUCTIONS!

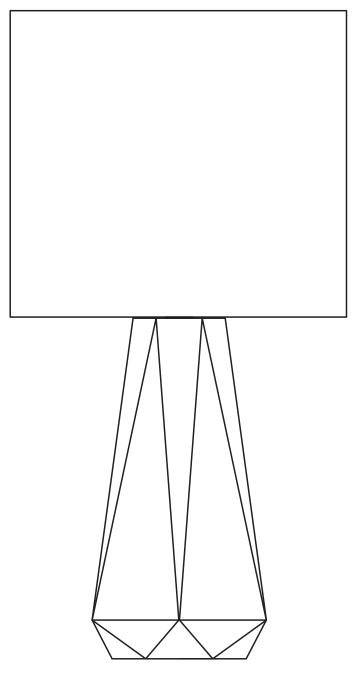

VISUAL COMFORT & CO.

7400 Linder Ave., Skokie, IL 60077 T 847.410.4400 | F 847.410.4500 www.visualcomfort.com

Install the Fixture

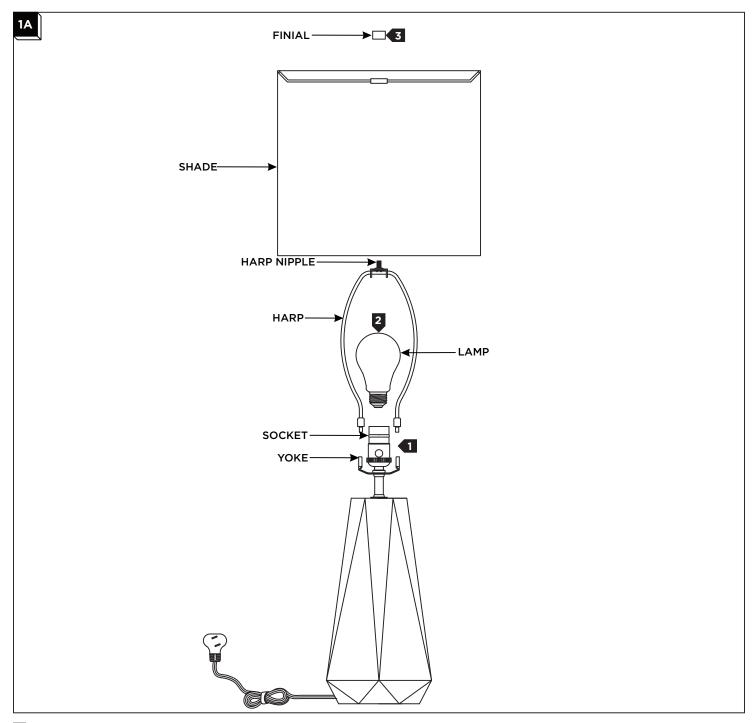

- 1 Install the harp by inserting it completely into the yoke.
- 2 Screw the lamp into the socket. Refer to the label on the lamp socket for Max Wattage Information.
- 3 Place the shade onto the harp nipple and secure it in place by screwing the finial onto the harp nipple.