


## Installation Instructions for Monorail 2 Circuit Adjustable 4" Round Single Power Feed Canopy


### IMPORTANT INFORMATION

- This product is ETL listed for indoor dry locations.
- This product can be installed to a 4" electrical box with round plaster ring, or to an octagon electrical box.
- Minimum electrical box volume must be 6 cubic inches (98 cubic centimeters).
- This product should be installed by a qualified electrician.

**SAVE THESE INSTRUCTIONS!**

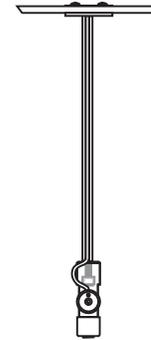

### Install the Canopy

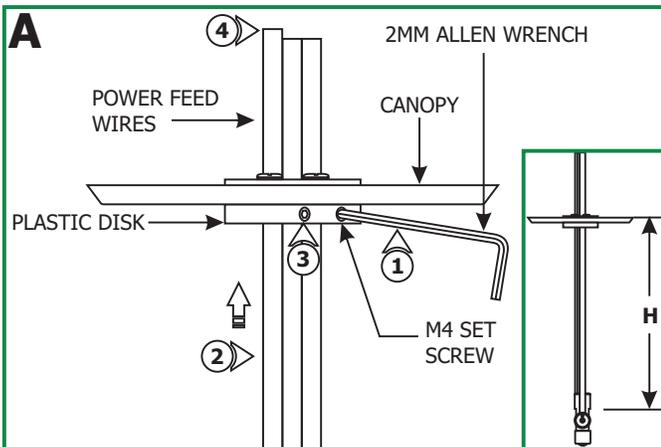



- 1: Loosen the two M4 set screws on the plastic disk with the 2mm Allen wrench provided.
- 2: Adjust the power feed wires to the desired height (from top of the canopy to top of the Monorail - Illustrated as "H" in diagram A) by pushing the power feed wires into the canopy.
- 3: Tighten the two M4 set screws firmly with the 2mm Allen wrench.
- 4: Leave at least 6" of the power feed wires behind the canopy. Trim off the excess power feed wires with a sharp cutter. Strip 1/4" of insulation off of the power feed wires.

**NOTE:** Use the universal round crossbar (provided) if the electrical box holes are not spaced 2-3/4" apart.

**NOTE:** The low voltage wires should be present in the electrical box. Refer to the instructions provided with the remote transformer to install the transformer and the low voltage wires before proceeding with the steps below.

- 5: Turn the power to electrical box off.
- 6: Connect the top contact wire to the low voltage wire marked "HOT 1" with a wire nut.
- 7: Connect the middle contact wire (coming out of the cylindrical connector) to the low voltage wire marked "HOT 2" with a wire nut.
- 8: Connect the remaining side wire to the low voltage wire marked "COM" with a wire nut.

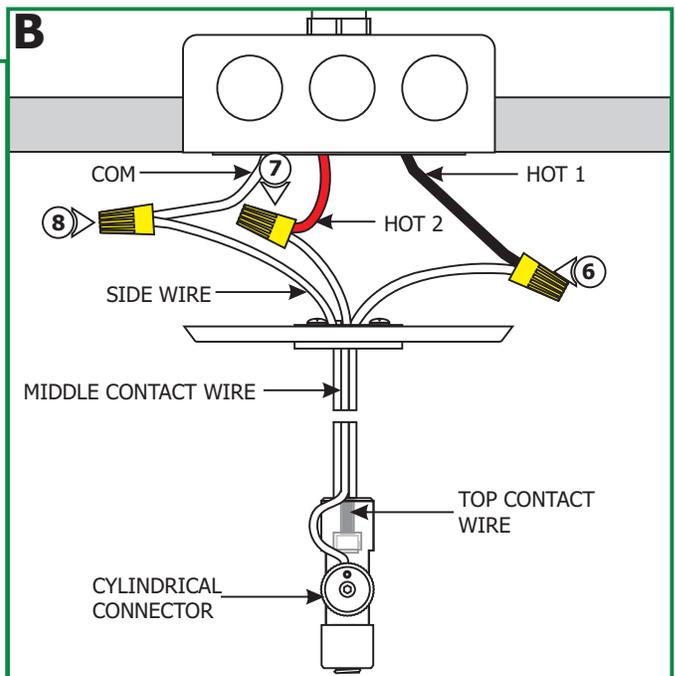

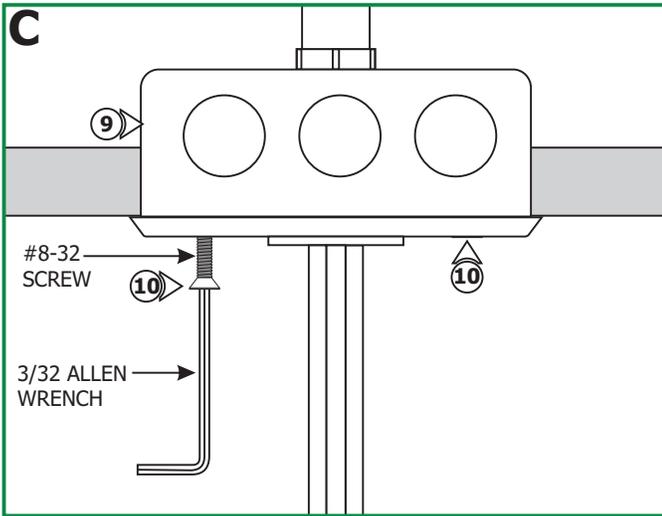

**9:** Place all wires and wire nut connections inside the electrical box.


**10:** Secure the power feed canopy to the electrical box by tightening the two provided #8-32 screws with the 3/32 Allen wrench.

## Install the Monorail 2 Circuit to the Power Feed Canopy

**1:** Unscrew the cap from power housing.


**2:** Slightly loosen the 3/8-24 set screw on the cap with the 3/16 Allen wrench provided, **DO NOT REMOVE THEM.**

**3:** Slightly loosen the knurled nut on the power housing so that the middle contact moves back and clears the power housing opening.

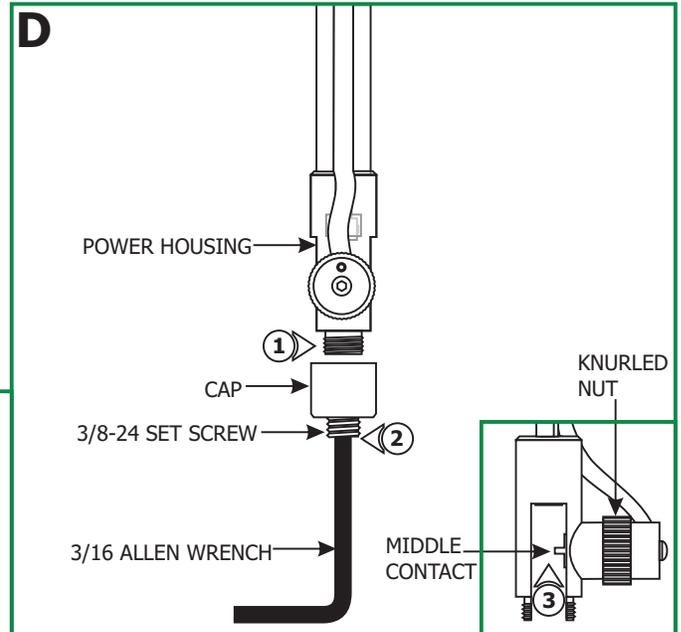

**4:** Place a section of Monorail 2 Circuit into the power housing. Make sure that the Monorail 2 Circuit is supported by the standoffs. Refer to the instructions provided with the standoffs.

**5:** Tighten the cap to the power housing. **Make sure the cap is not cross threaded.**

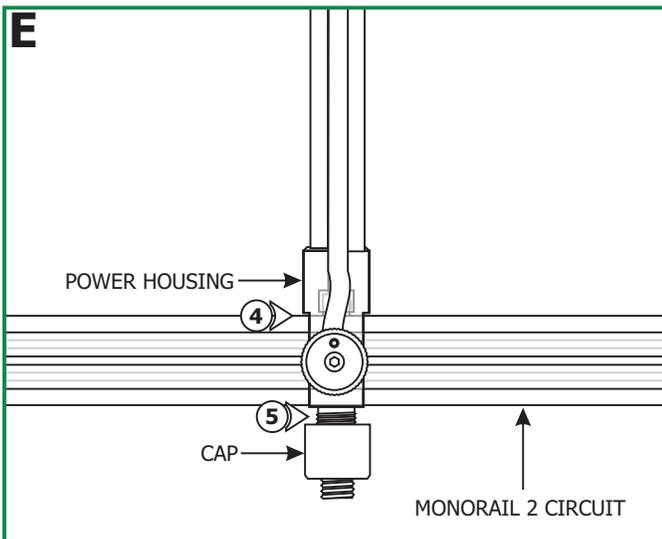

**6:** Tighten the 3/8-24 set screw on the cap firmly with the 3/16 Allen wrench provided for proper power connection.

**7:** Tighten the knurled nut firmly for proper power connection.

