Lancaster

EW461102

TECHNICAL SUPPORT 1.855.855.8926 technicalsupport@aloralighting.com

A WARNINGS AND CAUTIONS

 \cdot Make sure $\ensuremath{\textbf{POWER}}$ is $\ensuremath{\textbf{COMPLETELY OFF}}$ at the fuse box

Please Note:

- \cdot Have your fixture installed by a qualified licensed electrician
 - in a clear area

· 120∨ input

- \cdot Prepare everything in a clear area
- \cdot Wear gloves at all times during this installation
- Read instructions carefully before you start assembly
- \cdot Keep this installation sheet for future reference

NOTICE

- The important safeguards and instructions outlined in this sheet cannot cover all possible conditions and situations that may occur. It must be understood that caution and certain care factors must be followed. These instructions are provided for your safety and we highly recommend that a licensed, trained electrician install this unit.
- This fixture is designed to be mounted on a correctly installed standard round or octagon box OR through a wiring box with a plaster frame. The box must be securely mounted to the structure of the building. The crossbar and hardware supplied should be used, directly mounting the fixture to the outlet box may make it impossible to correctly align the fixture.

ASSEMBLY INSTRUCTIONS

Step 1

Remove fixture from its original package.

Step 2

Separate mounting plate (1c) from canopy (2a) by removing washers (2c) and canopy screws (2b).

Step 3

Attach mounting plate (1c) to electrical junction box (1a) using junction box screws provided (1e) in hardware package.

Step 4

Make proper electrical connections (**black** to **hot** "L", **white** to **neutral** "N", **ground** to "**GND**") with wire nuts (1b) provided in hardware package.

Step 5

Attach canopy (2a) to mounting plate (1c) with washers (2c) and canopy screws (2b).


Step 6

Install recommended lamp (3b) (not provided) (referred on the socket label for maximum wattage and type) to fixture socket (3a) and thread on glass shade (3c).

Step 7

To prevent moisture from entering the electrical junction box (1a) and causing a short, seal around the top and side perimeter between the fixture and the wall surface with weather resistant caulking (Illustration 1). The space at the bottom should be left un-caulked to prevent moisture build up.

You are now ready to enjoy your fixture.

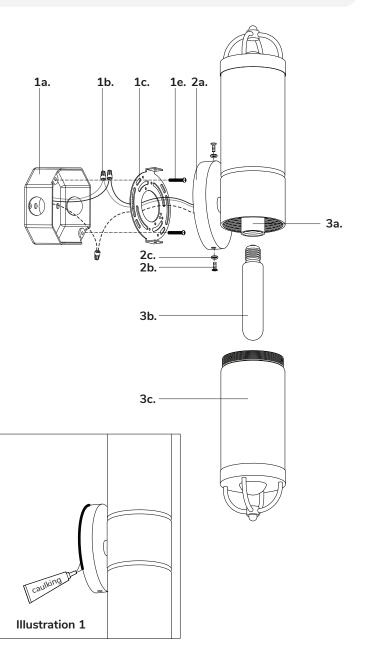



P. 1.855.855.8926
CANADA: 19054 28th Ave., - Surrey, BC V3Z 6M3
USA: 3035 E. Lone Mountain Rd. - Las Vegas, NV 89081
www.aloramood.com
20230109