Exterior Wall Lamp

TECHNICAL SUPPORT 1.855.855.8926 technicalsupport@aloralighting.com

MARNINGS AND CAUTIONS

Make sure POWER is COMPLETELY OFF at the fuse box

· Have your fixture installed by a qualified licensed electrician

- Prepare everything in a clear area
- Wear gloves at all times during this installation
- · Read instructions carefully before you start assembly
- Keep this installation sheet for future reference

NOTICE

- The important safeguards and instructions outlined in this sheet cannot cover all possible conditions and situations that may occur. It must be understood that caution and certain care factors must be followed. These instructions are provided for your safety and we highly recommend that a licensed, trained electrician install this unit.
- This fixture is designed to be mounted on a correctly installed standard round or octagon box OR through a wiring box with a plaster frame. The box must be securely mounted to the structure of the building. The crossbar and hardware supplied should be used, directly mounting the fixture to the outlet box may make it impossible to correctly align the fixture.

ASSEMBLY INSTRUCTIONS

Step 1

Remove fixture from its original package.

Step 2

Separate fixture (3a) from backplate (2a) by removing fixture screws (3b). Separate mounting plate (1c) from backplate (2a) by removing decorative nuts (2c).

Step 3

Align mounting plate screws (1d) to desired orientation, and then attach mounting plate (1c) to electrical junction box (1a) using junction box screws provided (1e) in hardware package.

Step 4

Make proper electrical connections (black to hot "L", white to neutral "N", ground to "GND") with wire nuts (1b) provided in hardware package.

Step 5

Align and insert mounting plate screws (1d) through holes on backplate (2a), secure with decorative nuts (2c).

Step 6


Install the recommended lamp (4a) (not provided) (referred on the socket label for maximum wattage and type) to fixture socket. Attach fixture (3a) to backplate (2a) with fixture screws (3b).


Step 7

To prevent moisture from entering the electrical junction box (1a) and causing a short, seal around the top and side perimeter between the fixture and the wall surface with weather resistant caulking (Illustration 1). The space at the bottom should be left un-caulked to prevent moisture build up.

You are now ready to enjoy your fixture.



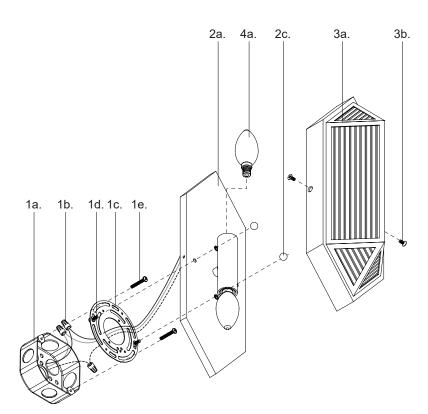

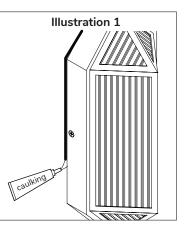

P: 1.855.855.8926 CANADA: 19054 28th Avenue Surrey - BC V3Z 6M3 USA: 3035 E. Lone Mountain Rd - Las Vegas, NV, 89081 www.aloralighting.com 20230619

Please Note:

• 120V input