INSTALLATION INSTRUCTION

513 - LED Wall Sconce

WS-51320/WS-51327



CAUTION: To prevent electrical shock, ensure electricity has been turned off at the circuit breaker before beginning.

- Read all instructions before installing.
- System is intended for installation by a licensed electrician in accordance with the National Electrical Code (NEC) and local regulations.
- When handling the fixture, do not apply pressure to the LEDs. Hold the fixture by the base only.
- Retain installation instructions for future maintenance reference.

WARNING: All parts must be used as indicated in these instructions. This product is designed for use only with the supplied parts and/or accessories designated for use by dweLED. Substitution of parts or accessories not designated for use with this product by dweLED could result in personal injury or property damage, and will void the warranty. Contact an authorized dealer or the manufacturer if any parts are damaged or missing.


MAINTENANCE NOTE: Coastal conditions may cause mineral and residue build-up on the fixture. We recommend that customers in coastal areas clean all external surfaces of the fixture once every two weeks with a wet cloth.

MISE EN GARDE: Pour éviter tout choc électrique, assurez-vous que le disjoncteur soit mis hors tension avant de commencer.

- Lisez toutes les instructions avant l'installation.
- Le système doit être installé par un électricien licensié conformément au code national de l'électricité (NEC), et également aux règlements locaux.
- Lors de la manipulation du luminaire, n'appuyez pas sur les LED. Tenez-le uniquement par la base.

ATTENTION: Toutes les pièces doivent être utilisées comme indiqué dans ces instructions. Ce produit est conçu pour être utilisé seulement avec les pièces et/ou accessoires fournis pour être utilisés avec les produits dweLED. Remplacer des pièces ou accessoires non conçus pour ce produit dweLED pourrait causer des dommages corporels ou matériels et pourrait également causer l'annulation de la garantie. Veuillez contacter un revendeur autorisé ou le fabricant si des pièces manquent ou sont endommagées.

NOTE D'ENTRETIEN: Les conditions côtières peut causer une accumulation de minéraux et de résidue sur le luminaire. Nous recommendons aux clients qui resident dans les zones côtières de nettoyer toutes les surfaces externes du luminaire une fois toutes les deux semaines avec un chiffon humide.

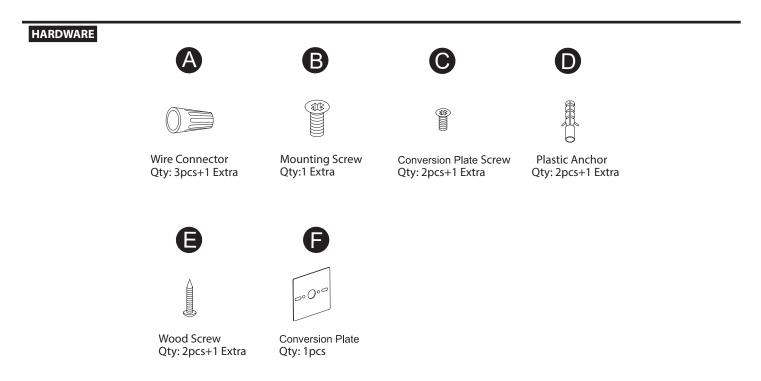

dweLED.com Phone (800) 526.2588 Fax (800) 526.2585 **Headquarters/Eastern Distribution Center** 44 Harbor Park Drive Port Washington, NY 11050 Central Distribution Center 1600 Distribution Ct Lithia Springs, GA 30122 Western Distribution Center 1750 Archibald Avenue Ontario, CA 91760



INSTALLATION INSTRUCTION

513 -LED Wall Sconce

WS-51320/WS-51327



Fig.1 Wall Hole A Wire Connector **B**Mounting Screw Plastic Anchor Mounting Back Plate Wood Screw Fixture Wire Connector Fig.2 Switch Box **B**Mounting Screw Plastic Anchor Mounting Back Plate **●** Wood Screw Junction Box Screw Fixture Mounting Back Plate Conversion Plate Screw Conversion Plate Fig.3 4" Junction Box **B**Mounting Screw **A** Wire Connector Plastic Anchor Mounting Back Plate **■** Wood Screw Junction Box Screw Fixture

dweLED.com Phone (800) 526.2588

(800) 526.2585

Headquarters/Eastern Distribution Center 44 Harbor Park Drive Port Washington, NY 11050 **Central Distribution Center** 1600 Distribution Ct Lithia Springs, GA 30122 **Western Distribution Center** 1750 Archibald Avenue Ontario, CA 91760



INSTALLATION INSTRUCTION

513 -LED Wall Sconce

WS-51320/WS-51327



Fig.4 Wiring **Mounting Back Plate House Wires Fixture Wires** WS-51320: 11 5/8" Black or Black WS-51327: 16" Smooth (Hot) WS-51320: 9 5/8" WS-51327: 14" **Fixture Wires House Wires** White or White 3 1/2" Ribbed (Neutral) 2 3/4"-**Fixture Wires House Wires** Green or Bare Copper Bare wire 2 3/8"

PREPARATION

- 1. Shut off the power at the circuit breaker and remove existing fixture, including the crossbar.
- 2. Carefully unpack your new fixture and lay out all the parts on a clear area. Be careful not to lose any small parts necessary for installation.

INSTALLATION

MOUNT WITHOUT JUNCTION BOX (Fig. 1)

(Ground)

- 1. Loosen the mounting screw (B) from the fixture, and remove the mounting back plate.
- 2. Drill holes in the wall aligned with the key holes located on the mounting back plate. Insert the plastic anchor (D).
- 3. Drill a small access hole in the wall behind the fixture and pull the house wires through the wall.
- 4. Fasten the mounting back plate to the wall using the wood screws (E) provided.

(Ground)

- 5. Connect the fixture's input wires to junction box wires as shown (Fig. 4). Make sure that all wire connectors (A) are secure. If your outlet box has a green or bare copper ground wire, connect the fixture's ground wire to it. Otherwise, connect the fixture's ground wire directly to the back plate using the green screw provided. After wires are connected, tuck them carefully inside the wall hole.
- 6. Secure the fixture to the mounting back plate using the mounting screw (B).

MOUNT ON 2"X4" SWITCH BOX (Fig. 2)

- 1. Loosen the mounting screw (B) from the fixture, and remove the mounting back plate.
- 2. Drill holes in the wall aligned with the key holes located on the mounting back plate. Insert the plastic anchor (D).
- 3. Fasten the mounting back plate to the wall using the wood screws (E) provided.
- 4. Secure the mounting back plate to the junction box using standard junction box screws that comes with the junction box.
 - Note: (i)using any other non-original-manufacturer provided junction box screw may result in safety issue.
 - (ii) The side of the mounting plate marked "GND" must face out.
- 5. Connect the fixture's input wires to junction box wires as shown (Fig. 4). Make sure that all wire connectors (A) are secure. If your outlet box has a green or bare copper ground wire, connect the fixture's ground wire to it. Otherwise, connect the fixture's ground wire directly to the back plate using the green screw provided. After wires are connected, tuck them carefully inside the junction box.
- 6. Secure the fixture to the mounting back plate using the mounting screw (B).

MOUNT ON 4"X4" JUNCTION BOX (Fig. 3)

- 1. Loosen the mounting screw (B) from the fixture, and remove the mounting back plate.
- 2. Secure the conversion plate (F) to the mounting back plate by fastening the conversion plate screw (C) to the back of the conversion plate.
- 3. Drill holes in the wall aligned with the key holes located on the mounting back plate. Insert the plastic anchor (D).
- 4. Fasten the mounting back plate to the wall using the wood screws (E) provided.
- 5. Secure the mounting back plate to the junction box using standard junction box screws that comes with the junction box.

 Note: (i)using any other non-original-manufacturer provided junction box screw may result in safety issue.
 - (ii) The side of the mounting plate marked "GND" must face out.
- 6. Connect the fixture's input wires to junction box wires as shown (Fig. 4). Make sure that all wire connectors (A) are secure. If your outlet box has a green or bare copper ground wire, connect the fixture's ground wire to it. Otherwise, connect the fixture's ground wire directly to the back plate using the green screw provided. After wires are connected, tuck them carefully inside the junction box.
- 7. Secure the fixture to the mounting back plate using the mounting screw (B).

Western Distribution Center
1750 Archibald Avenue

